



## UD Function List V5.96

## Tips and Instructions:

- \* This feature is new.
- ✓ This feature is supported.
- ✗ This feature is not supported.
- ※ This feature is partially supported.

manufacture	type	years	vehicle / model	system/electronic control	diagnosis interface	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Actuation Test	Special Functions
UD	Vehicle	2004 and earlier	UD 1200 FD46TA	Engine(ECU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 1200 FD46TA	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 1400 FD46TA	Engine(ECU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 1400 FD46TA	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 1800CS FD46TA	Engine(ECU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 1800CS FD46TA	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 1800 FD46TA	Engine(ECU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 1800 FD46TA	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 2000 FD46TA	Engine(ECU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 2000 FD46TA	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 2300 FD46TA	Engine(ECU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 2300 FD46TA	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 2600 FD46TA	Engine(ECU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 2600 FD46TA	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 3300 FD46TA	Engine(ECU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	UD 3300 FD46TA	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2004 and earlier	P11C/J08E Series	Engine(ECU)	OBD II -16	✓	✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 1300 J05D-TA	Engine(ECU)	OBD II -16	✓	✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 1300 J06D-TA	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 1400 J05D-TA	Engine(ECU)	OBD II -16	✓	✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 1400 J05D-TA	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 1800CS J05D-TA	Engine(ECU)	OBD II -16	✓	✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 1800CS J05D-TA	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 1800 J08E	Engine(ECU)	OBD II -16	✓	✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 1800 J08E	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 2000 J08E	Engine(ECU)	OBD II -16	✓	✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 2000 J08E	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 2300 J08E	Engine(ECU)	OBD II -16	✓	✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 2300 J08E	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 2600 J08E	Engine(ECU)	OBD II -16	✓	✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 2600 J08E	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 3300 J08E	Engine(ECU)	OBD II -16	✓	✓	✓	✓	✓	
UD	Vehicle	2005 and Later	UD 3300 J08E	ABS(BCU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2005 and Later	G105R/G107R Series	Engine(ECU)	OBD II -16		✓	✓	✓	✓	
UD	Vehicle	2005 and Later	P11C/J08E Series	Engine(ECU)	OBD II -16	✓	✓	✓	✓	✓	

UD	Vehicle	2005 and Later		Engine(EURO4/EURO5)	OBD II -16	√	√	√	√	√	1.Freeze Frame 2.Running Accel Sensor Adjust 3.PTO Accel Sensor Adjust 4.Each Relay Check 5.Fuel injection stop test 6.Read Injector 7.Write Injector
UD	System	UD2004 and Earlier		Engine	OBD II -16	√	√	√	√	√	1.Adjust the accel sensor to 0% 2.Adjust the accel sensor to 100% 3.Adjust the PTO accel sensor to 0% 4.Adjust the PTO accel sensor to 100%
UD	System	UD2004 and Earlier		MD9M	OBD II -16	√	√	√	√	√	
UD	System	UD2004 and Earlier		ABS/ASR	OBD II -16	√	√	√	√	√	
UD	System	UD2004 and Earlier		SRS Airbag	OBD II -16	√	√	√			
UD	System	UD2004 and Earlier		ESCOT	OBD II -16	√	√	√	√	√	1.Shift Lever Sensor Check 2.Clutch Pedal Switch Check 1 3.Clutch Pedal Switch Check 2 4.Clutch Stroke Sensor Check 1
UD	System	UD2004 and Earlier		AT	OBD II -16	√	√	√	√		
UD	System	UD2004 and Earlier		Smoother	OBD II -16	√	√	√	√		
UD	System	UD2004 and Earlier		BCM	OBD II -16	√	√	√	√		1.Hour Meter Information Clear 2.Fuel Data Display Clear
UD	System	UD2004 and Earlier		Immobiliser	OBD II -16	√	√	√	√		
UD	System	UD2004 and Earlier		BCM(MIMAMORI)	OBD II -16	√	√	√	√		1.MIMAMORI All Data Clear
UD	System	UD2004 and Earlier		VIM(Vehicle Interface Module)	OBD II -16	√				√	1.Engine Start Number/Write(When replacing ECU) 2.Engine Start Number/Write(When replacing Status)
UD	System			Nissan UD engine s	OBD II -16	√	√	√	√	√	1.Read Injector data 2.Write Injector data
UD	System			FE6 engine	OBD II -16	√	√	√	√		
UD	System			RG8 engine	OBD II -16	√	√	√	√		
UD	System			RH8 engine	OBD II -16	√	√	√	√		
UD	System			RF8 engine	OBD II -16	√	√	√	√		
UD	System			GE13(KWP) engine	OBD II -16	√	√	√	√		
UD	System			GE13T(CAN) engine	OBD II -16	√	√	√	√		
UD	System			MD92(KWP) engine	OBD II -16	√	√	√	√		
UD	System			MD92T(CAN) engine	OBD II -16	√	√	√	√		1. Fuel injection stop test 2. Run acceleration sensor adjustment 3.PTO acceleration sensor adjustment 4. Each relay check 5. EGR inspection 6. Suction volume check 7. Fuel inspection 8. Electric fan clutch 9. Read the injector code
UD	System			UDS	OBD II -16	√	√	√	√	√	1.Commissioning 2.Dosing Valve Check
UD	System			Gas treatment	OBD II -16	√	√	√	√	√	