

Electronic water pump activation Function List

Software Version:16.03

Automaker	Type1	Type2	Type3
Audi	Type 1 (KWP)		
BMW	Software method	1 Series	E81/E82/E87/E88
BMW	Software method	1 Series	F20/F21
BMW	Software method	1 Series	F52
BMW	Software method	2 Series	F22/F23
BMW	Software method	2 Series	F45/F46
BMW	Software method	2 Series	F87
BMW	Software method	3 Series	F30/F31/F34/F35
BMW	Software method	3 Series	F80
BMW	Software method	4 Series	F32/F33/F36
BMW	Software method	4 Series	F82/F83
BMW	Software method	5 Series	E60/E61
BMW	Software method	5 Series	F07
BMW	Software method	5 Series	F10/F11/F18
BMW	Software method	5 Series	F90
BMW	Software method	5 Series	G30/G31
BMW	Software method	5 Series	G38
BMW	Software method	6 Series	E63/E64
BMW	Software method	6 Series	F06/F12/F13
BMW	Software method	6 Series	G32
BMW	Software method	7 Series	F01/F02/F03/F04
BMW	Software method	7 Series	G11/G12
BMW	Software method	X1	E84
BMW	Software method	X1	F48/F49
BMW	Software method	X2	F39
BMW	Software method	X3	F25

BMW	Software method	X3	G01
BMW	Software method	X4	F26
BMW	Software method	X5	E70
BMW	Software method	X5	F15/F85
BMW	Software method	X6	E71
BMW	Software method	X6	E72
BMW	Software method	X6	F16/F86
BMW	Software method	Z Series	Z4 E85/E86
BMW	Software method	Z Series	Z4 E89
BMW	Manual method		
MINI			

XTOOL