

Immobiliser Function List

Software Version: 26.65

Automaker	Erae	Model/Protocol	System
FIAT		Palio	Read security code
FIAT		Siena	Read security code
FIAT		Ottimo	Read security code
FIAT	China	500	Immobiliser
FIAT	China	500X	Immobiliser
FIAT	China	Daily(2000-)	Immobiliser
FIAT	China	Doblo(00-06)	Immobiliser
FIAT	China	Idea(03-09)	Immobiliser
FIAT	China	Freemont	Smart Key System(PEPS)
FIAT	China	Ottimo	
FIAT	China	Palio(02-)	Immobiliser
FIAT	China	Panda(02-)	Immobiliser

FIAT	China	Siena(02-07)	Immobiliser
FIAT	Africa	Siena(02-08)	Immobiliser
FIAT	Aisia	500(07-)	Immobiliser
FIAT	Aisia	Fiorino(08-)	Immobiliser
FIAT	Aisia	Linea	Immobiliser
FIAT	Aisia	Punto	Immobiliser
FIAT	Aisia	Punto grande(06-11)	Immobiliser
FIAT	Aisia	Viaggio(13-)	Immobiliser
FIAT	Europe	500(07-)	Immobiliser
FIAT	Europe	500L(12-)	Immobiliser
FIAT	Europe	Albea(02-)	Immobiliser
FIAT	Europe	Bravo	Immobiliser
FIAT	Europe	Croma(05-07)	Immobiliser

FIAT	Europe	Daily(00-)	Immobiliser
FIAT	Europe	Doblo(05-09)	Immobiliser
FIAT	Europe	Doblo(09-)	Immobiliser
FIAT	Europe	Ducato(06-12)	Immobiliser
FIAT	Europe	Ducato(12-13)	Immobiliser
FIAT	Europe	Fiorino(08-)	Immobiliser
FIAT	Europe	Freemont(13-)	Smart Key System(PEPS)
FIAT	Europe	Idea(03-12)	Immobiliser
FIAT	Europe	Linea(07-)	Immobiliser
FIAT	Europe	Palio(02-)	Immobiliser
FIAT	Europe	Panda(05-11)	Immobiliser
FIAT	Europe	Panda(11-)	Immobiliser
FIAT	Europe	Phedra(05-)	Immobiliser

FIAT	Europe	Punto(00-06)	Immobiliser
FIAT	Europe	Punto(06-11)	Immobiliser
FIAT	Europe	Qubo(08-)	Immobiliser
FIAT	Europe	Scudo(-07)	Immobiliser
FIAT	Europe	Scudo(08-)	Immobiliser
FIAT	Europe	Sedici(Diesel,06-10)	Immobiliser
FIAT	Europe	Sedici(Diesel,10-)	Immobiliser
FIAT	Europe	Sedici(Petrol,-07)	Immobiliser
FIAT	Europe	Sedici(Petrol,08-)	Immobiliser
FIAT	Europe	Sedici(Petrol,10-)	Immobiliser
FIAT	Europe	Stilo(02-06)	Immobiliser
FIAT	Europe	Ulysse(02-05)	Immobiliser
FIAT	Europe	Ulysse(05-10)	Immobiliser
FIAT	Europe	Viaggio(12-)	Immobiliser
FIAT	Middle east	500(07-)	Immobiliser
FIAT	Middle east	Doblo(-09)	Immobiliser

FIAT	South American	500(10-12)	Immobiliser
FIAT	South American	Bravo(10-14)	Immobiliser
FIAT	South American	Doblo(00-)	Immobiliser
FIAT	South American	Fiorino(14-15)	Immobiliser
FIAT	South American	Grand siena(12-)	Immobiliser
FIAT	South American	Idea(04-12)	Immobiliser
FIAT	South American	Linea(04-12)	Immobiliser
FIAT	South American	Palio(00-03)	Immobiliser
FIAT	South American	Palio(04-12)	Immobiliser
FIAT	South American	Punto(08-14)	Immobiliser

FIAT	South American	Siena(08-12)	Immobiliser
FIAT	South American	Stilo(02-06)	Immobiliser
FIAT	South American	Strada(00-03)	Immobiliser
FIAT	South American	Strada(12-)	Immobiliser
FIAT	South American	Uno(11-)	Immobiliser

XT001

Function
1. Number of keys 2.All keys lost
1.Read Pin Code 2.Program keys 3.Erase Keys
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1. Add smart key 2. Erase smart keys 3. Read security code
1.Program keys
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote

XTOOL

1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1. Number of keys 2.All keys lost
1. Number of keys 2.All keys lost
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1. Number of keys 2.All keys lost
1. Number of keys 2.All keys lost
1. Number of keys 2.All keys lost
1. Number of keys 2.All keys lost
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Key information 2.Program keys

XTOOL

1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1. Number of keys 2.All keys lost
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1. Number of keys 2.All keys lost
1. Number of keys 2.All keys lost
1. Add smart key 2. Erase smart keys 3. Read security code
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1. Number of keys 2.All keys lost
1.Program keys

XTOOL

1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1. Number of keys 2.All keys lost
1. Number of keys 2.All keys lost
1.Program keys
1.Program keys
1.Add New Key 2.Add Old Key 3.Erase All Key
1.Program keys
1.Fault codes 2.Erase DTC 3.ECU identification 4.All keys lost
1.Fault codes 2.Erase DTC 3.ECU identification 4.All keys lost
1.Fault codes 2.Erase DTC 3.ECU identification 4.All keys lost
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Program keys
1.Program keys
1. Number of keys 2.All keys lost
1. Number of keys 2.All keys lost
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote



1. Number of keys 2.All keys lost
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote



1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote
1.Number of keys 2.Program keys 3.Number of remotes 4.Program remote

XTOOL