

Immobiliser Function List

Software Version: 26.52

Automaker	Model/Protocol	System	Function
HNMAZDA	STEC Immobiliser system	Immobiliser	1. ECU identification 2. Fault codes 3. Erase DTC 4. Live data 5. Set security code (1) Set security code (2) Input security code 6. Program function (1) Program new system (2) Program keys (3) Erase keys (4) Replace immobiliser ECU (5) Replace engine ECU (6) Program immobiliser VIN (7) Program engine VIN (8) Reset engine ECU (9) Reset immobiliser

HNMAZDA	DIAS Immobiliser	Immobiliser	1. ECU identification 2. Fault codes 3. Erase DTC 4. Live data 5. Program function Add a key (01)Erase keys (02)Program new system (03)Replace immobiliser ECU (04)Replace engine ECU (05)Reset immobiliser (06)Reset engine ECU (07)Read VIN (08)Check key (09)Check engine ECU (10)Program engine VIN (11)Program immobiliser VIN (12)Lock immobiliser 6. Actuation test (1)LED status
HNMAZDA	DIAS Immobiliser (M3)	Immobiliser	1. Fault codes 2. Erase DTC 3. Live data 4. Immobiliser state 5. Read PIN 6. Write data 7. ECU reset 8. Program function
HNMAZDA	Immobiliser Controller(M3)	Immobiliser	1. Live data 2. Program function (01)Add new key (02)Add old key (03)Erase keys (04)Reset engine ECU (05)Lock immobiliser (06)Change engine ECU (07)Change immo ECU (08)Program new system (09)Check key (10)Check engine ECU

HNMAZDA	Family(M5/M7/S7)	Immobiliser	1.Live data 2.Program function (01)Add new key (02)Add old key (03)Erase keys (04)Reset engine ECU (05)Lock immobiliser (06)Change engine ECU (07)Change immo ECU (08)Program new system (09)Check key (10)Check engine ECU
HNMAZDA	DIAS Immobiliser (M8/V70)	Immobiliser	1.Fault codes 2.Erase DTC 3.Live data 4.Program function (01)Add new keys (02)Add old keys (03)Erase all keys (04)MatchAllSystem (05)Change immo ECU (06)Change engine ECU (07)Reset engine ECU (08)Lock immobiliser ECU (09)Read key status (10)Read ECM status

HNMAZDA	Immobiliser Controller(M6/S5 Without smart)	Immobiliser	1.Live data 2. ECU reset (1) Hard Reset (2) Unlock ECU 3. Write data (1) Write VIN (2) Write PIN 4. Program function (1) Add a new key (2) Add a old key (3) Erase all keys (4) Generate SK2 (5) The SK2 of ECM Self-learning (6) Learning ECM's SK2 (7) Lock ECU (8) Check key (9) Check ECM (10) Learning ECM's PIN (11) ECM reset
HNMAZDA	Immobiliser Controller(M6/S5 With smart)	Immobiliser	1.Live data 2. ECU reset (1) Hard Reset (2) Unlock ECU 3. Write data (1) Write VIN (2) Write PIN 4. Program function (1) Add a new key (2) Add a old key (3) Erase all keys (4) Generate SK2 (5) The SK2 of ECM Self-learning (6) Learning ECM's SK2 (7) Lock ECU (8) Check key (9) Check ECM (10) Learning ECM's PIN (11) ECM reset

HNMAZDA	Hufu (M8/S7/M5)	smart key system	1.program key (1)Program new key (2)Program old key (3)Program electronic steering lock (4)Program IMMO (5)Read a key to start the controller status (6)Erase ESCL 2.Program a key to start the controller
HNMAZDA	Hufu (V70)	smart key system	1.program key (1)Program new key (2)Program old key (3)Program electronic steering lock (4)Program IMMO (5)Read a key to start the controller status (6)Erase ESCL 2.Program a key to start the controller
HNMAZDA	Hufu (M6/S5/M3)	smart key system	1.program key (1)Program new key (2)Program old key (3)Program electronic steering lock (4)Program IMMO (5)Read a key to start the controller status (6)Erase ESCL 2.Program a key to start the controller
HNMAZDA	Fuxin (S5)	smart key system	1Program smart key 2Program peps 3Peps program escl 4Peps program immo 5Rease peps
HNMAZDA	Tongzhi Body Control(M3)	Remote	1.Program remote
HNMAZDA	General Body Control(M5/V70)	Remote	1.Program remote
HNMAZDA	Kingdom Body Control(M3/M6/S5)	Remote	1.Program remote