

## Immobiliser Function List

**Software Version: 26.58**

Automaker	System	System	Function
Toyota/Lexus	Remote	Type 1	1.Program remote
Toyota/Lexus	Remote	Type 2	1. Program remote 2. Erase remote
Toyota/Lexus	Remote	Type 3	Manual Opration
Toyota/Lexus	Immobiliser	Type 1("4C")	1. Add a master key 2. Add a vice key 3. Erase keys 4. Erase DTC
Toyota/Lexus	Immobiliser	Type 2("4D" 67 or 68)	1. Add a key 2. Erase keys 3. Reset immobiliser 4. Replace engine ECU
Toyota/Lexus	Immobiliser	Type 3("4D" 72 "G")	1. Add a key 2. Erase keys 3. Replace immobiliser ECU 4. Replace engine ECU 5.Reset IMMO(All key lost)
Toyota/Lexus	Immobiliser	Type 4("8E" "H")	1. Add a key 2. Erase keys 3. Replace immobiliser ECU 4. Replace engine ECU
Toyota/Lexus	Immobiliser	Type 5(Avanza)	1. Add a key
Toyota/Lexus	Immobiliser	Type 6	1.Add master key 2.Add valet key 3.Erase keys
Toyota/Lexus	Immobiliser	Type 7	1.Read Keys Number 2.Programme Key 3.Erase Keys 4.Programme Remote 5.Erase Remotes

Toyota/Lexus	Smart key system	Type 1	<ol style="list-style-type: none"> <li>1. Add a smart key</li> <li>2. Erase smart keys</li> <li>3. Reset smart key ECU</li> <li>4. Program ECU</li> </ol>
Toyota/Lexus	Smart key system	Type 2	<ol style="list-style-type: none"> <li>1. Program smart keys</li> <li>2. Program remote</li> <li>3. Reset immobiliser</li> </ol>
Toyota/Lexus	Smart key system	Type 3	<ol style="list-style-type: none"> <li>1. Add a smart key</li> <li>2. Erase smart keys</li> <li>3. Reset smart keys</li> </ol>
Toyota/Lexus	Smart key system	Type 4	<ol style="list-style-type: none"> <li>1. All smart keys lost</li> <li>2. Add a smart key</li> <li>3. Switch ignition on</li> </ol>

*XTOOL*