



Shenzhen Xtooltech Co., Ltd

ALFA ROMEO Function List V10.30

Tips and Instructions:

The programming function only supports H6PRO, H6PRO Master Edition products.

* This feature is new.

✓ This feature is supported.

This feature is not supported.

※ This feature is partially supported.

Vehicle	Model	Year/model	System	Read ECU Information	Read Trouble Code	Clear Trouble Code	Live Data	Special Functions
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP04987, SP04988, SP04989
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP04990, SP04991, SP04992, SP04993, SP04994, SP04995, SP04996
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP04997, SP04998, SP04999, SP05000, SP05001, SP05002, SP05003
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05004, SP05005, SP05006, SP05007, SP05008, SP05009, SP05010
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05011, SP05012, SP05013, SP05014, SP05015, SP05016, SP05017
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05018, SP05019, SP05020, SP05021, SP05022, SP05023, SP05024
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05025, SP05026, SP05027, SP05028, SP05029, SP05030, SP05031
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05032, SP05033
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05034, SP05035, SP05036, SP05037, SP05038, SP05039, SP05040
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05041, SP05042, SP05043
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05044, SP05045, SP05046
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05047, SP05048, SP05049
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05050, SP05051, SP05052, SP05053, SP05054, SP05055, SP05056
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05057, SP05058, SP05059, SP05060, SP05061, SP05062, SP05063
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05064, SP05065, SP05066
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05067, SP05068, SP05069
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05070, SP05071, SP05072
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05073, SP05074, SP05075
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05076, SP05077, SP05078, SP05079, SP05080, SP05081, SP05082
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05083, SP05084, SP05085, SP05086, SP05087, SP05088, SP05089
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05090, SP05091
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05092, SP05093, SP05094, SP05095, SP05096, SP05097, SP05098, SP05099
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05100
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05101, SP05102, SP05103, SP05104, SP05105, SP05106, SP05107
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05108, SP05109, SP05110
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05111, SP05112, SP05113
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05114, SP05115
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05116, SP05117, SP05118
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05119, SP05120, SP05121
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05122, SP05123, SP05124
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05125, SP05126, SP05127, SP05128, SP05129, SP05130, SP05131
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05132, SP05133, SP05134, SP05135, SP05136, SP05137, SP05138
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05139, SP05140, SP05141
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05142, SP05143, SP05144, SP05145, SP05146, SP05147, SP05148
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05149, SP05150
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05151, SP05152, SP05153
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05154, SP05155, SP05156, SP05157, SP05158, SP05159, SP05160
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05161, SP05162, SP05163, SP05164, SP05165, SP05166, SP05167
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05168, SP05169, SP05170
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05171, SP05172, SP05173, SP05174, SP05175, SP05176, SP05177
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05178, SP05179
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05180, SP05181
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05182, SP05183, SP05184

ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05185, SP05186, SP05187, SP05188, SP05189, SP05190, SP05191, SP05192
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05193
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05194, SP05195, SP05196, SP05197, SP05198, SP05199, SP05200, SP05201
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05202, SP05203, SP05204
ALFA ROMEO	Giulietta/Stelvio	2011	ECM (Engine Control Module)	✓	✓	✓	✓	SP05205, SP05206, SP05207, SP05208, SP05209, SP05210, SP05211, SP05212
ALFA ROMEO	Giulietta/Stelvio	2011	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	ABS (Anti Lock Brakes)	✓	✓	✓	✓	SP05213, SP05214, SP05215, SP05216, SP05217
ALFA ROMEO	Giulietta/Stelvio	2011	ABS (Anti Lock Brakes)	✓	✓	✓	✓	SP05218, SP05219, SP05220, SP05221, SP05222, SP05223
ALFA ROMEO	Giulietta/Stelvio	2011	ABS (Anti Lock Brakes)	✓	✓	✓	✓	SP05224, SP05225, SP05226, SP05227, SP05228
ALFA ROMEO	Giulietta/Stelvio	2011	ORC (Occupant Restraint)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	ORC (Occupant Restraint)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	ORC (Occupant Restraint)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	ORC (Occupant Restraint)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	BCM (Body Control Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	BCM (Body Control Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	BCM (Body Control Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	SP05229
ALFA ROMEO	Giulietta/Stelvio	2011	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	SP05230
ALFA ROMEO	Giulietta/Stelvio	2011	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	PSTM (Passenger Seat Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	EPS (Electric Power Steering)	✓	✓	✓	✓	SP05231
ALFA ROMEO	Giulietta/Stelvio	2011	EPS (Electric Power Steering)	✓	✓	✓	✓	SP05232
ALFA ROMEO	Giulietta/Stelvio	2011	IPC (Instrument Panel)	✓	✓	✓	✓	SP05233, SP05234, SP05235, SP05236
ALFA ROMEO	Giulietta/Stelvio	2011	IPC (Instrument Panel)	✓	✓	✓	✓	SP05237, SP05238, SP05239, SP05240
ALFA ROMEO	Giulietta/Stelvio	2011	IPC (Instrument Panel)	✓	✓	✓	✓	SP05241, SP05242, SP05243, SP05244
ALFA ROMEO	Giulietta/Stelvio	2011	IPC (Instrument Panel)	✓	✓	✓	✓	SP05245, SP05246, SP05247, SP05248
ALFA ROMEO	Giulietta/Stelvio	2011	IPC (Instrument Panel)	✓	✓	✓	✓	SP05249, SP05250, SP05251, SP05252
ALFA ROMEO	Giulietta/Stelvio	2011	IPC (Instrument Panel)	✓	✓	✓	✓	SP05253, SP05254, SP05255, SP05256
ALFA ROMEO	Giulietta/Stelvio	2011	DSTM (Driver Seat Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	CTM (Convergence Telematic Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	CTM (Convergence Telematic Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	PAM (Parking Aid Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	PAM (Parking Aid Module)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	RMN (Radio MAP NAV)	✓	✓	✓	✓	
ALFA ROMEO	Giulietta/Stelvio	2011	RMN (Radio MAP NAV)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05257, SP05258, SP05259
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05260, SP05261, SP05262
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05263, SP05264, SP05265
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05266, SP05267, SP05268, SP05269, SP05270, SP05271, SP05272, SP05273
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05274, SP05275, SP05276, SP05277
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05278, SP05279, SP05280
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05281, SP05282, SP05283, SP05284, SP05285, SP05286, SP05287, SP05288, SP05289
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05290, SP05291, SP05292, SP05293, SP05294, SP05295, SP05296
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05297, SP05298, SP05299
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05300, SP05301, SP05302
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05303, SP05304
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05305, SP05306, SP05307
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05308, SP05309, SP05310, SP05311, SP05312, SP05313, SP05314, SP05315, SP05316
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05317, SP05318
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05319, SP05320
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05321, SP05322, SP05323
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05324, SP05325, SP05326, SP05327, SP05328, SP05329, SP05330

ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05331, SP05332, SP05333, SP05334, SP05335, SP05336, SP05337
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05338, SP05339, SP05340
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05341, SP05342, SP05343, SP05344, SP05345, SP05346, SP05347, SP05348, SP05349, SP05350
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05351, SP05352, SP05353, SP05354, SP05355
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05356, SP05357, SP05358
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05359, SP05360
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05361, SP05362
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05363, SP05364, SP05365
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05366, SP05367, SP05368
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05369, SP05370
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05371, SP05372, SP05373
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05374, SP05375, SP05376, SP05377, SP05378
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05379, SP05380, SP05381
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05382, SP05383, SP05384
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05385, SP05386, SP05387, SP05388, SP05389, SP05390, SP05391
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05392, SP05393, SP05394, SP05395, SP05396, SP05397, SP05398, SP05399
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05400, SP05401, SP05402
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05403, SP05404, SP05405, SP05406, SP05407
ALFA ROMEO	MITO	2008	ECM (Engine Control Module)	✓	✓	✓	✓	SP05408, SP05409, SP05410, SP05411, SP05412
ALFA ROMEO	MITO	2008	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	ABS (Anti Lock Brakes)	✓	✓	✓	✓	SP05413, SP05414
ALFA ROMEO	MITO	2008	ABS (Anti Lock Brakes)	✓	✓	✓	✓	SP05415
ALFA ROMEO	MITO	2008	ABS (Anti Lock Brakes)	✓	✓	✓	✓	SP05416, SP05417
ALFA ROMEO	MITO	2008	ORC (Occupant Restraint)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	ORC (Occupant Restraint)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	BCM (Body Control Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	BCM (Body Control Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	BCM (Body Control Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	BCM (Body Control Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	EPS (Electric Power Steering)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	EPS (Electric Power Steering)	✓	✓	✓	✓	SP05418
ALFA ROMEO	MITO	2008	EPS (Electric Power Steering)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	EPS (Electric Power Steering)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	EPS (Electric Power Steering)	✓	✓	✓	✓	SP05419
ALFA ROMEO	MITO	2008	EPS (Electric Power Steering)	✓	✓	✓	✓	SP05420
ALFA ROMEO	MITO	2008	ADCM (Active Damping Control Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	PAM (Parking Aid Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	AHM (Additional Heater Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	CTM (Convergence Telematic Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	CTM (Convergence Telematic Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	CTM (Convergence Telematic Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	CTM (Convergence Telematic Module)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	TPM (Tire Pressure Monitor)	✓	✓	✓	✓	SP05421, SP05422, SP05423, SP05424, SP05425, SP05426, SP05427, SP05428
ALFA ROMEO	MITO	2008	TPM (Tire Pressure Monitor)	✓	✓	✓	✓	SP05429, SP05430, SP05431, SP05432, SP05433, SP05434, SP05435, SP05436
ALFA ROMEO	MITO	2008	HVAC (Heat, Ventilation And A/C)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	RMN (Radio MAP NAV)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	RMN (Radio MAP NAV)	✓	✓	✓	✓	
ALFA ROMEO	MITO	2008	IPC (Instrument Panel)	✓	✓	✓	✓	SP05437, SP05438, SP05439, SP05440
ALFA ROMEO	MITO	2008	IPC (Instrument Panel)	✓	✓	✓	✓	SP05441, SP05442, SP05443, SP05444
ALFA ROMEO	MITO	2008	IPC (Instrument Panel)	✓	✓	✓	✓	SP05445, SP05446, SP05447, SP05448
ALFA ROMEO	MITO	2008	IPC (Instrument Panel)	✓	✓	✓	✓	SP05449, SP05450, SP05451, SP05452
ALFA ROMEO	MITO	2008	IPC (Instrument Panel)	✓	✓	✓	✓	SP05453, SP05454, SP05455, SP05456
ALFA ROMEO	MITO	2008	IPC (Instrument Panel)	✓	✓	✓	✓	SP05457, SP05458, SP05459, SP05460
ALFA ROMEO	4C	2013	ECM (Engine Control Module)	✓	✓	✓	✓	SP05461, SP05462
ALFA ROMEO	4C	2013	ECM (Engine Control Module)	✓	✓	✓	✓	SP05463, SP05464
ALFA ROMEO	4C	2013	ECM (Engine Control Module)	✓	✓	✓	✓	SP05465, SP05466
ALFA ROMEO	4C	2013	ECM (Engine Control Module)	✓	✓	✓	✓	SP05467, SP05468

ALFA ROMEO	4C	2013	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	4C	2013	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	4C	2013	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	4C	2013	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	4C	2013	ABS (Anti Lock Brakes)	✓	✓	✓	✓	SP05469, SP05470, SP05471, SP05472
ALFA ROMEO	4C	2013	ABS (Anti Lock Brakes)	✓	✓	✓	✓	SP05473, SP05474, SP05475, SP05476
ALFA ROMEO	4C	2013	ORC (Occupant Restraint)	✓	✓	✓	✓	
ALFA ROMEO	4C	2013	BCM (Body Control Module)	✓	✓	✓	✓	
ALFA ROMEO	4C	2013	TPM (Tire Pressure Monitor)	✓	✓	✓	✓	SP05477, SP05478, SP05479, SP05480, SP05481, SP05482, SP05483, SP05484, SP05485
ALFA ROMEO	4C	2013	IPC (Instrument Panel)	✓	✓	✓	✓	SP05486, SP05487, SP05488, SP05489
ALFA ROMEO	4C	2013	PAM (Parking Aid Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	SP05490, SP05491, SP05492
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	SP05493, SP05494, SP05495
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	SP05496, SP05497, SP05498, SP05499, SP05500, SP05501, SP05502
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	SP05503, SP05504, SP05505
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	SP05506, SP05507, SP05508, SP05509, SP05510, SP05511, SP05512, SP05513, SP05514
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	SP05515, SP05516, SP05517, SP05518, SP05519, SP05520, SP05521, SP05522, SP05523
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	SP05524, SP05525, SP05526, SP05527, SP05528, SP05529, SP05530
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	SP05531, SP05532, SP05533
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	SP05534, SP05535, SP05536
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	SP05537, SP05538, SP05539
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	SP05540, SP05541, SP05542
ALFA ROMEO	GIULIA	2015	ECM (Engine Control Module)	✓	✓	✓	✓	SP05543, SP05544, SP05545
ALFA ROMEO	GIULIA	2015	ECM2 (Engine Control Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	ECM2 (Engine Control Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	ECM2 (Engine Control Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	ECM2 (Engine Control Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	TCM (Transmission Control Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	ABS (Anti-Lock Braking System)	✓	✓	✓	✓	SP05546, SP05547, SP05548, SP05549, SP05550, SP05551, SP05552, SP05553, SP05554, SP05555, SP05556, SP05557, SP05558, SP05559, SP05560, SP05561, SP05562, SP05563, SP05564, SP05565
ALFA ROMEO	GIULIA	2015	SRS (Supplemental Inflatable Restraint System)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	SRS (Supplemental Inflatable Restraint System)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	BCM (Body Control Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	RFH (Radio Frequency Hub)	✓	✓	✓	✓	SP05566, SP05567
ALFA ROMEO	GIULIA	2015	RBSS (Right Blind Spot Sensor)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	CDCM (Chassis Domain Control Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	AAML (Active Aerodynamic Module Left)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	DTCM (Drive Train Control Module)	✓	✓	✓	✓	SP05568, SP05569
ALFA ROMEO	GIULIA	2015	EMCM (Entertainment Multimedia Control Module)	✓	✓	✓	✓	SP05570, SP05571
ALFA ROMEO	GIULIA	2015	IC (Instrument Cluster)	✓	✓	✓	✓	SP05572
ALFA ROMEO	GIULIA	2015	IC (Instrument Cluster)	✓	✓	✓	✓	SP05573
ALFA ROMEO	GIULIA	2015	EPS (Electric Power Steering)	✓	✓	✓	✓	SP05574
ALFA ROMEO	GIULIA	2015	AAMR (Active Aerodynamic Module Right)	✓	✓	✓	✓	SP05575
ALFA ROMEO	GIULIA	2015	LBSS (Left Blind Spot Sensor)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	ETM (Entertainment Telematic Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	HALF (Haptical Lane Feedback)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	ESM (Electronic Shifter Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	AFLS (Adaptive Front Lighting System)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	TMM (Track Mapping Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	HVAC (Heating Ventilation Air-Conditioning And)	✓	✓	✓	✓	SP05576
ALFA ROMEO	GIULIA	2015	TBM (Telematic Box Module)	✓	✓	✓	✓	SP05577
ALFA ROMEO	GIULIA	2015	PAM (Parking Assistant Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	PAM (Parking Assistant Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	PAM (Parking Assistant Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	TTM (Trailer Tow Module)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	ACC (Adaptive Cruise Control)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	ESL (Electronic Steering Lock)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA	2015	ESL (Electronic Steering Lock)	✓	✓	✓	✓	

ALFA ROMEO	GIULIA		2015	CSWM (Comfort Seat Wheel Module)		✓	✓	✓	
ALFA ROMEO	GIULIA		2015	TVM (Torque Vectoring Module)	✓	✓	✓	✓	SP05578, SP05579
ALFA ROMEO	GIULIA		2015	AMP (Amplifier)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA		2015	AMP (Amplifier)	✓	✓	✓	✓	
ALFA ROMEO	GIULIA		2015	ANC (Active Noise Cancelation)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.4 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.4 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.4 TS 16V	Bosch Motronic Ml.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.4 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.4 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.4 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.4 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.6 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.6 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.6 TS 16V	Bosch Motronic Ml.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.6 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.6 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.6 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.6 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.8 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.8 TS 16V	Bosch Motronic Ml.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.8 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.8 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.8 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 1.8 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 2.0 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145	'98 2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145	'98 2.0 TS 16V	Bosch Motronic Ml.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 2.0 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 2.0 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 2.0 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		145	'98 2.0 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓	
ALFA ROMEO		145	'99 1.9 JTD	Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145	'99 1.9 JTD	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145	'99 1.9 JTD	Bosch Diesel EDC 15 Injection (1.9 TD D.I. Eng)	✓	✓	✓	✓	
ALFA ROMEO		145	'99 1.9 JTD	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓	
ALFA ROMEO		145	'99 1.9 JTD	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓	
ALFA ROMEO		145	'99 1.9 JTD	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		145	'99 1.9 JTD	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓	
ALFA ROMEO		145		1.3 Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145		1.3 Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145		1.3 TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		145	1.4 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145	1.4 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145	1.4 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		145		1.6 Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145		1.6 Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145		1.6 TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		145	1.6 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145	1.6 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145	1.6 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		145	1.7 16V	Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145	1.7 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145	1.7 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		145	1.8 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145	1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145	1.8 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		145	2.0 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145	2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145	2.0 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		145	TD	Borletti MCC55F Climate Control	✓	✓	✓	✓	
ALFA ROMEO		145	TD	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		145	TD	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	

ALFA ROMEO		146	'98 1.4 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146	'98 1.4 TS 16V	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146	'98 1.4 TS 16V	Bosch Motronic MI.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.4 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.4 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.4 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.4 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.6 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146	'98 1.6 TS 16V	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146	'98 1.6 TS 16V	Bosch Motronic MI.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.6 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.6 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.6 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.6 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.8 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146	'98 1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146	'98 1.8 TS 16V	Bosch Motronic MI.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.8 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.8 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.8 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 1.8 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 2.0 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146	'98 2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146	'98 2.0 TS 16V	Bosch Motronic MI.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 2.0 TS 16V	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 2.0 TS 16V	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 2.0 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		146	'98 2.0 TS 16V	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓	
ALFA ROMEO		146	'99 1.9 JTD	Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146	'99 1.9 JTD	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146	'99 1.9 JTD	Bosch Diesel EDC 15 Injection (1.9 TD D.I. Eng	✓	✓	✓	✓	
ALFA ROMEO		146	'99 1.9 JTD	TRW MY 97 Air Bag (2F-2L-S)	✓	✓	✓	✓	
ALFA ROMEO		146	'99 1.9 JTD	TRW MY 97 Air Bag (2F-S)	✓	✓	✓	✓	
ALFA ROMEO		146	'99 1.9 JTD	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		146	'99 1.9 JTD	Trw MY 97 Airbag (2F-2L)	✓	✓	✓	✓	
ALFA ROMEO		146		1.3 Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146		1.3 Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146		1.3 TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		146	1.4 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146	1.4 TS 16V	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146	1.4 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		146		1.6 Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146		1.6 Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146		1.6 TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		146	1.6 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146	1.6 TS 16V	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146	1.6 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		146	1.7 16V	Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146	1.7 16V	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146	1.7 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		146	1.8 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146	1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146	1.8 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		146	2.0 TS 16V	Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146	2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146	2.0 TS 16V	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		146	TD	Borletti MCC55F Climate Control	✓	✓	✓		
ALFA ROMEO		146	TD	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		146	TD	TRW MY 97 Airbag (2F)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Bosch 8 ABS	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Bosch 8 ASR ABS	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Bosch 8 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Bosch ABS 5.7	✓	✓	✓	✓	

ALFA ROMEO		147	1.6 TS 16V 105CV	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Bosch Motronic Me7.3.1 EOBD Injection (2 Lambda)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Delphi Climate Control (Single Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Mannesman VDO Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Marelli Body Computer	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Marelli Connect	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	TRW Boot	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	TRW Driver's Door	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 105CV	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Bosch 8 ABS	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Bosch 8 ASR ABS	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Bosch 8 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Delphi Climate Control (Single Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Mannesman VDO Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Marelli Body Computer	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Marelli Connect	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	TRW Boot	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	TRW Driver's Door	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	1.6 TS 16V 120CV	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Bosch 8 ABS	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Bosch 8 ASR ABS	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Bosch 8 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng. 1)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Bosch EDC15 CF3/EOBD Diesel Injection (Eng. 1)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Delphi Climate Control (Single Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Mannesman VDO Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Marelli Body Computer	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Marelli Connect	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	TRW Boot	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	TRW Driver's Door	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Bosch 8 ABS	✓	✓	✓	✓	

ALFA ROMEO		147	1.9 JTD 16V	Bosch 8 ASR ABS	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Bosch 8 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Bosch Diesel Injection EDC16C39 CF4/E0BD (Eng.	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Bosch EDC16 CF3/E0BD Diesel Injection (1.9/2.4	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Delphi Climate Control (Single Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Mannesman VDO Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Marelli Body Computer	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Marelli Connect	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	TRW Boot	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	TRW Driver's Door	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	1.9 JTD 16V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Bosch 8 ABS	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Bosch 8 ASR ABS	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Bosch 8 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Bosch Motronic Me7.3.1 E0BD Injection	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Delphi Climate Control (Single Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Mannesman VDO Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Marelli Body Computer	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Marelli Connect	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	TRW Boot	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	TRW Driver's Door	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	2.0 TS 16V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Bosch 8 ABS	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Bosch 8 ASR ABS	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Bosch 8 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Bosch Motronic Me7.3.1 E0BD Injection	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Mannesman VDO Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Marelli Body Computer	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Marelli Connect	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	TRW Boot	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	TRW Driver's Door	✓	✓	✓	✓	
ALFA ROMEO		147	GTA 3.2 V6	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	

ALFA ROMEO		147	GTA 3.2 V6	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Bosch 8 ABS	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Bosch 8 ASR ABS	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Bosch 8 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Delphi Climate Control (Single Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Mannesman VDO Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Marelli Automatic Gearbox SELESPEED CFC218F (1	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Marelli Body Computer	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Marelli Connect	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	TRW Boot	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	TRW Driver's Door	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	GTA SELESPEED	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Bosch 8 ABS	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Bosch 8 ASR ABS	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Bosch 8 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Delphi Climate Control (Single Zone)	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Mannesman VDO Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Marelli Automatic Gearbox SELESPEED CFC208F (1	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Marelli Body Computer	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Marelli CFC208F SELESPEED Automatic Gearbox	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Marelli Connect	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	TRW Boot	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	TRW Driver's Door	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		147	SELESPEED	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		155	1.6 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		155	1.7 TS	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		155	1.8 TS	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		155	1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		155	2.0 TS	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		155	2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		155	2.5 TD	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		155	TD	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		155	V6	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		156	1.6 TS 16V	Allied Airbag MY 97 (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		156	1.6 TS 16V	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	1.6 TS 16V	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO		156	1.6 TS 16V	Allied MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		156	1.6 TS 16V	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO		156	1.6 TS 16V	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓	

ALFA ROMEO		156	1.6 TS 16V	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		156	1.6 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		156	1.6 TS 16V	Bosch Motronic Ml.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO		156	1.6 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO		156	1.6 TS 16V	Harrison Climate Control	✓	✓	✓		
ALFA ROMEO		156	1.6 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO		156	1.6 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓		
ALFA ROMEO		156	1.6 TS 16V	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓		
ALFA ROMEO		156	1.8 TS 16V	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO		156	1.8 TS 16V	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	1.8 TS 16V	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO		156	1.8 TS 16V	Allied MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓	
ALFA ROMEO		156	1.8 TS 16V	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO		156	1.8 TS 16V	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		156	1.8 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		156	1.8 TS 16V	Bosch Motronic Ml.5.5 Injection	✓	✓	✓	✓	
ALFA ROMEO		156	1.8 TS 16V	Bosch Motronic Ml.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO		156	1.8 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO		156	1.8 TS 16V	Harrison Climate Control	✓	✓	✓		
ALFA ROMEO		156	1.8 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓		
ALFA ROMEO		156	1.8 TS 16V	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓		
ALFA ROMEO		156	1.9 JTD	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO		156	1.9 JTD	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	1.9 JTD	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO		156	1.9 JTD	Allied MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓	
ALFA ROMEO		156	1.9 JTD	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO		156	1.9 JTD	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	1.9 JTD	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		156	1.9 JTD	Bosch Diesel EDC 15 Injection (1.9 TD D.I. Eng.	✓	✓	✓	✓	
ALFA ROMEO		156	1.9 JTD	Bosch EDC15 CF3/EOBD Diesel Injection (Eng. 1.	✓	✓	✓	✓	
ALFA ROMEO		156	1.9 JTD	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		156	1.9 JTD	Harrison Climate Control	✓	✓	✓		
ALFA ROMEO		156	1.9 JTD	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓		
ALFA ROMEO		156	1.9 JTD	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓		
ALFA ROMEO		156	2.0 TS 16V	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO		156	2.0 TS 16V	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	2.0 TS 16V	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO		156	2.0 TS 16V	Allied MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓	
ALFA ROMEO		156	2.0 TS 16V	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO		156	2.0 TS 16V	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		156	2.0 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		156	2.0 TS 16V	Bosch Motronic Ml.5.5 Injection	✓	✓	✓	✓	
ALFA ROMEO		156	2.0 TS 16V	Bosch Motronic Ml.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO		156	2.0 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO		156	2.0 TS 16V	Harrison Climate Control	✓	✓	✓		
ALFA ROMEO		156	2.0 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO		156	2.0 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓		
ALFA ROMEO		156	2.0 TS 16V	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓		
ALFA ROMEO		156	2.4 JTD	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO		156	2.4 JTD	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	2.4 JTD	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO		156	2.4 JTD	Allied MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓	
ALFA ROMEO		156	2.4 JTD	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO		156	2.4 JTD	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	2.4 JTD	Bosch 5.3 ABS	✓	✓	✓		
ALFA ROMEO		156	2.4 JTD	Bosch EDC15 CF3/EOBD Diesel Injection (Eng. 1.	✓	✓	✓	✓	
ALFA ROMEO		156	2.4 JTD	Bosch EDC15 Diesel Injection (2.4 TD D.I. Eng.	✓	✓	✓	✓	
ALFA ROMEO		156	2.4 JTD	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		156	2.4 JTD	Harrison Climate Control	✓	✓	✓		
ALFA ROMEO		156	2.4 JTD	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓		
ALFA ROMEO		156	2.4 JTD	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓		
ALFA ROMEO		156	2.5 V6 24V	AISIN Q-SYSTEM Automatic Gearbox	✓	✓	✓	✓	

ALFA ROMEO		156	2.5 V6 24V	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO		156	2.5 V6 24V	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	2.5 V6 24V	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO		156	2.5 V6 24V	Allied MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		156	2.5 V6 24V	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO		156	2.5 V6 24V	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	2.5 V6 24V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		156	2.5 V6 24V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		156	2.5 V6 24V	Bosch Motronic EOBD ME3.1 Injection (Eng. V6)	✓	✓	✓	✓	
ALFA ROMEO		156	2.5 V6 24V	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO		156	2.5 V6 24V	Injection - Bosch Motronic Me3.1 (Eng. V6) Out	✓	✓	✓	✓	
ALFA ROMEO		156	2.5 V6 24V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		156	2.5 V6 24V	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Allied Airbag MY 97 (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Allied MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Allied MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Allied MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Allied MY 97 Airbag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Allied MY97 Airbag (2F-2P-I-S)	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Bosch Motronic ME3.1 Injection (Selespeed)	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	Marelli SELESPEED Automatic Gearbox	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		156	SELESPEED	VAS 97/1 Door Lock RF Receiver/Alarm	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.6 TS 16V	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.6 TS 16V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.6 TS 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.6 TS 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.6 TS 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.6 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.6 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.6 TS 16V	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.6 TS 16V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.6 TS 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.6 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.8 TS 16V	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.8 TS 16V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.8 TS 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.8 TS 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.8 TS 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.8 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.8 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.8 TS 16V	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.8 TS 16V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.8 TS 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.8 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD	Bosch EDC15 CF3/EOBD Diesel Injection (Eng. 1.	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD 16V	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD 16V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO	156 MY		1.9 JTD 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	

ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng.	✓	✓	✓	✓	
ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4	✓	✓	✓	✓	
ALFA ROMEO	156 MY	1.9 JTD 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY	1.9 JTD 16V	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY	1.9 JTD 16V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	1.9 JTD 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	1.9 JTD 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.0 TS 16V	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.0 TS 16V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.0 TS 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.0 TS 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.0 TS 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.0 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.0 TS 16V	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.0 TS 16V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.0 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.0 TS 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.0 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch EDC15 CF3/EOBD Diesel Injection (Eng. 1.	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 10V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 10V	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 10V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 10V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 10V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 20V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 20V	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 20V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 20V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.4 JTD 20V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.5 V6 24V	AISIN Q-SYSTEM Automatic Gearbox	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.5 V6 24V	Bosch Motronic EOBD ME3.1 Injection (Eng. V6)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.5 V6 24V	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.5 V6 24V	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.5 V6 24V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	2.5 V6 24V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA 3.2 V6	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA 3.2 V6	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA 3.2 V6	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA 3.2 V6	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA 3.2 V6	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA 3.2 V6	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA 3.2 V6	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA 3.2 V6	SIEMENS MY 99 Airbag (2F-2P-2L-2T-I)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA 3.2 V6	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch ABS 5.7	✓	✓	✓	✓	

ALFA ROMEO	156 MY	GTA SELESPEED	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA SELESPEED	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA SELESPEED	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA SELESPEED	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA SELESPEED	Marelli SELESPEED CFC218F Automatic Gearbox	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA SELESPEED	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	GTA SELESPEED	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS 2.0	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS 2.0	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS 2.0	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS 2.0	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS 2.0	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS 2.0	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS 2.0	Bosch Motronic Med7.11 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS 2.0	Bosch Motronic Med7.11 Extra EEC Injection	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS 2.0	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS 2.0	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS 2.0	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS 2.0	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS SELESPEED	Bosch Motronic Med7.11 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS SELESPEED	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS SELESPEED	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS SELESPEED	Marelli CFC208F SELESPEED Automatic Gearbox	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS SELESPEED	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	JTS SELESPEED	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	Bosch ABS 5.7 ASR/TC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	Delphi Climate Control	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	Delphi Climate Control MY 03 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	Marelli CFC208F SELESPEED Automatic Gearbox	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO	156 MY	SELESPEED	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Siemens VDO CF4/EOBD Injection (Eng. 1.8)	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Convergence Lauberhorn CI	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Instrument Panel Siemens 2	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Marelli Radio Navigator	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Body Computer Marelli 3	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	ESP TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Steering Lock TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Driver's Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159 1.8 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	

ALFA ROMEO		159	1.8 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 16V	Passenger Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 16V	Boot G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 16V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 16V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 16V	Valeo Parking Control Unit	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Bosch Injection Motronic Med17.3.1 CF5/EOBD (E	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Convergence Lauberhorn C1	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Instrument Panel Siemens 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Marelli Radio Navigator	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Body Computer Marelli 3	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	ESP TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Steering Lock TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Driver's Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Passenger Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Boot G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.8 JTS TB 16V	Valeo Parking Control Unit	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Bosch Motronic Injection Med7.6.1 CF4/EOBD (En	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Convergence Lauberhorn C1	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Instrument Panel Siemens 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Marelli Radio Navigator	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Body Computer Marelli 3	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	ESP TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Steering Lock TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Driver's Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Passenger Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Boot G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 JTS 16V	Valeo Parking Control Unit	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng.	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Convergence Lauberhorn C1	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Instrument Panel Siemens 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	

ALFA ROMEO		159	1.9 MJET 16V	Marelli Radio Navigator	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Body Computer Marelli 3	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	ESP TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Steering Lock TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Driver's Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Passenger Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Boot G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 16V	Valeo Parking Control Unit	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Bosch Diesel Injection EDC16C39 CF4/E0BD (Eng.	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Convergence Lauberhorn C1	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Instrument Panel Siemens 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Marelli Radio Navigator	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Body Computer Marelli 3	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	ESP TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Steering Lock TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Driver's Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Passenger Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Boot G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	1.9 MJET 8V	Valeo Parking Control Unit	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Bosch Diesel Injection EDC16C39 CF5/E0BD (1.6/	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Convergence Lauberhorn C1	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Instrument Panel Siemens 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Marelli Radio Navigator	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Body Computer Marelli 3	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	ESP TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Steering Lock TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Driver's Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Passenger Seat Lear 2	✓	✓	✓	✓	

ALFA ROMEO		159	2.0 JTD 16V	Boot G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.0 JTD 16V	Valeo Parking Control Unit	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Bosch Motronic Injection Med7.6.1 CF4/EOBD (En	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Marelli SELESPEED CFC300 Automatic Gearbox	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Convergence Lauberhorn C1	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Instrument Panel Siemens 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Marelli Radio Navigator	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Body Computer Marelli 3	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	ESP TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Steering Lock TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Driver's Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Passenger Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Boot G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.2 JTS 16V	Valeo Parking Control Unit	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng.	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Convergence Lauberhorn C1	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Instrument Panel Siemens 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Marelli Radio Navigator	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Body Computer Marelli 3	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	ESP TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Steering Lock TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Driver's Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Passenger Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Boot G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	2.4 MJET 20V	Valeo Parking Control Unit	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Bosch Motronic Med7.6.2 CF4/EOBD Injection (En	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Convergence Lauberhorn C1	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Instrument Panel Siemens 2	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	

ALFA ROMEO		159	3.2 V6 24V	Marelli Radio Navigator	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Body Computer Marelli 3	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	ESP TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Steering Lock TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Driver's Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Passenger Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Boot G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Driver's Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Passenger Door G.E. PROCOND 2	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	
ALFA ROMEO		159	3.2 V6 24V	Valeo Parking Control Unit	✓	✓	✓	✓	
ALFA ROMEO		164	2.0 TS ECO	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		164	QV 24V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		164	SUPER 2.0 TS	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		164	SUPER TD	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		164	SUPER V6 24V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		164	SUPER V6 24V C. A. E.	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		164	SUPER V6 TB	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		164	V6 ECO	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		164	V6 ECO C. A.	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.0 TS 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.0 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.0 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.0 TS 16V	TRW MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.0 TS 16V	TRW MY 99 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.0 TS 16V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.0 TS 16V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.0 TS 16V	Valeo Parking Control Unit (1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.0 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.4 JTD 20V	AISIN YL11 5 Automatic Gearbox (1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.4 JTD 20V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.4 JTD 20V	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng. V6)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.4 JTD 20V	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.4 JTD 20V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.4 JTD 20V	TRW MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.4 JTD 20V	TRW MY 99 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.4 JTD 20V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.4 JTD 20V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.4 JTD 20V	Valeo Parking Control Unit (1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.4 JTD 20V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.5 V6 24V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.5 V6 24V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.5 V6 24V	Bosch Motronic EOBD ME3.1 Injection (Eng. V6)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.5 V6 24V	Injection - Bosch Motronic Me3.1 (Eng. V6) Out	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.5 V6 24V	TRW MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.5 V6 24V	TRW MY 99 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.5 V6 24V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.5 V6 24V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.5 V6 24V	Valeo Parking Control Unit (1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 2.5 V6 24V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.0 V6 24V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.0 V6 24V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.0 V6 24V	Bosch Motronic EOBD ME3.1 Injection (Eng. V6)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.0 V6 24V	Injection - Bosch Motronic Me3.1 (Eng. V6) Out	✓	✓	✓	✓	

ALFA ROMEO		166	'03 3.0 V6 24V	TRW MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.0 V6 24V	TRW MY 99 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.0 V6 24V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.0 V6 24V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.0 V6 24V	Valeo Parking Control Unit (1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.0 V6 24V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.2 V6 24V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.2 V6 24V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.2 V6 24V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.2 V6 24V	TRW MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.2 V6 24V	TRW MY 99 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.2 V6 24V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.2 V6 24V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.2 V6 24V	Valeo Parking Control Unit (1)	✓	✓	✓	✓	
ALFA ROMEO		166	'03 3.2 V6 24V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 TS 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 TS 16V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 TS 16V	TRW MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 TS 16V	TRW MY 97 Air Bag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 TS 16V	TRW MY 97 Air Bag (2F-2P-I-S)	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 TS 16V	TRW MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 TS 16V	TRW MY 99 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 TS 16V	VAS 97/2 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 TS 16V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 V6 TB	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 V6 TB	Bosch Motronic ME2.1 Injection (Eng. V6 2.0 TB)	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 V6 TB	TRW MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 V6 TB	TRW MY 97 Air Bag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 V6 TB	TRW MY 97 Air Bag (2F-2P-I-S)	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 V6 TB	TRW MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 V6 TB	TRW MY 99 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 V6 TB	VAS 97/2 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	2.0 V6 TB	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	2.4 JTD	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		166	2.4 JTD	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		166	2.4 JTD	Bosch EDC15 CF3/EOBD Diesel Injection (Eng. 1.)	✓	✓	✓	✓	
ALFA ROMEO		166	2.4 JTD	Bosch EDC15 Diesel Injection (2.4 TD D.I. Eng.)	✓	✓	✓	✓	
ALFA ROMEO		166	2.4 JTD	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		166	2.4 JTD	TRW MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓	
ALFA ROMEO		166	2.4 JTD	TRW MY 97 Air Bag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO		166	2.4 JTD	TRW MY 97 Air Bag (2F-2P-I-S)	✓	✓	✓	✓	
ALFA ROMEO		166	2.4 JTD	TRW MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	2.4 JTD	TRW MY 99 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	2.4 JTD	VAS 97/2 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	2.4 JTD	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	Bosch Motronic EOBD ME3.1 Injection (Eng. V6)	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	Bosch Motronic ME2.1 Injection (Eng. V6 2.5 /	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	Injection - Bosch Motronic Me3.1 (Eng. V6) Out	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	TRW MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	TRW MY 97 Air Bag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	TRW MY 97 Air Bag (2F-2P-I-S)	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	TRW MY 97 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	TRW MY 99 Airbag (2F-2P-2L-1)	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	VAS 97/2 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	2.5 V6 24V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	Bosch 5.7 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	

ALFA ROMEO		166	3.0 V6 24V	Bosch Electronic Key Code 2	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	Bosch Motronic EOBD ME3.1 Injection (Eng. V6)	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	Bosch Motronic ME2.1 Injection (Eng. V6 2.5 /	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	Injection - Bosch Motronic Me3.1 (Eng. V6) Out	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	TRW MY 97 Air Bag (2F-2P-2L-I-S)	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	TRW MY 97 Air Bag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	TRW MY 97 Air Bag (2F-2P-I-S)	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	TRW MY 97 Airbag (2F-2P-2L-I)	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	TRW MY 99 Airbag (2F-2P-2L-I)	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	VAS 97/2 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO		166	3.0 V6 24V	VAS 97/3 Door Lock RF Alarm/Receiver	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Bosch Injection Motronic Med17.3.1 CF5/EOBD (E	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Instrument Panel Siemens 2	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Marelli Radio Navigator	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Body Computer Marelli 4	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	ESP TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Steering Lock TRW 2	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	TRW Air Bag MY 03 (2F-2P-2L-1G-I)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	TRW Air Bag MY 03 (2F-2P-2L-2G-I)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Driver's Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Passenger Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	G.E. PROCOND 4 Driver's Door	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	G.E. PROCOND 4 Passenger's Door	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	
ALFA ROMEO	BRERA		1.8 JTS TB 16V	Valeo Parking Control Unit	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Bosch Diesel Injection EDC16C39 CF5/EOBD (1.6/	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Instrument Panel Siemens 2	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Marelli Radio Navigator	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-I)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-I)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Body Computer Marelli 4	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	ESP TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Steering Lock TRW 2	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	TRW Air Bag MY 03 (2F-2P-2L-1G-I)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	TRW Air Bag MY 03 (2F-2P-2L-2G-I)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	TRW Lucas ABS	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Driver's Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Passenger Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	G.E. PROCOND 4 Driver's Door	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	G.E. PROCOND 4 Passenger's Door	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.0 JTD 16V	Valeo Parking Control Unit	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.2 JTS 16V	Bosch Motronic Injection Med7.6.1 CF4/EOBD (En	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.2 JTS 16V	Marelli SELESPEED CFC300 Automatic Gearbox	✓	✓	✓	✓	
ALFA ROMEO	BRERA		2.2 JTS 16V	Instrument Panel Siemens 2	✓	✓	✓	✓	

ALFA ROMEO	BRERA	2.2 JTS 16V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Marelli Radio Navigator	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Body Computer Marelli 4	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	ESP TRW Lucas ABS	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Steering Lock TRW 2	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	TRW Air Bag MY 03 (2F-2P-2L-1G-1)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	TRW Air Bag MY 03 (2F-2P-2L-2G-1)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	TRW Lucas ABS	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Driver's Seat Lear 2	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Passenger Seat Lear 2	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	G.E. PROCOND 4 Driver's Door	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	G.E. PROCOND 4 Passenger's Door	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Tyre Pressure Control TRW 2	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.2 JTS 16V	Valeo Parking Control Unit	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Bosch Diesel Injection EDC16C39 CF4/E0BD (Eng.	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Instrument Panel Siemens 2	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Marelli Radio Navigator	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Body Computer Marelli 4	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	ESP TRW Lucas ABS	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Steering Lock TRW 2	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	TRW Lucas ABS	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Driver's Seat Lear 2	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Marelli/Microsoft Convergence	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Passenger Seat Lear 2	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	G.E. PROCOND 4 Driver's Door	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	G.E. PROCOND 4 Passenger's Door	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Tyre Pressure Control TRW 2	✓	✓	✓	✓
ALFA ROMEO	BRERA	2.4 MJET 20V	Valeo Parking Control Unit	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Automatic Gearbox AISIN AF40-6	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Bosch Motronic Med7.6.2 CF4/E0BD Injection (En	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Instrument Panel Siemens 2	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Marelli 3 Connect (Multi-Model)	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Marelli Radio Navigator	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Air Bag TRW MY 03 (2F-2P-2L-2T-1G-1)	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Air Bag TRW MY 03 (2F-2P-2L-2T-2G-1)	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Body Computer Marelli 4	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Electronic Key TRW (Teg Reader)	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	ESP TRW Lucas ABS	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Steering Lock TRW 2	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	TRW Air Bag MY 03 (2F-2P-2L-1G-1)	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	TRW Air Bag MY 03 (2F-2P-2L-2G-1)	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	TRW Lucas ABS	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Climate Control Delphi (Two/Three-Zone)	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Climate Control Delphi 2 (Single-Zone)	✓	✓	✓	✓
ALFA ROMEO	BRERA	3.2 V6 24V	Driver's Seat Lear 2	✓	✓	✓	✓

ALFA ROMEO	BRERA	3.2 V6 24V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Passenger Seat Lear 2	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	G.E. PROCOND 4 Driver's Door	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	G.E. PROCOND 4 Passenger's Door	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Litronic Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Litronic Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Tyre Pressure Control TRW 2	✓	✓	✓	✓	
ALFA ROMEO	BRERA	3.2 V6 24V	Valeo Parking Control Unit	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Bosch Motronic Injection Me7.9.10 CF5/EOBD (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Magneti Marelli Injection IAW SGMF CF5/EOBD (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Marelli DDCT CFC8TDF Automatic Gearbox (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Marelli Radio Navigator (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Lauberhorn Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Marelli/Microsoft Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Siemens 3 Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Bosch Airbag (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Continental MK60EC ABS (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Marelli 10 Body Computer	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Lear Driver's Seat (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Lear Passenger Seat (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Marelli Climate Control Two-Zone (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Marelli Manual Climate Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	ZF Electric Steering (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	Automotive Lighting Discharge Headlights (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.4 TURBO 16V	VALEO Parking Control Unit (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Marelli Radio Navigator (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Lauberhorn Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Marelli/Microsoft Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Siemens 3 Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Bosch Airbag (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Continental MK60EC ABS (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Marelli 10 Body Computer	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Lear Driver's Seat (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Lear Passenger Seat (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Marelli Climate Control Two-Zone (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Marelli Manual Climate Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	ZF Electric Steering (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	Automotive Lighting Discharge Headlights (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.6 MJET 16V	VALEO Parking Control Unit (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Bosch Motronic Injection Med17.3.1 CF5/EOBD (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Marelli Radio Navigator (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Lauberhorn Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Marelli/Microsoft Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Siemens 3 Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Bosch Airbag (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Continental MK60EC ABS (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Marelli 10 Body Computer	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Lear Driver's Seat (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Lear Passenger Seat (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Marelli Climate Control Two-Zone (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Marelli Manual Climate Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	ZF Electric Steering (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	Automotive Lighting Discharge Headlights (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	1.8 JTS TB 16V	VALEO Parking Control Unit (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Marelli DDCT CFC8TDF Automatic Gearbox (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Marelli Radio Navigator (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Lauberhorn Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Marelli/Microsoft Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Siemens 3 Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Bosch Airbag (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Continental MK60EC ABS (EP)	✓	✓	✓	✓	

ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Marelli 10 Body Computer	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Lear Driver's Seat (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Lear Passenger Seat (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Marelli Climate Control Two-Zone (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Marelli Manual Climate Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	ZF Electric Steering (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	Automotive Lighting Discharge Headlights (EP)	✓	✓	✓	✓	
ALFA ROMEO	GIULIETTA (191)	2.0 MJET 16V	VALEO Parking Control Unit (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Bosch 8 ABS	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Bosch 8 ASR ABS	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Bosch 8 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Delphi Climate Control (Single Zone)	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Mannesman VDO Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Marelli Body Computer	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Marelli Connect	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO	GT	1.8 TS 16V	TRW Driver's Door (1)	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Bosch 8 ABS	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Bosch 8 ASR ABS	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Bosch 8 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Bosch Diesel Injection EDC16C39 CF4/EOBD (Eng.	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Bosch EDC16 CF3/EOBD Diesel Injection (1.9/2.4	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Delphi Climate Control (Single Zone)	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Mannesman VDO Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Marelli Body Computer	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Marelli Connect	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO	GT	1.9 JTD 16V	TRW Driver's Door (1)	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Bosch 8 ABS	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Bosch 8 ASR ABS	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Bosch 8 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Bosch ABS 5.7	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Delphi Climate Control (Single Zone)	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Mannesman VDO Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Marelli Body Computer	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Marelli Connect	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO	GT	3.2 V6 24V	TRW Driver's Door (1)	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Bosch 8 ABS	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Bosch 8 ASR ABS	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Bosch 8 VDC ABS	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Bosch ABS 5.7	✓	✓	✓	✓	

ALFA ROMEO	GT	JTS 2.0	Bosch ABS 5.7 VDC	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Bosch Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Bosch Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Bosch Motronic Me7.11 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Delphi Climate Control (Dual Zone)	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Delphi Climate Control (Single Zone)	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Mannesman VDO Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Marelli Automatic Gearbox SELESPEED CFC208F (1	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Marelli Body Computer	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Marelli Connect	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Marelli/Microsoft C3 Convergence	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	Marelli/Microsoft Convergence	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	SIEMENS MY 99 Airbag (2F-2P-2L-2T-1)	✓	✓	✓	✓	
ALFA ROMEO	GT	JTS 2.0	TRW Driver's Door (1)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 2.0 JTS	Bosch Motronic Me7.11 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 2.0 JTS	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 2.0 JTS	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 2.0 JTS	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 2.0 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 2.0 TS 16V	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 2.0 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 2.0 TS 16V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 2.0 TS 16V	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 3.2 V6 24V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 3.2 V6 24V	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 3.2 V6 24V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*03 3.2 V6 24V	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 1.8 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 1.8 TS 16V	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 1.8 TS 16V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 1.8 TS 16V	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 2.0 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 2.0 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 2.0 TS 16V	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 2.0 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 2.0 TS 16V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 2.0 TS 16V	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 2.0 V6 TB	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 2.0 V6 TB	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 2.0 V6 TB	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 2.0 V6 TB	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 3.0 V6 24V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 3.0 V6 24V	Bosch Motronic EOBD ME3.1 Injection (Eng. V6)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 3.0 V6 24V	Bosch Motronic ME2.1 Injection (Eng. V6 2.5 /	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 3.0 V6 24V	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 3.0 V6 24V	Injection - Bosch Motronic Me3.1 (Eng. V6) Out	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 3.0 V6 24V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	GTV	*98 3.0 V6 24V	TRW MY 97 Air Bag (2F-2P-1)	✓	✓	✓	✓	
ALFA ROMEO	GTV	2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	GTV	2.0 TS 16V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	GTV	2.0 V6 TB	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	GTV	2.0 V6 TB	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	GTV	3.0 V6 24V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	GTV	3.0 V6 24V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Marelli 6F3 EOBD CAN Diesel Injection (EP Eng.	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Marelli Diesel Injection 8DF CF5/EOBD (EP Eng.	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Marelli Radio Navigator (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Lauberhorn Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Marelli/Microsoft C3 (EP) Convergence	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Marelli/Microsoft Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Siemens 3 Instrument Panel	✓	✓	✓	✓	

ALFA ROMEO	MITO	1.3 MJET 16V	Bosch ABS 8 ESP (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	CONTINENTAL Airbag (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Continental Airbag (EP-Proxy) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Delphi (EP) 3 Body Computer	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Delphi (EP) 3 Electric Steering	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Denso Climate Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Denso Heater (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Trw Tyre Pressure Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.3 MJET 16V	VALEO Parking Control Unit (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Bosch Motronic Injection Me7.9.10 CF5/EOBD (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Magneti Marelli Injection IAW 8GMF CF5/EOBD (E	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Marelli Radio Navigator (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Lauberhorn Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Marelli/Microsoft C3 (EP) Convergence	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Marelli/Microsoft Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Siemens 3 Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Bosch ABS 8 ESP (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	CONTINENTAL Airbag (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Continental Airbag (EP-Proxy) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Delphi (EP) 3 Body Computer	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Delphi (EP) 3 Electric Steering	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Denso Climate Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Trw Tyre Pressure Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 16V	VALEO Parking Control Unit (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Magneti Marelli Injection IAW 5SF9 CF5/EOBD (E	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Marelli Radio Navigator (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Lauberhorn Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Marelli/Microsoft C3 (EP) Convergence	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Marelli/Microsoft Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Siemens 3 Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Bosch ABS 8 ESP (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	CONTINENTAL Airbag (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Continental Airbag (EP-Proxy) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Delphi (EP) 3 Body Computer	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Delphi (EP) 3 Electric Steering	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Denso Climate Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Magneti Marelli Suspension (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Trw Tyre Pressure Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 8V	VALEO Parking Control Unit (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Bosch Motronic Injection Me7.9.10 CF5/EOBD (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Injection Landi Renzo LC02 Gas	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Magneti Marelli Injection IAW 8GMF CF5/EOBD (E	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Marelli DDCT CFC8TDF Automatic Gearbox (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Marelli Radio Navigator (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Lauberhorn Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Marelli/Microsoft C3 (EP) Convergence	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Marelli/Microsoft Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Siemens 3 Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Bosch ABS 8 ESP (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	CONTINENTAL Airbag (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Continental Airbag (EP-Proxy) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Delphi (EP) 3 Body Computer	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Delphi (EP) 3 Electric Steering	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Denso Climate Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Magneti Marelli Suspension (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Trw Tyre Pressure Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.4 TURBO 16V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	

ALFA ROMEO	MITO	1.4 TURBO 16V	VALEO Parking Control Unit (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	Diesel Bosch Injection EDC16C39 CF5/EOBD CAN (✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	Marelli Radio Navigator (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	Lauberhorn Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	Marelli/Microsoft C3 (EP) Convergence	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	Marelli/Microsoft Convergence (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	Siemens 3 Instrument Panel	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	Bosch ABS 8 ESP (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	CONTINENTAL Airbag (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	Continental Airbag (EP-Proxy) 2	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	Delphi (EP) 3 Body Computer	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	Trw Tyre Pressure Control (EP)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	Valeo Discharge Headlamp (Left)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	Valeo Discharge Headlamp (Right)	✓	✓	✓	✓	
ALFA ROMEO	MITO	1.6 MJET 16V	VALEO Parking Control Unit (EP) 2	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 2.0 ITS	Bosch Motronic Me7.11 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 2.0 JTS	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 2.0 ITS	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 2.0 JTS	TRW MY 97 Air Bag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 2.0 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 2.0 TS 16V	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 2.0 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 2.0 TS 16V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 2.0 TS 16V	TRW MY 97 Air Bag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 3.2 V6 24V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 3.2 V6 24V	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 3.2 V6 24V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*03 3.2 V6 24V	TRW MY 97 Air Bag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 1.8 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 1.8 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 1.8 TS 16V	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 1.8 TS 16V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 1.8 TS 16V	TRW MY 97 Air Bag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	B'98 2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	B'98 2.0 TS 16V	Bosch Motronic M1.5.5 Injection (Eng. TS '98)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	B'98 2.0 TS 16V	Bosch Motronic Me7.3.1 EOBD Injection	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	B'98 2.0 TS 16V	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	B'98 2.0 TS 16V	Injection - Bosch Motronic Me7.3.1 Outside EEC	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	B'98 2.0 TS 16V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	B'98 2.0 TS 16V	TRW MY 97 Air Bag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 2.0 V6 TB	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 2.0 V6 TB	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 2.0 V6 TB	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 2.0 V6 TB	TRW MY 97 Air Bag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 3.0 V6	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 3.0 V6	Bosch Motronic EOBD ME3.1 Injection (Eng. V6)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 3.0 V6	Bosch Motronic ME2.1 Injection (Eng. V6 2.5 /	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 3.0 V6	Harrison Climate Control	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 3.0 V6	Injection - Bosch Motronic Me3.1 (Eng. V6) Out	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 3.0 V6	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	*98 3.0 V6	TRW MY 97 Air Bag (2F-2P-I)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	2.0 TS 16V	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	2.0 TS 16V	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	3.0 V6	Bosch 5.3 ABS	✓	✓	✓	✓	
ALFA ROMEO	SPIDER	3.0 V6	TRW MY 97 Air Bag (2F-2P)	✓	✓	✓	✓	

Special Functions List

No.	Functions Name	System Name
SP00001	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00002	Brake Switch Learn	PCM (Powertrain Control Module)
SP00003	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00004	Check PCM Odometer	PCM (Powertrain Control Module)
SP00005	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00006	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00007	Reset ECU	PCM (Powertrain Control Module)
SP00008	Reset Memory	PCM (Powertrain Control Module)
SP00009	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00010	Brake Switch Learn	PCM (Powertrain Control Module)
SP00011	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00012	Check PCM Odometer	PCM (Powertrain Control Module)
SP00013	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00014	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00015	Reset ECU	PCM (Powertrain Control Module)
SP00016	Reset Memory	PCM (Powertrain Control Module)
SP00017	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00018	Brake Switch Learn	PCM (Powertrain Control Module)
SP00019	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00020	Check PCM Odometer	PCM (Powertrain Control Module)
SP00021	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00022	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00023	Reset ECU	PCM (Powertrain Control Module)
SP00024	Reset Memory	PCM (Powertrain Control Module)
SP00025	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00026	Brake Switch Learn	PCM (Powertrain Control Module)
SP00027	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00028	Check PCM Odometer	PCM (Powertrain Control Module)
SP00029	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00030	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00031	Reset ECU	PCM (Powertrain Control Module)
SP00032	Reset Memory	PCM (Powertrain Control Module)

SP00033	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00034	Brake Switch Learn	PCM (Powertrain Control Module)
SP00035	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00036	Check PCM Odometer	PCM (Powertrain Control Module)
SP00037	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00038	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00039	Reset ECU	PCM (Powertrain Control Module)
SP00040	Reset Memory	PCM (Powertrain Control Module)
SP00041	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00042	Brake Switch Learn	PCM (Powertrain Control Module)
SP00043	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00044	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00045	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00046	Reset ECU	PCM (Powertrain Control Module)
SP00047	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00048	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00049	Brake Switch Learn	PCM (Powertrain Control Module)
SP00050	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00051	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00052	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00053	Reset ECU	PCM (Powertrain Control Module)
SP00054	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00055	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00056	Brake Switch Learn	PCM (Powertrain Control Module)
SP00057	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00058	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00059	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00060	Reset ECU	PCM (Powertrain Control Module)
SP00061	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00062	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00063	Brake Switch Learn	PCM (Powertrain Control Module)
SP00064	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00065	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00066	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00067	Reset ECU	PCM (Powertrain Control Module)
SP00068	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00069	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)

SP00070	Brake Switch Learn	PCM (Powertrain Control Module)
SP00071	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00072	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00073	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00074	Reset ECU	PCM (Powertrain Control Module)
SP00075	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00076	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00077	Brake Switch Learn	PCM (Powertrain Control Module)
SP00078	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00079	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00080	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00081	Reset ECU	PCM (Powertrain Control Module)
SP00082	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00083	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00084	Brake Switch Learn	PCM (Powertrain Control Module)
SP00085	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00086	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00087	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00088	Reset ECU	PCM (Powertrain Control Module)
SP00089	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00090	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00091	Brake Switch Learn	PCM (Powertrain Control Module)
SP00092	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00093	Check PCM Odometer	PCM (Powertrain Control Module)
SP00094	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00095	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00096	Reset ECU	PCM (Powertrain Control Module)
SP00097	Reset Memory	PCM (Powertrain Control Module)
SP00098	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00099	Brake Switch Learn	PCM (Powertrain Control Module)
SP00100	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00101	Check PCM Odometer	PCM (Powertrain Control Module)
SP00102	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00103	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00104	Reset ECU	PCM (Powertrain Control Module)
SP00105	Reset Memory	PCM (Powertrain Control Module)
SP00106	ECU Replacement With Value Transfer	TCM (Transmission Control Module)

SP00107	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00108	Quick Learn	TCM (Transmission Control Module)
SP00109	Clear Self Learning Data	TCM (Transmission Control Module)
SP00110	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00111	ABS Static Test	ABS (Anti-Lock Braking System)
SP00112	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP00113	Initialize Power Top	BCM (Body Control Module)
SP00114	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00115	Reset Service Information	IC (Instrument Cluster)
SP00116	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00117	IPC Replacement	IC (Instrument Cluster)
SP00118	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00119	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00120	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00121	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00122	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00123	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00124	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00125	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00126	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00127	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00128	CTM Proxi Configuration	CTM (Convergence Telematic Module)
SP00129	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP00130	Initialize EPS	EPS (Electric Power Steering)
SP00131	RADIO Proxi Configuration	RADIO (RADIO)
SP00132	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00133	Brake Switch Learn	PCM (Powertrain Control Module)
SP00134	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00135	Check PCM Odometer	PCM (Powertrain Control Module)
SP00136	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00137	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00138	Reset ECU	PCM (Powertrain Control Module)
SP00139	Reset Memory	PCM (Powertrain Control Module)
SP00140	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00141	Brake Switch Learn	PCM (Powertrain Control Module)
SP00142	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00143	Check PCM Odometer	PCM (Powertrain Control Module)

SP00144	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00145	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00146	Reset ECU	PCM (Powertrain Control Module)
SP00147	Reset Memory	PCM (Powertrain Control Module)
SP00148	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00149	Brake Switch Learn	PCM (Powertrain Control Module)
SP00150	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00151	Check PCM Odometer	PCM (Powertrain Control Module)
SP00152	Emissions Rolls Test Mode	PCM (Powertrain Control Module)
SP00153	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00154	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00155	Reset ECU	PCM (Powertrain Control Module)
SP00156	Reset Memory	PCM (Powertrain Control Module)
SP00157	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00158	Brake Switch Learn	PCM (Powertrain Control Module)
SP00159	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00160	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00161	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00162	Reset ECU	PCM (Powertrain Control Module)
SP00163	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00164	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00165	Brake Switch Learn	PCM (Powertrain Control Module)
SP00166	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00167	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00168	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00169	Reset ECU	PCM (Powertrain Control Module)
SP00170	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00171	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00172	Brake Switch Learn	PCM (Powertrain Control Module)
SP00173	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00174	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00175	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00176	Reset ECU	PCM (Powertrain Control Module)
SP00177	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00178	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00179	Brake Switch Learn	PCM (Powertrain Control Module)
SP00180	Clutch Pedal Learn	PCM (Powertrain Control Module)

SP00181	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00182	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00183	Reset ECU	PCM (Powertrain Control Module)
SP00184	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00185	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00186	Brake Switch Learn	PCM (Powertrain Control Module)
SP00187	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00188	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00189	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00190	Reset ECU	PCM (Powertrain Control Module)
SP00191	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00192	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00193	Brake Switch Learn	PCM (Powertrain Control Module)
SP00194	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00195	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00196	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00197	Reset ECU	PCM (Powertrain Control Module)
SP00198	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00199	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00200	Brake Switch Learn	PCM (Powertrain Control Module)
SP00201	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00202	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00203	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00204	Reset ECU	PCM (Powertrain Control Module)
SP00205	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00206	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00207	Brake Switch Learn	PCM (Powertrain Control Module)
SP00208	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00209	Check PCM Odometer	PCM (Powertrain Control Module)
SP00210	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00211	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00212	Reset ECU	PCM (Powertrain Control Module)
SP00213	Reset Memory	PCM (Powertrain Control Module)
SP00214	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00215	Brake Switch Learn	PCM (Powertrain Control Module)
SP00216	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00217	Check PCM Odometer	PCM (Powertrain Control Module)

SP00218	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00219	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00220	Reset ECU	PCM (Powertrain Control Module)
SP00221	Reset Memory	PCM (Powertrain Control Module)
SP00222	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP00223	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00224	Quick Learn	TCM (Transmission Control Module)
SP00225	Clear Self Learning Data	TCM (Transmission Control Module)
SP00226	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00227	ABS Static Test	ABS (Anti-Lock Braking System)
SP00228	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP00229	Initialize Power Top	BCM (Body Control Module)
SP00230	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00231	Reset Service Information	IC (Instrument Cluster)
SP00232	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00233	IPC Replacement	IC (Instrument Cluster)
SP00234	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00235	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00236	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00237	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00238	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00239	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00240	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00241	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00242	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00243	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00244	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00245	CTM Proxi Configuration	CTM (Convergence Telematic Module)
SP00246	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP00247	Initialize EPS	EPS (Electric Power Steering)
SP00248	RADIO Proxi Configuration	RADIO (RADIO)
SP00249	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00250	Brake Switch Learn	PCM (Powertrain Control Module)
SP00251	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00252	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00253	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00254	Reset ECU	PCM (Powertrain Control Module)

SP00255	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00256	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00257	Brake Switch Learn	PCM (Powertrain Control Module)
SP00258	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00259	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00260	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00261	Reset ECU	PCM (Powertrain Control Module)
SP00262	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00263	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00264	Brake Switch Learn	PCM (Powertrain Control Module)
SP00265	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00266	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00267	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00268	Reset ECU	PCM (Powertrain Control Module)
SP00269	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00270	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00271	Brake Switch Learn	PCM (Powertrain Control Module)
SP00272	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00273	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00274	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00275	Reset ECU	PCM (Powertrain Control Module)
SP00276	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00277	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00278	Brake Switch Learn	PCM (Powertrain Control Module)
SP00279	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00280	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00281	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00282	Reset ECU	PCM (Powertrain Control Module)
SP00283	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00284	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00285	Brake Switch Learn	PCM (Powertrain Control Module)
SP00286	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00287	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00288	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00289	Reset ECU	PCM (Powertrain Control Module)
SP00290	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00291	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)

SP00292	Brake Switch Learn	PCM (Powertrain Control Module)
SP00293	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00294	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00295	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00296	Reset ECU	PCM (Powertrain Control Module)
SP00297	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00298	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00299	Brake Switch Learn	PCM (Powertrain Control Module)
SP00300	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00301	Check PCM Odometer	PCM (Powertrain Control Module)
SP00302	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00303	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00304	Reset ECU	PCM (Powertrain Control Module)
SP00305	Reset Memory	PCM (Powertrain Control Module)
SP00306	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00307	Brake Switch Learn	PCM (Powertrain Control Module)
SP00308	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00309	Check PCM Odometer	PCM (Powertrain Control Module)
SP00310	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00311	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00312	Reset ECU	PCM (Powertrain Control Module)
SP00313	Reset Memory	PCM (Powertrain Control Module)
SP00314	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00315	Brake Switch Learn	PCM (Powertrain Control Module)
SP00316	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00317	Check PCM Odometer	PCM (Powertrain Control Module)
SP00318	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00319	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00320	Reset ECU	PCM (Powertrain Control Module)
SP00321	Reset Memory	PCM (Powertrain Control Module)
SP00322	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00323	Brake Switch Learn	PCM (Powertrain Control Module)
SP00324	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00325	Check PCM Odometer	PCM (Powertrain Control Module)
SP00326	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00327	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00328	Reset ECU	PCM (Powertrain Control Module)

SP00329	Reset Memory	PCM (Powertrain Control Module)
SP00330	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00331	Brake Switch Learn	PCM (Powertrain Control Module)
SP00332	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00333	Check PCM Odometer	PCM (Powertrain Control Module)
SP00334	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00335	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00336	Reset ECU	PCM (Powertrain Control Module)
SP00337	Reset Memory	PCM (Powertrain Control Module)
SP00338	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00339	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00340	Brake Switch Learn	PCM (Powertrain Control Module)
SP00341	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00342	Check PCM Odometer	PCM (Powertrain Control Module)
SP00343	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00344	Reset ECU	PCM (Powertrain Control Module)
SP00345	Reset Memory	PCM (Powertrain Control Module)
SP00346	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00347	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00348	Brake Switch Learn	PCM (Powertrain Control Module)
SP00349	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00350	Check PCM Odometer	PCM (Powertrain Control Module)
SP00351	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00352	Reset ECU	PCM (Powertrain Control Module)
SP00353	Reset Memory	PCM (Powertrain Control Module)
SP00354	Reset Memory	PCM (Powertrain Control Module)
SP00355	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00356	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00357	Brake Switch Learn	PCM (Powertrain Control Module)
SP00358	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00359	Check PCM Odometer	PCM (Powertrain Control Module)
SP00360	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00361	Reset ECU	PCM (Powertrain Control Module)
SP00362	Reset Memory	PCM (Powertrain Control Module)
SP00363	Reset Memory	PCM (Powertrain Control Module)
SP00364	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00365	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)

SP00366	Brake Switch Learn	PCM (Powertrain Control Module)
SP00367	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00368	Check PCM Odometer	PCM (Powertrain Control Module)
SP00369	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00370	Reset ECU	PCM (Powertrain Control Module)
SP00371	Reset Memory	PCM (Powertrain Control Module)
SP00372	Reset Memory	PCM (Powertrain Control Module)
SP00373	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP00374	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00375	Quick Learn	TCM (Transmission Control Module)
SP00376	Clear Self Learning Data	TCM (Transmission Control Module)
SP00377	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00378	Clear Self Learning Data	TCM (Transmission Control Module)
SP00379	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00380	ABS Static Test	ABS (Anti-Lock Braking System)
SP00381	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP00382	Initialize Power Top	BCM (Body Control Module)
SP00383	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00384	Reset Service Information	IC (Instrument Cluster)
SP00385	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00386	IPC Replacement	IC (Instrument Cluster)
SP00387	CTM Proxi Configuration	CTM (Convergence Telematic Module)
SP00388	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP00389	Initialize EPS	EPS (Electric Power Steering)
SP00390	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00391	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00392	RADIO Proxi Configuration	RADIO (RADIO)
SP00393	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00394	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00395	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00396	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00397	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00398	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00399	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00400	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00401	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00402	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)

SP00403	Brake Switch Learn	PCM (Powertrain Control Module)
SP00404	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00405	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00406	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00407	Reset ECU	PCM (Powertrain Control Module)
SP00408	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00409	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00410	Brake Switch Learn	PCM (Powertrain Control Module)
SP00411	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00412	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00413	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00414	Reset ECU	PCM (Powertrain Control Module)
SP00415	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00416	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00417	Brake Switch Learn	PCM (Powertrain Control Module)
SP00418	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00419	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00420	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00421	Reset ECU	PCM (Powertrain Control Module)
SP00422	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00423	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00424	Brake Switch Learn	PCM (Powertrain Control Module)
SP00425	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00426	Check PCM Odometer	PCM (Powertrain Control Module)
SP00427	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00428	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00429	Reset ECU	PCM (Powertrain Control Module)
SP00430	Reset Memory	PCM (Powertrain Control Module)
SP00431	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00432	Brake Switch Learn	PCM (Powertrain Control Module)
SP00433	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00434	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00435	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00436	Reset ECU	PCM (Powertrain Control Module)
SP00437	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00438	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00439	Brake Switch Learn	PCM (Powertrain Control Module)

SP00440	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00441	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00442	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00443	Reset ECU	PCM (Powertrain Control Module)
SP00444	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00445	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00446	Brake Switch Learn	PCM (Powertrain Control Module)
SP00447	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00448	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00449	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00450	Reset ECU	PCM (Powertrain Control Module)
SP00451	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00452	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00453	Brake Switch Learn	PCM (Powertrain Control Module)
SP00454	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00455	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00456	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00457	Reset ECU	PCM (Powertrain Control Module)
SP00458	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00459	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP00460	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00461	Quick Learn	TCM (Transmission Control Module)
SP00462	Clear Self Learning Data	TCM (Transmission Control Module)
SP00463	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00464	Clear Self Learning Data	TCM (Transmission Control Module)
SP00465	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00466	ABS Static Test	ABS (Anti-Lock Braking System)
SP00467	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP00468	Initialize Power Top	BCM (Body Control Module)
SP00469	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00470	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00471	Reset Service Information	IC (Instrument Cluster)
SP00472	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00473	IPC Replacement	IC (Instrument Cluster)
SP00474	RADIO Proxi Configuration	RADIO (RADIO)
SP00475	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP00476	Initialize EPS	EPS (Electric Power Steering)

SP00477	CTM Proxi Configuration	CTM (Convergence Telematic Module)
SP00478	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00479	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00480	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00481	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00482	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00483	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00484	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00485	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00486	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00487	Body Blinking Lights Configuration	BCM (Body Control Module)
SP00488	Body Blinking Lights Configuration	BCM (Body Control Module)
SP00489	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00490	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00491	Clutch Pedal Learning	ECM (Engine Control Module)
SP00492	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00493	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00494	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP00495	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00496	Oil Change	ECM (Engine Control Module)
SP00497	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00498	Injector Codes Read	ECM (Engine Control Module)
SP00499	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00500	EGR Valve Test	ECM (Engine Control Module)
SP00501	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00502	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00503	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00504	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00505	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00506	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00507	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP00508	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00509	Oil Change	ECM (Engine Control Module)
SP00510	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00511	Injector Codes Read	ECM (Engine Control Module)
SP00512	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00513	EGR Valve Test	ECM (Engine Control Module)

SP00514	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00515	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00516	Oil Change	ECM (Engine Control Module)
SP00517	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00518	Injector Codes Read	ECM (Engine Control Module)
SP00519	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00520	EGR Valve Test	ECM (Engine Control Module)
SP00521	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00522	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00523	Throttle Valve Test	ECM (Engine Control Module)
SP00524	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00525	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP00526	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00527	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00528	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00529	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00530	Oil Change	ECM (Engine Control Module)
SP00531	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00532	Injector Codes Read	ECM (Engine Control Module)
SP00533	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00534	EGR Valve Test	ECM (Engine Control Module)
SP00535	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00536	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00537	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00538	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00539	Clutch Pedal Learning	ECM (Engine Control Module)
SP00540	Neutral Signal Learning With Engine Off	ECM (Engine Control Module)
SP00541	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00542	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00543	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00544	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00545	Oil Change	ECM (Engine Control Module)
SP00546	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00547	Injector Codes Read	ECM (Engine Control Module)
SP00548	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00549	EGR Valve Test	ECM (Engine Control Module)
SP00550	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP00551	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00552	Throttle Valve Test	ECM (Engine Control Module)
SP00553	Oil Change	ECM (Engine Control Module)
SP00554	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00555	Injector Codes Read	ECM (Engine Control Module)
SP00556	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00557	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00558	EGR Valve Test	ECM (Engine Control Module)
SP00559	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00560	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00561	Throttle Valve Test	ECM (Engine Control Module)
SP00562	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00563	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00564	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP00565	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00566	Oil Change	ECM (Engine Control Module)
SP00567	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00568	Injector Codes Read	ECM (Engine Control Module)
SP00569	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00570	EGR Valve Test	ECM (Engine Control Module)
SP00571	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00572	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00573	Throttle Valve Test	ECM (Engine Control Module)
SP00574	Motorized Throttle Learning	ECM (Engine Control Module)
SP00575	Vehicle Configuration Reset	ECM (Engine Control Module)
SP00576	Oil Change	ECM (Engine Control Module)
SP00577	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00578	Injector Codes Read	ECM (Engine Control Module)
SP00579	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00580	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00581	EGR Valve Test	ECM (Engine Control Module)
SP00582	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00583	Throttle Valve Test	ECM (Engine Control Module)
SP00584	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00585	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00586	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00587	Motorised Throttle Replacement	ECM (Engine Control Module)

SP00588	Clutch Pedal Learning	ECM (Engine Control Module)
SP00589	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00590	Oil Change	ECM (Engine Control Module)
SP00591	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00592	Injector Codes Read	ECM (Engine Control Module)
SP00593	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00594	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00595	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00596	EGR Valve Test	ECM (Engine Control Module)
SP00597	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00598	Throttle Valve Test	ECM (Engine Control Module)
SP00599	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00600	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00601	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP00602	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00603	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00604	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00605	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00606	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00607	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00608	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00609	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00610	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00611	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
SP00612	Enable/Disable The Roll Bench Mode	ABS (Anti-Lock Braking System)
SP00613	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00614	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00615	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00616	Enable/Disable The Roll Bench Mode	ABS (Anti-Lock Braking System)
SP00617	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00618	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00619	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00620	Steering Angle Sensor	EPS (Electric Power Steering)
SP00621	Reset Odometer	IC (Instrument Cluster)
SP00622	Reset Service Information	IC (Instrument Cluster)
SP00623	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00624	Enable Seat Belts Reminder	IC (Instrument Cluster)

SP00625	Reset Odometer	IC (Instrument Cluster)
SP00626	Reset Service Information	IC (Instrument Cluster)
SP00627	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00628	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00629	Reset Odometer	IC (Instrument Cluster)
SP00630	Reset Service Information	IC (Instrument Cluster)
SP00631	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00632	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00633	Reset Odometer	IC (Instrument Cluster)
SP00634	Reset Service Information	IC (Instrument Cluster)
SP00635	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00636	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00637	Reset Odometer	IC (Instrument Cluster)
SP00638	Reset Service Information	IC (Instrument Cluster)
SP00639	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00640	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00641	Reset Odometer	IC (Instrument Cluster)
SP00642	Reset Service Information	IC (Instrument Cluster)
SP00643	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00644	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00645	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00646	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00647	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00648	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00649	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00650	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00651	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00652	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00653	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00654	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00655	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00656	Brake Switch Learn	PCM (Powertrain Control Module)
SP00657	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00658	Check PCM Odometer	PCM (Powertrain Control Module)
SP00659	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00660	Reset ECU	PCM (Powertrain Control Module)
SP00661	Reset Memory	PCM (Powertrain Control Module)

SP00662	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00663	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00664	Brake Switch Learn	PCM (Powertrain Control Module)
SP00665	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00666	Check PCM Odometer	PCM (Powertrain Control Module)
SP00667	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00668	Reset ECU	PCM (Powertrain Control Module)
SP00669	Reset Memory	PCM (Powertrain Control Module)
SP00670	Clear Self Learning Data	TCM (Transmission Control Module)
SP00671	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00672	Clear Self Learning Data	TCM (Transmission Control Module)
SP00673	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00674	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00675	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00676	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00677	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00678	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00679	Body Blinking Lights Configuration	BCM (Body Control Module)
SP00680	Body Blinking Lights Configuration	BCM (Body Control Module)
SP00681	Steering Angle Sensor	EPS (Electric Power Steering)
SP00682	Reset Odometer	IC (Instrument Cluster)
SP00683	Reset Service Information	IC (Instrument Cluster)
SP00684	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00685	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00686	Reset Odometer	IC (Instrument Cluster)
SP00687	Reset Service Information	IC (Instrument Cluster)
SP00688	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00689	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00690	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00691	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00692	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00693	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00694	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00695	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00696	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00697	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00698	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)

SP00699	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00700	Brake Switch Learn	PCM (Powertrain Control Module)
SP00701	Check PCM Odometer	PCM (Powertrain Control Module)
SP00702	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00703	Reset Memory	PCM (Powertrain Control Module)
SP00704	Throttle Body Self-Learning	PCM (Powertrain Control Module)
SP00705	Clear Self Learning Data	TCM (Transmission Control Module)
SP00706	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00707	Clear Self Learning Data	TCM (Transmission Control Module)
SP00708	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00709	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00710	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00711	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00712	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00713	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00714	Body Blinking Lights Configuration	BCM (Body Control Module)
SP00715	Body Blinking Lights Configuration	BCM (Body Control Module)
SP00716	Steering Angle Sensor	EPS (Electric Power Steering)
SP00717	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00718	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00719	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00720	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00721	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00722	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00723	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00724	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00725	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00726	Reset Odometer	IC (Instrument Cluster)
SP00727	Reset Service Information	IC (Instrument Cluster)
SP00728	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00729	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00730	Reset Odometer	IC (Instrument Cluster)
SP00731	Reset Service Information	IC (Instrument Cluster)
SP00732	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00733	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00734	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00735	Motorized Throttle Replacement	ECM (Engine Control Module)

SP00736	Injector/S Replacement	ECM (Engine Control Module)
SP00737	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00738	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00739	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00740	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00741	Injector/S Replacement	ECM (Engine Control Module)
SP00742	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00743	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00744	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00745	Injector Codes Read	ECM (Engine Control Module)
SP00746	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00747	Oil Change	ECM (Engine Control Module)
SP00748	EGR Valve Test	ECM (Engine Control Module)
SP00749	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00750	Throttle Valve Test	ECM (Engine Control Module)
SP00751	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00752	Oil Change	ECM (Engine Control Module)
SP00753	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00754	Injector Codes Read	ECM (Engine Control Module)
SP00755	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00756	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00757	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00758	EGR Valve Test	ECM (Engine Control Module)
SP00759	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00760	Throttle Valve Test	ECM (Engine Control Module)
SP00761	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00762	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00763	Injector Codes Read	ECM (Engine Control Module)
SP00764	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00765	Oil Change	ECM (Engine Control Module)
SP00766	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00767	EGR Valve Test	ECM (Engine Control Module)
SP00768	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00769	Throttle Valve Test	ECM (Engine Control Module)
SP00770	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00771	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00772	Injector Codes Read	ECM (Engine Control Module)
SP00773	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00774	Oil Change	ECM (Engine Control Module)

SP00775	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00776	EGR Valve Test	ECM (Engine Control Module)
SP00777	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00778	Throttle Valve Test	ECM (Engine Control Module)
SP00779	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00780	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00781	Injector Codes Read	ECM (Engine Control Module)
SP00782	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00783	Oil Change	ECM (Engine Control Module)
SP00784	EGR Valve Test	ECM (Engine Control Module)
SP00785	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00786	Throttle Valve Test	ECM (Engine Control Module)
SP00787	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00788	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00789	Oil Change	ECM (Engine Control Module)
SP00790	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00791	Injector/S Replacement	ECM (Engine Control Module)
SP00792	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00793	Waste Gate Valve Command	ECM (Engine Control Module)
SP00794	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00795	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00796	Oil Change	ECM (Engine Control Module)
SP00797	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00798	Clutch Pedal Learning	ECM (Engine Control Module)
SP00799	Injector/S Replacement	ECM (Engine Control Module)
SP00800	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00801	Waste Gate Valve Command	ECM (Engine Control Module)
SP00802	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00803	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00804	Oil Change	ECM (Engine Control Module)
SP00805	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00806	Injector/S Replacement	ECM (Engine Control Module)
SP00807	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00808	Waste Gate Valve Command	ECM (Engine Control Module)
SP00809	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00810	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00811	Injector/S Replacement	ECM (Engine Control Module)
SP00812	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00813	Motorized Throttle Replacement	ECM (Engine Control Module)

SP00814	Oil Change	ECM (Engine Control Module)
SP00815	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00816	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00817	Injector/S Replacement	ECM (Engine Control Module)
SP00818	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00819	Waste Gate Valve Command	ECM (Engine Control Module)
SP00820	Clutch Pedal Learning	ECM (Engine Control Module)
SP00821	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00822	Oil Change	ECM (Engine Control Module)
SP00823	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00824	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00825	Injector/S Replacement	ECM (Engine Control Module)
SP00826	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00827	Waste Gate Valve Command	ECM (Engine Control Module)
SP00828	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00829	Oil Change	ECM (Engine Control Module)
SP00830	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00831	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00832	Injector/S Replacement	ECM (Engine Control Module)
SP00833	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00834	Waste Gate Valve Command	ECM (Engine Control Module)
SP00835	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00836	Oil Change	ECM (Engine Control Module)
SP00837	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00838	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00839	Injector/S Replacement	ECM (Engine Control Module)
SP00840	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00841	Waste Gate Valve Command	ECM (Engine Control Module)
SP00842	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00843	Oil Change	ECM (Engine Control Module)
SP00844	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00845	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00846	Injector/S Replacement	ECM (Engine Control Module)
SP00847	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00848	Proxi Alignment Procedure	ECM (Engine Control Module)
SP00849	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00850	Injector Codes Read	ECM (Engine Control Module)
SP00851	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00852	Oil Change	ECM (Engine Control Module)

SP00853	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00854	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00855	EGR Valve Test	ECM (Engine Control Module)
SP00856	Throttle Valve Test	ECM (Engine Control Module)
SP00857	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00858	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00859	Injector/S Replacement	ECM (Engine Control Module)
SP00860	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00861	Clutch Pedal Learning	ECM (Engine Control Module)
SP00862	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00863	Oil Change	ECM (Engine Control Module)
SP00864	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00865	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00866	Injector/S Replacement	ECM (Engine Control Module)
SP00867	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00868	Waste Gate Valve Command	ECM (Engine Control Module)
SP00869	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00870	Injector Codes Read	ECM (Engine Control Module)
SP00871	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00872	Oil Change	ECM (Engine Control Module)
SP00873	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00874	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00875	EGR Valve Test	ECM (Engine Control Module)
SP00876	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00877	Throttle Valve Test	ECM (Engine Control Module)
SP00878	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00879	Injector Codes Read	ECM (Engine Control Module)
SP00880	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00881	Oil Change	ECM (Engine Control Module)
SP00882	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00883	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00884	EGR Valve Test	ECM (Engine Control Module)
SP00885	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00886	Throttle Valve Test	ECM (Engine Control Module)
SP00887	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00888	Oil Change	ECM (Engine Control Module)
SP00889	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00890	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00891	Injector/S Replacement	ECM (Engine Control Module)

SP00892	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00893	Waste Gate Valve Command	ECM (Engine Control Module)
SP00894	Clutch Pedal Learning	ECM (Engine Control Module)
SP00895	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00896	Oil Change	ECM (Engine Control Module)
SP00897	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00898	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00899	Injector/S Replacement	ECM (Engine Control Module)
SP00900	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00901	Waste Gate Valve Command	ECM (Engine Control Module)
SP00902	Motorized Throttle Learning	ECM (Engine Control Module)
SP00903	Reset Mixture Adaptation Values	ECM (Engine Control Module)
SP00904	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00905	Oil Change	ECM (Engine Control Module)
SP00906	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00907	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00908	Injector/S Replacement	ECM (Engine Control Module)
SP00909	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00910	Waste Gate Valve Command	ECM (Engine Control Module)
SP00911	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00912	Injector Codes Read	ECM (Engine Control Module)
SP00913	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00914	Oil Change	ECM (Engine Control Module)
SP00915	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00916	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00917	EGR Valve Test	ECM (Engine Control Module)
SP00918	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00919	Throttle Valve Test	ECM (Engine Control Module)
SP00920	Check PCM Odometer	PCM (Powertrain Control Module)
SP00921	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP00922	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP00923	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00924	EGR System Test	PCM (Powertrain Control Module)
SP00925	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP00926	Set Engine RPM	PCM (Powertrain Control Module)
SP00927	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00928	Brake Switch Learn	PCM (Powertrain Control Module)
SP00929	Check PCM Odometer	PCM (Powertrain Control Module)
SP00930	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)

SP00931	Reset Memory	PCM (Powertrain Control Module)
SP00932	Throttle Body Self-Learning	PCM (Powertrain Control Module)
SP00933	Check PCM Odometer	PCM (Powertrain Control Module)
SP00934	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP00935	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP00936	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00937	EGR System Test	PCM (Powertrain Control Module)
SP00938	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP00939	Set Engine RPM	PCM (Powertrain Control Module)
SP00940	Check PCM Odometer	PCM (Powertrain Control Module)
SP00941	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP00942	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP00943	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00944	EGR System Test	PCM (Powertrain Control Module)
SP00945	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP00946	Set Engine RPM	PCM (Powertrain Control Module)
SP00947	Check PCM Odometer	PCM (Powertrain Control Module)
SP00948	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP00949	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP00950	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00951	EGR System Test	PCM (Powertrain Control Module)
SP00952	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP00953	Set Engine RPM	PCM (Powertrain Control Module)
SP00954	ECU Substitution	ABS (Anti-Lock Braking System)
SP00955	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00956	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00957	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
SP00958	ECU Substitution	ABS (Anti-Lock Braking System)
SP00959	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00960	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00961	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
SP00962	Reset Odometer	IC (Instrument Cluster)
SP00963	Reset Service Information	IC (Instrument Cluster)
SP00964	Reset Odometer	IC (Instrument Cluster)
SP00965	Reset Service Information	IC (Instrument Cluster)
SP00966	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00967	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00968	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)

SP00969	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP00970	Steering Angle Sensor	EPS (Electric Power Steering)
SP00971	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00972	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00973	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00974	Vehicle Configuration Reset	ECM (Engine Control Module)
SP00975	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00976	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00977	Injector/S Replacement	ECM (Engine Control Module)
SP00978	Oil Change	ECM (Engine Control Module)
SP00979	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00980	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00981	Oil Change	ECM (Engine Control Module)
SP00982	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00983	Injector Codes Read	ECM (Engine Control Module)
SP00984	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00985	EGR Valve Test	ECM (Engine Control Module)
SP00986	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00987	Throttle Valve Test	ECM (Engine Control Module)
SP00988	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00989	Phonic Wheel Reset	ECM (Engine Control Module)
SP00990	Reset Phases Front	ECM (Engine Control Module)
SP00991	Motorized Throttle Learning	ECM (Engine Control Module)
SP00992	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00993	Clutch Pedal Learning	ECM (Engine Control Module)
SP00994	Motorized Throttle Learning	ECM (Engine Control Module)
SP00995	Phonic Wheel Reset	ECM (Engine Control Module)
SP00996	Reset Phases Front	ECM (Engine Control Module)
SP00997	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00998	Motorized Throttle Learning	ECM (Engine Control Module)
SP00999	Phonic Wheel Reset	ECM (Engine Control Module)
SP01000	Reset Phases Front	ECM (Engine Control Module)
SP01001	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01002	Oil Change	ECM (Engine Control Module)
SP01003	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01004	Injector Codes Read	ECM (Engine Control Module)
SP01005	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01006	EGR Valve Test	ECM (Engine Control Module)

SP01007	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01008	Throttle Valve Test	ECM (Engine Control Module)
SP01009	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01010	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01011	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01012	Oil Change	ECM (Engine Control Module)
SP01013	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP01014	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01015	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01016	Motorized Throttle Learning	ECM (Engine Control Module)
SP01017	Reset Phases Front	ECM (Engine Control Module)
SP01018	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01019	Motorized Throttle Learning	ECM (Engine Control Module)
SP01020	Phonic Wheel Reset	ECM (Engine Control Module)
SP01021	Reset Phases Front	ECM (Engine Control Module)
SP01022	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01023	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01024	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01025	Oil Change	ECM (Engine Control Module)
SP01026	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP01027	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01028	Oil Change	ECM (Engine Control Module)
SP01029	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01030	Injector Codes Read	ECM (Engine Control Module)
SP01031	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01032	EGR Valve Test	ECM (Engine Control Module)
SP01033	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01034	Throttle Valve Test	ECM (Engine Control Module)
SP01035	Speed Limit Setting	ECM (Engine Control Module)
SP01036	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01037	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01038	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01039	Oil Change	ECM (Engine Control Module)
SP01040	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP01041	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01042	Motorized Throttle Learning	ECM (Engine Control Module)
SP01043	Phonic Wheel Reset	ECM (Engine Control Module)
SP01044	Reset Phases Front	ECM (Engine Control Module)
SP01045	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP01046	Injector Codes Read	ECM (Engine Control Module)
SP01047	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01048	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01049	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01050	Clutch Pedal Learning	ECM (Engine Control Module)
SP01051	Motorized Throttle Learning	ECM (Engine Control Module)
SP01052	Phonic Wheel Reset	ECM (Engine Control Module)
SP01053	Reset Phases Front	ECM (Engine Control Module)
SP01054	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01055	Clutch Pedal Learning	ECM (Engine Control Module)
SP01056	Motorized Throttle Learning	ECM (Engine Control Module)
SP01057	Phonic Wheel Reset	ECM (Engine Control Module)
SP01058	Reset Phases Front	ECM (Engine Control Module)
SP01059	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01060	Overboost Counter Reset	ECM (Engine Control Module)
SP01061	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01062	Oil Change	ECM (Engine Control Module)
SP01063	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01064	Injector Codes Read	ECM (Engine Control Module)
SP01065	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01066	EGR Valve Test	ECM (Engine Control Module)
SP01067	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01068	Throttle Valve Test	ECM (Engine Control Module)
SP01069	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01070	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01071	Overboost Counter Reset	ECM (Engine Control Module)
SP01072	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01073	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01074	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01075	Oil Change	ECM (Engine Control Module)
SP01076	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP01077	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01078	Oil Change	ECM (Engine Control Module)
SP01079	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01080	Injector Codes Read	ECM (Engine Control Module)
SP01081	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01082	EGR Valve Test	ECM (Engine Control Module)
SP01083	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)

SP01084	Throttle Valve Test	ECM (Engine Control Module)
SP01085	Speed Limit Setting	ECM (Engine Control Module)
SP01086	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01087	Oil Change	ECM (Engine Control Module)
SP01088	Injector Codes Read	ECM (Engine Control Module)
SP01089	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01090	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01091	Speed Limit Setting	ECM (Engine Control Module)
SP01092	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01093	Injector Codes Read	ECM (Engine Control Module)
SP01094	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01095	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01096	Speed Limit Setting	ECM (Engine Control Module)
SP01097	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01098	Motorized Throttle Learning	ECM (Engine Control Module)
SP01099	Phonic Wheel Reset	ECM (Engine Control Module)
SP01100	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01101	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01102	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP01103	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01104	Motorized Throttle Replacement	ECM (Engine Control Module)
SP01105	Phonic Wheel Reset	ECM (Engine Control Module)
SP01106	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01107	Clutch Pedal Learning	ECM (Engine Control Module)
SP01108	Motorized Throttle Learning	ECM (Engine Control Module)
SP01109	Phonic Wheel Reset	ECM (Engine Control Module)
SP01110	Reset Phases Front	ECM (Engine Control Module)
SP01111	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01112	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01113	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01114	Oil Change	ECM (Engine Control Module)
SP01115	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP01116	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01117	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01118	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01119	Injector Codes Read	ECM (Engine Control Module)
SP01120	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01121	Oil Change	ECM (Engine Control Module)

SP01122	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01123	EGR Valve Test	ECM (Engine Control Module)
SP01124	Throttle Valve Test	ECM (Engine Control Module)
SP01125	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01126	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01127	Injector/S Replacement	ECM (Engine Control Module)
SP01128	Oil Change	ECM (Engine Control Module)
SP01129	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01130	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP01131	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01132	Injector Codes Read	ECM (Engine Control Module)
SP01133	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01134	Oil Change	ECM (Engine Control Module)
SP01135	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01136	EGR Valve Test	ECM (Engine Control Module)
SP01137	Throttle Valve Test	ECM (Engine Control Module)
SP01138	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01139	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01140	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01141	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01142	Clutch Pedal Learning	ECM (Engine Control Module)
SP01143	Motorized Throttle Learning	ECM (Engine Control Module)
SP01144	Phonic Wheel Reset	ECM (Engine Control Module)
SP01145	Reset Phases Front	ECM (Engine Control Module)
SP01146	Phonic Wheel Reset	ECM (Engine Control Module)
SP01147	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01148	Motorized Throttle Replacement	ECM (Engine Control Module)
SP01149	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01150	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01151	Injector Codes Read	ECM (Engine Control Module)
SP01152	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01153	Oil Change	ECM (Engine Control Module)
SP01154	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01155	EGR Valve Test	ECM (Engine Control Module)
SP01156	Throttle Valve Test	ECM (Engine Control Module)
SP01157	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01158	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01159	Injector Codes Read	ECM (Engine Control Module)
SP01160	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP01161	Oil Change	ECM (Engine Control Module)
SP01162	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01163	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01164	Speed Limit Setting	ECM (Engine Control Module)
SP01165	EGR Valve Test	ECM (Engine Control Module)
SP01166	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01167	Throttle Valve Test	ECM (Engine Control Module)
SP01168	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01169	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01170	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01171	Clutch Pedal Learning	ECM (Engine Control Module)
SP01172	Motorized Throttle Learning	ECM (Engine Control Module)
SP01173	Phonic Wheel Reset	ECM (Engine Control Module)
SP01174	Reset Phases Front	ECM (Engine Control Module)
SP01175	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01176	Clutch Pedal Learning	ECM (Engine Control Module)
SP01177	Motorized Throttle Learning	ECM (Engine Control Module)
SP01178	Phonic Wheel Reset	ECM (Engine Control Module)
SP01179	Reset Phases Front	ECM (Engine Control Module)
SP01180	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01181	Injector Codes Read	ECM (Engine Control Module)
SP01182	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01183	Oil Change	ECM (Engine Control Module)
SP01184	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01185	EGR Valve Test	ECM (Engine Control Module)
SP01186	Throttle Valve Test	ECM (Engine Control Module)
SP01187	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01188	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01189	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01190	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01191	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01192	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01193	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01194	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01195	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01196	Static Test	ABS (Anti-Lock Braking System)
SP01197	Static Test	ABS (Anti-Lock Braking System)
SP01198	Longitudinal/Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01199	Static Test	ABS (Anti-Lock Braking System)

SP01200	TPMS Calibration	ABS (Anti-Lock Braking System)
SP01201	Static Test	ABS (Anti-Lock Braking System)
SP01202	Static Test	ABS (Anti-Lock Braking System)
SP01203	Ecu Replacement	ABS (Anti-Lock Braking System)
SP01204	Electric Park Brake Management	ABS (Anti-Lock Braking System)
SP01205	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01206	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01207	Longitudinal/Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01208	Static Test	ABS (Anti-Lock Braking System)
SP01209	TPMS Calibration	ABS (Anti-Lock Braking System)
SP01210	Steering Angle Calibration	EPS (Electric Power Steering)
SP01211	Steering Angle Calibration	EPS (Electric Power Steering)
SP01212	Steering Angle Calibration	EPS (Electric Power Steering)
SP01213	Steering Angle Calibration	EPS (Electric Power Steering)
SP01214	Steering Angle Calibration	EPS (Electric Power Steering)
SP01215	Reset Odometer	IC (Instrument Cluster)
SP01216	Reset Service Information	IC (Instrument Cluster)
SP01217	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01218	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01219	Reset Odometer	IC (Instrument Cluster)
SP01220	Reset Service Information	IC (Instrument Cluster)
SP01221	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01222	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01223	Reset Odometer	IC (Instrument Cluster)
SP01224	Reset Service Information	IC (Instrument Cluster)
SP01225	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01226	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01227	Reset Odometer	IC (Instrument Cluster)
SP01228	Reset Service Information	IC (Instrument Cluster)
SP01229	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01230	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01231	Reset Odometer	IC (Instrument Cluster)
SP01232	Reset Service Information	IC (Instrument Cluster)
SP01233	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01234	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01235	Reset Odometer	IC (Instrument Cluster)
SP01236	Reset Service Information	IC (Instrument Cluster)
SP01237	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01238	Enable Seat Belts Reminder	IC (Instrument Cluster)

SP01239	Reset Odometer	IC (Instrument Cluster)
SP01240	Reset Service Information	IC (Instrument Cluster)
SP01241	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01242	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01243	Reset Odometer	IC (Instrument Cluster)
SP01244	Reset Service Information	IC (Instrument Cluster)
SP01245	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01246	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01247	Speed Limit Setting	ECM (Engine Control Module)
SP01248	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01249	Oil Change	ECM (Engine Control Module)
SP01250	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01251	Injector Codes Read	ECM (Engine Control Module)
SP01252	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01253	EGR Valve Test	ECM (Engine Control Module)
SP01254	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01255	Throttle Valve Test	ECM (Engine Control Module)
SP01256	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01257	Oil Change	ECM (Engine Control Module)
SP01258	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01259	Injector Codes Read	ECM (Engine Control Module)
SP01260	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01261	EGR Valve Test	ECM (Engine Control Module)
SP01262	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01263	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01264	Speed Limit Setting	ECM (Engine Control Module)
SP01265	Oil Change	ECM (Engine Control Module)
SP01266	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01267	Injector Codes Read	ECM (Engine Control Module)
SP01268	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01269	EGR Valve Test	ECM (Engine Control Module)
SP01270	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01271	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01272	Speed Limit Setting	ECM (Engine Control Module)
SP01273	Oil Change	ECM (Engine Control Module)
SP01274	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01275	Injector Codes Read	ECM (Engine Control Module)
SP01276	Phonic Wheel Replacement	ECM (Engine Control Module)

SP01277	EGR Valve Test	ECM (Engine Control Module)
SP01278	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01279	Throttle Valve Test	ECM (Engine Control Module)
SP01280	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01281	Speed Limit Setting	ECM (Engine Control Module)
SP01282	Injector Codes Read	ECM (Engine Control Module)
SP01283	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01284	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01285	Speed Limit Setting	ECM (Engine Control Module)
SP01286	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01287	Motorized Throttle Learning	ECM (Engine Control Module)
SP01288	Speed Limit Setting	ECM (Engine Control Module)
SP01289	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01290	Oil Change	ECM (Engine Control Module)
SP01291	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01292	Injector Codes Read	ECM (Engine Control Module)
SP01293	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01294	EGR Valve Test	ECM (Engine Control Module)
SP01295	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01296	Throttle Valve Test	ECM (Engine Control Module)
SP01297	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01298	Oil Change	ECM (Engine Control Module)
SP01299	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01300	Injector Codes Read	ECM (Engine Control Module)
SP01301	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01302	EGR Valve Test	ECM (Engine Control Module)
SP01303	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01304	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01305	Speed Limit Setting	ECM (Engine Control Module)
SP01306	Oil Change	ECM (Engine Control Module)
SP01307	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01308	Injector Codes Read	ECM (Engine Control Module)
SP01309	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01310	EGR Valve Test	ECM (Engine Control Module)
SP01311	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01312	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01313	Speed Limit Setting	ECM (Engine Control Module)
SP01314	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP01315	Injector Codes Read	ECM (Engine Control Module)
SP01316	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01317	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01318	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01319	Speed Limit Setting	ECM (Engine Control Module)
SP01320	Oil Change	ECM (Engine Control Module)
SP01321	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01322	Injector Codes Read	ECM (Engine Control Module)
SP01323	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01324	EGR Valve Test	ECM (Engine Control Module)
SP01325	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01326	Throttle Valve Test	ECM (Engine Control Module)
SP01327	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01328	Oil Change	ECM (Engine Control Module)
SP01329	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01330	Injector Codes Read	ECM (Engine Control Module)
SP01331	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01332	EGR Valve Test	ECM (Engine Control Module)
SP01333	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01334	Throttle Valve Test	ECM (Engine Control Module)
SP01335	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01336	Oil Change	ECM (Engine Control Module)
SP01337	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01338	Injector Codes Read	ECM (Engine Control Module)
SP01339	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01340	EGR Valve Test	ECM (Engine Control Module)
SP01341	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01342	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01343	Speed Limit Setting	ECM (Engine Control Module)
SP01344	Injector Codes Read	ECM (Engine Control Module)
SP01345	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01346	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01347	Speed Limit Setting	ECM (Engine Control Module)
SP01348	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01349	Oil Change	ECM (Engine Control Module)
SP01350	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01351	Injector Codes Read	ECM (Engine Control Module)
SP01352	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01353	EGR Valve Test	ECM (Engine Control Module)

SP01354	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01355	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01356	Speed Limit Setting	ECM (Engine Control Module)
SP01357	Oil Change	ECM (Engine Control Module)
SP01358	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01359	Injector Codes Read	ECM (Engine Control Module)
SP01360	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01361	EGR Valve Test	ECM (Engine Control Module)
SP01362	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01363	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01364	Speed Limit Setting	ECM (Engine Control Module)
SP01365	Oil Change	ECM (Engine Control Module)
SP01366	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01367	Injector Codes Read	ECM (Engine Control Module)
SP01368	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01369	EGR Valve Test	ECM (Engine Control Module)
SP01370	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01371	Speed Limit Setting	ECM (Engine Control Module)
SP01372	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01373	Oil Change	ECM (Engine Control Module)
SP01374	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01375	Injector Codes Read	ECM (Engine Control Module)
SP01376	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01377	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01378	EGR Valve Test	ECM (Engine Control Module)
SP01379	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01380	Throttle Valve Test	ECM (Engine Control Module)
SP01381	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01382	Speed Limit Setting	ECM (Engine Control Module)
SP01383	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01384	Oil Change	ECM (Engine Control Module)
SP01385	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01386	Injector Codes Read	ECM (Engine Control Module)
SP01387	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01388	EGR Valve Test	ECM (Engine Control Module)
SP01389	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01390	Throttle Valve Test	ECM (Engine Control Module)
SP01391	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01392	Oil Change	ECM (Engine Control Module)

SP01393	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01394	Injector Codes Read	ECM (Engine Control Module)
SP01395	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01396	EGR Valve Test	ECM (Engine Control Module)
SP01397	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01398	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01399	Speed Limit Setting	ECM (Engine Control Module)
SP01400	Oil Change	ECM (Engine Control Module)
SP01401	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01402	Injector Codes Read	ECM (Engine Control Module)
SP01403	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01404	EGR Valve Test	ECM (Engine Control Module)
SP01405	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01406	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01407	Speed Limit Setting	ECM (Engine Control Module)
SP01408	Oil Change	ECM (Engine Control Module)
SP01409	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01410	Injector Codes Read	ECM (Engine Control Module)
SP01411	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01412	EGR Valve Test	ECM (Engine Control Module)
SP01413	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01414	Throttle Valve Test	ECM (Engine Control Module)
SP01415	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01416	Speed Limit Setting	ECM (Engine Control Module)
SP01417	Oil Change	ECM (Engine Control Module)
SP01418	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01419	Injector Codes Read	ECM (Engine Control Module)
SP01420	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01421	EGR Valve Test	ECM (Engine Control Module)
SP01422	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01423	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01424	Speed Limit Setting	ECM (Engine Control Module)
SP01425	Speed Limit Setting	ECM (Engine Control Module)
SP01426	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01427	Speed Limit Setting	ECM (Engine Control Module)
SP01428	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01429	Oil Change	ECM (Engine Control Module)
SP01430	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01431	Injector Codes Read	ECM (Engine Control Module)

SP01432	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01433	EGR Valve Test	ECM (Engine Control Module)
SP01434	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01435	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01436	Speed Limit Setting	ECM (Engine Control Module)
SP01437	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01438	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP01439	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01440	Speed Limit Setting	ECM (Engine Control Module)
SP01441	Oil Change	ECM (Engine Control Module)
SP01442	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01443	Injector Codes Read	ECM (Engine Control Module)
SP01444	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01445	EGR Valve Test	ECM (Engine Control Module)
SP01446	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01447	Throttle Valve Test	ECM (Engine Control Module)
SP01448	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01449	Speed Limit Setting	ECM (Engine Control Module)
SP01450	Oil Change	ECM (Engine Control Module)
SP01451	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01452	Injector Codes Read	ECM (Engine Control Module)
SP01453	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01454	EGR Valve Test	ECM (Engine Control Module)
SP01455	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01456	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01457	Speed Limit Setting	ECM (Engine Control Module)
SP01458	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01459	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01460	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01461	Speed Limit Setting	ECM (Engine Control Module)
SP01462	Oil Change	ECM (Engine Control Module)
SP01463	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01464	Injector Codes Read	ECM (Engine Control Module)
SP01465	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01466	EGR Valve Test	ECM (Engine Control Module)
SP01467	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01468	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01469	Speed Limit Setting	ECM (Engine Control Module)
SP01470	Oil Change	ECM (Engine Control Module)

SP01471	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01472	Injector Codes Read	ECM (Engine Control Module)
SP01473	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01474	EGR Valve Test	ECM (Engine Control Module)
SP01475	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01476	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01477	Speed Limit Setting	ECM (Engine Control Module)
SP01478	Oil Change	ECM (Engine Control Module)
SP01479	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01480	Injector Codes Read	ECM (Engine Control Module)
SP01481	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01482	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01483	EGR Valve Test	ECM (Engine Control Module)
SP01484	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01485	Throttle Valve Test	ECM (Engine Control Module)
SP01486	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01487	Speed Limit Setting	ECM (Engine Control Module)
SP01488	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01489	Oil Change	ECM (Engine Control Module)
SP01490	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01491	Injector Codes Read	ECM (Engine Control Module)
SP01492	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01493	EGR Valve Test	ECM (Engine Control Module)
SP01494	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01495	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01496	Speed Limit Setting	ECM (Engine Control Module)
SP01497	Oil Change	ECM (Engine Control Module)
SP01498	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01499	Injector Codes Read	ECM (Engine Control Module)
SP01500	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01501	EGR Valve Test	ECM (Engine Control Module)
SP01502	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01503	Throttle Valve Test	ECM (Engine Control Module)
SP01504	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01505	Overboost Counter Reset	ECM (Engine Control Module)
SP01506	Speed Limit Setting	ECM (Engine Control Module)
SP01507	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01508	Oil Change	ECM (Engine Control Module)
SP01509	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP01510	Injector Codes Read	ECM (Engine Control Module)
SP01511	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01512	EGR Valve Test	ECM (Engine Control Module)
SP01513	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01514	Throttle Valve Test	ECM (Engine Control Module)
SP01515	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01516	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01517	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP01518	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01519	Speed Limit Setting	ECM (Engine Control Module)
SP01520	Oil Change	ECM (Engine Control Module)
SP01521	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01522	Injector Codes Read	ECM (Engine Control Module)
SP01523	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01524	EGR Valve Test	ECM (Engine Control Module)
SP01525	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01526	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01527	Speed Limit Setting	ECM (Engine Control Module)
SP01528	Oil Change	ECM (Engine Control Module)
SP01529	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01530	Injector Codes Read	ECM (Engine Control Module)
SP01531	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01532	EGR Valve Test	ECM (Engine Control Module)
SP01533	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01534	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01535	Speed Limit Setting	ECM (Engine Control Module)
SP01536	Overboost Counter Reset	ECM (Engine Control Module)
SP01537	Speed Limit Setting	ECM (Engine Control Module)
SP01538	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01539	Oil Change	ECM (Engine Control Module)
SP01540	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01541	Injector Codes Read	ECM (Engine Control Module)
SP01542	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01543	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01544	EGR Valve Test	ECM (Engine Control Module)
SP01545	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01546	Throttle Valve Test	ECM (Engine Control Module)
SP01547	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01548	Speed Limit Setting	ECM (Engine Control Module)

SP01549	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01550	Oil Change	ECM (Engine Control Module)
SP01551	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01552	Injector Codes Read	ECM (Engine Control Module)
SP01553	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01554	EGR Valve Test	ECM (Engine Control Module)
SP01555	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01556	Throttle Valve Test	ECM (Engine Control Module)
SP01557	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01558	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01559	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01560	Injector Codes Read	ECM (Engine Control Module)
SP01561	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01562	Oil Change	ECM (Engine Control Module)
SP01563	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01564	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01565	EGR Valve Test	ECM (Engine Control Module)
SP01566	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01567	Throttle Valve Test	ECM (Engine Control Module)
SP01568	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01569	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01570	Injector Codes Read	ECM (Engine Control Module)
SP01571	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01572	Oil Change	ECM (Engine Control Module)
SP01573	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01574	EGR Valve Test	ECM (Engine Control Module)
SP01575	Throttle Valve Test	ECM (Engine Control Module)
SP01576	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01577	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01578	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01579	Injector Codes Read	ECM (Engine Control Module)
SP01580	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01581	Oil Change	ECM (Engine Control Module)
SP01582	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01583	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01584	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01585	Speed Limit Setting	ECM (Engine Control Module)
SP01586	EGR Valve Test	ECM (Engine Control Module)
SP01587	EGR Low Pressure Valve Test	ECM (Engine Control Module)

SP01588	Throttle Valve Test	ECM (Engine Control Module)
SP01589	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01590	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01591	Injector Codes Read	ECM (Engine Control Module)
SP01592	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01593	Oil Change	ECM (Engine Control Module)
SP01594	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01595	EGR Valve Test	ECM (Engine Control Module)
SP01596	Throttle Valve Test	ECM (Engine Control Module)
SP01597	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01598	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01599	Injector Codes Read	ECM (Engine Control Module)
SP01600	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01601	Oil Change	ECM (Engine Control Module)
SP01602	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01603	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01604	EGR Valve Test	ECM (Engine Control Module)
SP01605	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01606	Throttle Valve Test	ECM (Engine Control Module)
SP01607	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01608	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01609	Injector Codes Read	ECM (Engine Control Module)
SP01610	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01611	Oil Change	ECM (Engine Control Module)
SP01612	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01613	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01614	EGR Valve Test	ECM (Engine Control Module)
SP01615	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01616	Throttle Valve Test	ECM (Engine Control Module)
SP01617	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01618	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01619	Injector Codes Read	ECM (Engine Control Module)
SP01620	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01621	Oil Change	ECM (Engine Control Module)
SP01622	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01623	EGR Valve Test	ECM (Engine Control Module)
SP01624	Throttle Valve Test	ECM (Engine Control Module)
SP01625	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01626	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP01627	Injector Codes Read	ECM (Engine Control Module)
SP01628	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01629	Oil Change	ECM (Engine Control Module)
SP01630	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01631	EGR Valve Test	ECM (Engine Control Module)
SP01632	Throttle Valve Test	ECM (Engine Control Module)
SP01633	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01634	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01635	Injector Codes Read	ECM (Engine Control Module)
SP01636	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01637	Oil Change	ECM (Engine Control Module)
SP01638	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01639	EGR Valve Test	ECM (Engine Control Module)
SP01640	Throttle Valve Test	ECM (Engine Control Module)
SP01641	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01642	Inlet Valve Calibration	ABS (Anti-Lock Braking System)
SP01643	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01644	Pilot Valve Calibration	ABS (Anti-Lock Braking System)
SP01645	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01646	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP01647	Inlet Valve Calibration	ABS (Anti-Lock Braking System)
SP01648	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01649	Pilot Valve Calibration	ABS (Anti-Lock Braking System)
SP01650	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01651	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP01652	Inlet Valve Calibration	ABS (Anti-Lock Braking System)
SP01653	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01654	Pilot Valve Calibration	ABS (Anti-Lock Braking System)
SP01655	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01656	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP01657	Reset Odometer	IC (Instrument Cluster)
SP01658	Reset Service Information	IC (Instrument Cluster)
SP01659	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01660	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01661	Reset Odometer	IC (Instrument Cluster)
SP01662	Reset Service Information	IC (Instrument Cluster)
SP01663	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01664	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01665	Reset Odometer	IC (Instrument Cluster)

SP01666	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01667	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01668	Write Front And Rear Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP01669	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP01670	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP01671	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP01672	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP01673	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01674	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01675	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01676	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01677	Oil Change	ECM (Engine Control Module)
SP01678	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01679	Injector Codes Read	ECM (Engine Control Module)
SP01680	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01681	Speed Limit Setting	ECM (Engine Control Module)
SP01682	Speed Limit Setting	ECM (Engine Control Module)
SP01683	EGR Valve Test	ECM (Engine Control Module)
SP01684	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01685	Throttle Valve Test	ECM (Engine Control Module)
SP01686	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01687	Oil Change	ECM (Engine Control Module)
SP01688	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01689	Injector Codes Read	ECM (Engine Control Module)
SP01690	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01691	EGR Valve Test	ECM (Engine Control Module)
SP01692	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01693	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01694	Speed Limit Setting	ECM (Engine Control Module)
SP01695	Motorized Throttle Learning	ECM (Engine Control Module)
SP01696	Speed Limit Setting	ECM (Engine Control Module)
SP01697	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01698	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01699	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP01700	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01701	Speed Limit Setting	ECM (Engine Control Module)
SP01702	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01703	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01704	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP01705	Speed Limit Setting	ECM (Engine Control Module)
SP01706	Oil Change	ECM (Engine Control Module)
SP01707	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01708	Injector Codes Read	ECM (Engine Control Module)
SP01709	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01710	EGR Valve Test	ECM (Engine Control Module)
SP01711	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01712	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01713	Speed Limit Setting	ECM (Engine Control Module)
SP01714	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01715	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP01716	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01717	Speed Limit Setting	ECM (Engine Control Module)
SP01718	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01719	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01720	Injector Codes Read	ECM (Engine Control Module)
SP01721	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01722	Oil Change	ECM (Engine Control Module)
SP01723	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01724	Speed Limit Setting	ECM (Engine Control Module)
SP01725	EGR Valve Test	ECM (Engine Control Module)
SP01726	Throttle Valve Test	ECM (Engine Control Module)
SP01727	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01728	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01729	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01730	Injector Codes Read	ECM (Engine Control Module)
SP01731	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01732	Oil Change	ECM (Engine Control Module)
SP01733	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01734	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01735	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01736	Speed Limit Setting	ECM (Engine Control Module)
SP01737	EGR Valve Test	ECM (Engine Control Module)
SP01738	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01739	Throttle Valve Test	ECM (Engine Control Module)
SP01740	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01741	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01742	Injector Codes Read	ECM (Engine Control Module)
SP01743	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP01744	Oil Change	ECM (Engine Control Module)
SP01745	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01746	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01747	EGR Valve Test	ECM (Engine Control Module)
SP01748	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01749	Throttle Valve Test	ECM (Engine Control Module)
SP01750	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01751	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01752	Injector Codes Read	ECM (Engine Control Module)
SP01753	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01754	Oil Change	ECM (Engine Control Module)
SP01755	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01756	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01757	EGR Valve Test	ECM (Engine Control Module)
SP01758	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01759	Throttle Valve Test	ECM (Engine Control Module)
SP01760	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01761	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01762	Injector Codes Read	ECM (Engine Control Module)
SP01763	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01764	Oil Change	ECM (Engine Control Module)
SP01765	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01766	Speed Limit Setting	ECM (Engine Control Module)
SP01767	EGR Valve Test	ECM (Engine Control Module)
SP01768	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01769	Throttle Valve Test	ECM (Engine Control Module)
SP01770	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01771	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01772	Injector Codes Read	ECM (Engine Control Module)
SP01773	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01774	Oil Change	ECM (Engine Control Module)
SP01775	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01776	EGR Valve Test	ECM (Engine Control Module)
SP01777	Throttle Valve Test	ECM (Engine Control Module)
SP01778	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01779	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01780	Injector Codes Read	ECM (Engine Control Module)
SP01781	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP01782	Oil Change	ECM (Engine Control Module)
SP01783	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01784	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01785	EGR Valve Test	ECM (Engine Control Module)
SP01786	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01787	Throttle Valve Test	ECM (Engine Control Module)
SP01788	Oil Change	ECM (Engine Control Module)
SP01789	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01790	Injector Codes Read	ECM (Engine Control Module)
SP01791	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01792	EGR Valve Test	ECM (Engine Control Module)
SP01793	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01794	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01795	Speed Limit Setting	ECM (Engine Control Module)
SP01796	Oil Change	ECM (Engine Control Module)
SP01797	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01798	Injector Codes Read	ECM (Engine Control Module)
SP01799	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01800	EGR Valve Test	ECM (Engine Control Module)
SP01801	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01802	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01803	Speed Limit Setting	ECM (Engine Control Module)
SP01804	Oil Change	ECM (Engine Control Module)
SP01805	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01806	Injector Codes Read	ECM (Engine Control Module)
SP01807	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01808	EGR Valve Test	ECM (Engine Control Module)
SP01809	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01810	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01811	Speed Limit Setting	ECM (Engine Control Module)
SP01812	Oil Change	ECM (Engine Control Module)
SP01813	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01814	Injector Codes Read	ECM (Engine Control Module)
SP01815	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01816	EGR Valve Test	ECM (Engine Control Module)
SP01817	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01818	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01819	Speed Limit Setting	ECM (Engine Control Module)
SP01820	Oil Change	ECM (Engine Control Module)

SP01821	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01822	Injector Codes Read	ECM (Engine Control Module)
SP01823	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01824	EGR Valve Test	ECM (Engine Control Module)
SP01825	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01826	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01827	Speed Limit Setting	ECM (Engine Control Module)
SP01828	Oil Change	ECM (Engine Control Module)
SP01829	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01830	Injector Codes Read	ECM (Engine Control Module)
SP01831	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01832	EGR Valve Test	ECM (Engine Control Module)
SP01833	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01834	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01835	Speed Limit Setting	ECM (Engine Control Module)
SP01836	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01837	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01838	Injector Codes Read	ECM (Engine Control Module)
SP01839	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01840	Oil Change	ECM (Engine Control Module)
SP01841	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01842	EGR Valve Test	ECM (Engine Control Module)
SP01843	Throttle Valve Test	ECM (Engine Control Module)
SP01844	Oil Change	ECM (Engine Control Module)
SP01845	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01846	Injector Codes Read	ECM (Engine Control Module)
SP01847	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01848	EGR Valve Test	ECM (Engine Control Module)
SP01849	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01850	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01851	Speed Limit Setting	ECM (Engine Control Module)
SP01852	Oil Change	ECM (Engine Control Module)
SP01853	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01854	Injector Codes Read	ECM (Engine Control Module)
SP01855	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01856	EGR Valve Test	ECM (Engine Control Module)
SP01857	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01858	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP01859	Speed Limit Setting	ECM (Engine Control Module)
SP01860	Oil Change	ECM (Engine Control Module)
SP01861	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01862	Injector Codes Read	ECM (Engine Control Module)
SP01863	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01864	EGR Valve Test	ECM (Engine Control Module)
SP01865	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01866	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01867	Speed Limit Setting	ECM (Engine Control Module)
SP01868	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01869	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01870	Injector Codes Read	ECM (Engine Control Module)
SP01871	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01872	Oil Change	ECM (Engine Control Module)
SP01873	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01874	EGR Valve Test	ECM (Engine Control Module)
SP01875	Throttle Valve Test	ECM (Engine Control Module)
SP01876	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01877	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01878	Injector Codes Read	ECM (Engine Control Module)
SP01879	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01880	Oil Change	ECM (Engine Control Module)
SP01881	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01882	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01883	Speed Limit Setting	ECM (Engine Control Module)
SP01884	EGR Valve Test	ECM (Engine Control Module)
SP01885	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01886	Throttle Valve Test	ECM (Engine Control Module)
SP01887	Oil Change	ECM (Engine Control Module)
SP01888	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01889	Injector Codes Read	ECM (Engine Control Module)
SP01890	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01891	EGR Valve Test	ECM (Engine Control Module)
SP01892	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01893	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01894	Speed Limit Setting	ECM (Engine Control Module)
SP01895	Oil Change	ECM (Engine Control Module)
SP01896	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP01897	Injector Codes Read	ECM (Engine Control Module)
SP01898	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01899	EGR Valve Test	ECM (Engine Control Module)
SP01900	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01901	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01902	Speed Limit Setting	ECM (Engine Control Module)
SP01903	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01904	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01905	Injector Codes Read	ECM (Engine Control Module)
SP01906	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01907	Oil Change	ECM (Engine Control Module)
SP01908	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01909	EGR Valve Test	ECM (Engine Control Module)
SP01910	Throttle Valve Test	ECM (Engine Control Module)
SP01911	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01912	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01913	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01914	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP01915	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01916	Reset Odometer	IPC (Instrument Panel Cluster)
SP01917	Reset Service Information	IPC (Instrument Panel Cluster)
SP01918	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01919	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01920	Reset Odometer	IPC (Instrument Panel Cluster)
SP01921	Reset Service Information	IPC (Instrument Panel Cluster)
SP01922	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01923	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01924	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01925	Reset Odometer	IPC (Instrument Panel Cluster)
SP01926	Reset Service Information	IPC (Instrument Panel Cluster)
SP01927	Write Front And Rear Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP01928	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP01929	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP01930	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP01931	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP01932	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01933	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01934	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)

SP01935	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01936	Oil Change	ECM (Engine Control Module)
SP01937	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01938	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01939	Injector Codes Read	ECM (Engine Control Module)
SP01940	Speed Limit Setting	ECM (Engine Control Module)
SP01941	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01942	EGR Valve Test	ECM (Engine Control Module)
SP01943	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01944	Throttle Valve Test	ECM (Engine Control Module)
SP01945	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01946	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01947	Injector Codes Read	ECM (Engine Control Module)
SP01948	Speed Limit Setting	ECM (Engine Control Module)
SP01949	EGR Valve Test	ECM (Engine Control Module)
SP01950	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01951	Throttle Valve Test	ECM (Engine Control Module)
SP01952	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01953	Oil Change	ECM (Engine Control Module)
SP01954	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01955	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01956	Injector Codes Read	ECM (Engine Control Module)
SP01957	Speed Limit Setting	ECM (Engine Control Module)
SP01958	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01959	EGR Valve Test	ECM (Engine Control Module)
SP01960	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01961	Throttle Valve Test	ECM (Engine Control Module)
SP01962	Oil Change	ECM (Engine Control Module)
SP01963	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01964	Injector Codes Read	ECM (Engine Control Module)
SP01965	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01966	Speed Limit Setting	ECM (Engine Control Module)
SP01967	EGR Valve Test	ECM (Engine Control Module)
SP01968	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01969	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01970	Oil Change	ECM (Engine Control Module)
SP01971	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01972	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01973	Injector Codes Read	ECM (Engine Control Module)

SP01974	Speed Limit Setting	ECM (Engine Control Module)
SP01975	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01976	EGR Valve Test	ECM (Engine Control Module)
SP01977	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01978	Throttle Valve Test	ECM (Engine Control Module)
SP01979	Oil Change	ECM (Engine Control Module)
SP01980	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01981	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01982	Injector Codes Read	ECM (Engine Control Module)
SP01983	Speed Limit Setting	ECM (Engine Control Module)
SP01984	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01985	EGR Valve Test	ECM (Engine Control Module)
SP01986	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01987	Throttle Valve Test	ECM (Engine Control Module)
SP01988	Oil Change	ECM (Engine Control Module)
SP01989	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01990	Injector Codes Read	ECM (Engine Control Module)
SP01991	Speed Limit Setting	ECM (Engine Control Module)
SP01992	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01993	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01994	EGR Valve Test	ECM (Engine Control Module)
SP01995	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01996	Speed Limit Setting	ECM (Engine Control Module)
SP01997	Phonic Wheel Reset	ECM (Engine Control Module)
SP01998	Injector/S Replacement	ECM (Engine Control Module)
SP01999	Vehicle Configuration Reset	ECM (Engine Control Module)
SP02000	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02001	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02002	Injector Codes Read	ECM (Engine Control Module)
SP02003	EGR Valve Test	ECM (Engine Control Module)
SP02004	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02005	Throttle Valve Test	ECM (Engine Control Module)
SP02006	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02007	Speed Limit Setting	ECM (Engine Control Module)
SP02008	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02009	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02010	Injector Codes Read	ECM (Engine Control Module)
SP02011	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02012	Oil Change	ECM (Engine Control Module)

SP02013	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02014	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02015	Speed Limit Setting	ECM (Engine Control Module)
SP02016	EGR Valve Test	ECM (Engine Control Module)
SP02017	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02018	Throttle Valve Test	ECM (Engine Control Module)
SP02019	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02020	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02021	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02022	Oil Change	ECM (Engine Control Module)
SP02023	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02024	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02025	Speed Limit Setting	ECM (Engine Control Module)
SP02026	EGR Valve Test	ECM (Engine Control Module)
SP02027	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02028	Throttle Valve Test	ECM (Engine Control Module)
SP02029	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02030	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02031	Injector Codes Read	ECM (Engine Control Module)
SP02032	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02033	Oil Change	ECM (Engine Control Module)
SP02034	Replacement Of EGR Valve	ECM (Engine Control Module)
SP02035	EGR Valve Test	ECM (Engine Control Module)
SP02036	Throttle Valve Test	ECM (Engine Control Module)
SP02037	Speed Limit Setting	ECM (Engine Control Module)
SP02038	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02039	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02040	Injector Codes Read	ECM (Engine Control Module)
SP02041	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02042	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02043	Speed Limit Setting	ECM (Engine Control Module)
SP02044	Throttle Valve Test	ECM (Engine Control Module)
SP02045	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02046	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02047	Injector Codes Read	ECM (Engine Control Module)
SP02048	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02049	Oil Change	ECM (Engine Control Module)
SP02050	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02051	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)

SP02052	Speed Limit Setting	ECM (Engine Control Module)
SP02053	EGR Valve Test	ECM (Engine Control Module)
SP02054	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02055	Throttle Valve Test	ECM (Engine Control Module)
SP02056	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02057	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02058	Injector Codes Read	ECM (Engine Control Module)
SP02059	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02060	Oil Change	ECM (Engine Control Module)
SP02061	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02062	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02063	Speed Limit Setting	ECM (Engine Control Module)
SP02064	EGR Valve Test	ECM (Engine Control Module)
SP02065	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02066	Throttle Valve Test	ECM (Engine Control Module)
SP02067	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02068	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02069	Injector Codes Read	ECM (Engine Control Module)
SP02070	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02071	Oil Change	ECM (Engine Control Module)
SP02072	Replacement Of EGR Valve	ECM (Engine Control Module)
SP02073	EGR Valve Test	ECM (Engine Control Module)
SP02074	Throttle Valve Test	ECM (Engine Control Module)
SP02075	Speed Limit Setting	ECM (Engine Control Module)
SP02076	Phonic Wheel Reset	ECM (Engine Control Module)
SP02077	Vehicle Configuration Reset	ECM (Engine Control Module)
SP02078	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02079	Speed Limit Setting	ECM (Engine Control Module)
SP02080	Injector/S Replacement	ECM (Engine Control Module)
SP02081	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02082	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02083	Injector Codes Read	ECM (Engine Control Module)
SP02084	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02085	Oil Change	ECM (Engine Control Module)
SP02086	Replacement Of EGR Valve	ECM (Engine Control Module)
SP02087	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02088	Speed Limit Setting	ECM (Engine Control Module)
SP02089	EGR Valve Test	ECM (Engine Control Module)
SP02090	EGR Low Pressure Valve Test	ECM (Engine Control Module)

SP02091	Throttle Valve Test	ECM (Engine Control Module)
SP02092	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02093	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02094	Injector Codes Read	ECM (Engine Control Module)
SP02095	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02096	Oil Change	ECM (Engine Control Module)
SP02097	Replacement Of EGR Valve	ECM (Engine Control Module)
SP02098	EGR Valve Test	ECM (Engine Control Module)
SP02099	Throttle Valve Test	ECM (Engine Control Module)
SP02100	Speed Limit Setting	ECM (Engine Control Module)
SP02101	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP02102	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP02103	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02104	Static Test	ABS (Anti-Lock Braking System)
SP02105	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP02106	Static Test	ABS (Anti-Lock Braking System)
SP02107	Static Test	ABS (Anti-Lock Braking System)
SP02108	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP02109	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02110	Static Test	ABS (Anti-Lock Braking System)
SP02111	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP02112	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP02113	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP02114	Program Left Rear Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02115	Program Right Rear Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02116	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP02117	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02118	Write Front And Rear Axle Nominal Tire Pressure	TPMS (Tire Pressure Monitoring System)
SP02119	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02120	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02121	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02122	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02123	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP02124	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP02125	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP02126	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02127	Write Front And Rear Axle Nominal Tire Pressure	TPMS (Tire Pressure Monitoring System)
SP02128	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02129	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)

SP02130	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02131	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02132	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP02133	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP02134	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP02135	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02136	Write Front And Rear Axle Nominal Tire Pressure	TPMS (Tire Pressure Monitoring System)
SP02137	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02138	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02139	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02140	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02141	Reset Odometer	IC (Instrument Cluster)
SP02142	Reset Service Information	IC (Instrument Cluster)
SP02143	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02144	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02145	Reset Odometer	IC (Instrument Cluster)
SP02146	Reset Service Information	IC (Instrument Cluster)
SP02147	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02148	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02149	Oil Change	ECM (Engine Control Module)
SP02150	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02151	Injector Codes Read	ECM (Engine Control Module)
SP02152	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02153	EGR Valve Test	ECM (Engine Control Module)
SP02154	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02155	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02156	Throttle Valve Test	ECM (Engine Control Module)
SP02157	Speed Limit Setting	ECM (Engine Control Module)
SP02158	Reset Learned Adaptives	ECM (Engine Control Module)
SP02159	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02160	Reset Learned Adaptives	ECM (Engine Control Module)
SP02161	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02162	Oil Change	ECM (Engine Control Module)
SP02163	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02164	Injector Codes Read	ECM (Engine Control Module)
SP02165	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02166	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02167	EGR Valve Test	ECM (Engine Control Module)
SP02168	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)

SP02169	Throttle Valve Test	ECM (Engine Control Module)
SP02170	Speed Limit Setting	ECM (Engine Control Module)
SP02171	Oil Change	ECM (Engine Control Module)
SP02172	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02173	Injector Codes Read	ECM (Engine Control Module)
SP02174	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02175	EGR Valve Test	ECM (Engine Control Module)
SP02176	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02177	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02178	Throttle Valve Test	ECM (Engine Control Module)
SP02179	Speed Limit Setting	ECM (Engine Control Module)
SP02180	Oil Change	ECM (Engine Control Module)
SP02181	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02182	Injector Codes Read	ECM (Engine Control Module)
SP02183	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02184	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02185	EGR Valve Test	ECM (Engine Control Module)
SP02186	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02187	Throttle Valve Test	ECM (Engine Control Module)
SP02188	Speed Limit Setting	ECM (Engine Control Module)
SP02189	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02190	Oil Change	ECM (Engine Control Module)
SP02191	Injector Codes Read	ECM (Engine Control Module)
SP02192	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02193	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02194	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02195	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02196	Phonic Wheel Reset	ECM (Engine Control Module)
SP02197	Vehicle Configuration Reset	ECM (Engine Control Module)
SP02198	Oil Change	ECM (Engine Control Module)
SP02199	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02200	Injector Codes Read	ECM (Engine Control Module)
SP02201	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02202	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02203	EGR Valve Test	ECM (Engine Control Module)
SP02204	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02205	Throttle Valve Test	ECM (Engine Control Module)
SP02206	Speed Limit Setting	ECM (Engine Control Module)
SP02207	Oil Change	ECM (Engine Control Module)

SP02208	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02209	Injector Codes Read	ECM (Engine Control Module)
SP02210	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02211	EGR Valve Test	ECM (Engine Control Module)
SP02212	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02213	Throttle Valve Test	ECM (Engine Control Module)
SP02214	Speed Limit Setting	ECM (Engine Control Module)
SP02215	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02216	Oil Change	ECM (Engine Control Module)
SP02217	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02218	Injector Codes Read	ECM (Engine Control Module)
SP02219	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02220	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02221	EGR Valve Test	ECM (Engine Control Module)
SP02222	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02223	Throttle Valve Test	ECM (Engine Control Module)
SP02224	Speed Limit Setting	ECM (Engine Control Module)
SP02225	Injector Codes Read	ECM (Engine Control Module)
SP02226	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02227	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02228	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02229	Oil Change	ECM (Engine Control Module)
SP02230	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02231	Injector Codes Read	ECM (Engine Control Module)
SP02232	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02233	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02234	EGR Valve Test	ECM (Engine Control Module)
SP02235	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02236	Throttle Valve Test	ECM (Engine Control Module)
SP02237	Oil Change	ECM (Engine Control Module)
SP02238	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02239	Injector Codes Read	ECM (Engine Control Module)
SP02240	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02241	EGR Valve Test	ECM (Engine Control Module)
SP02242	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02243	Throttle Valve Test	ECM (Engine Control Module)
SP02244	Speed Limit Setting	ECM (Engine Control Module)
SP02245	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02246	Oil Change	ECM (Engine Control Module)

SP02247	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02248	Injector Codes Read	ECM (Engine Control Module)
SP02249	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02250	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02251	EGR Valve Test	ECM (Engine Control Module)
SP02252	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02253	Throttle Valve Test	ECM (Engine Control Module)
SP02254	Speed Limit Setting	ECM (Engine Control Module)
SP02255	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02256	Oil Change	ECM (Engine Control Module)
SP02257	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02258	Injector Codes Read	ECM (Engine Control Module)
SP02259	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02260	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02261	EGR Valve Test	ECM (Engine Control Module)
SP02262	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02263	Throttle Valve Test	ECM (Engine Control Module)
SP02264	Oil Change	ECM (Engine Control Module)
SP02265	Injector Codes Read	ECM (Engine Control Module)
SP02266	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02267	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02268	Speed Limit Setting	ECM (Engine Control Module)
SP02269	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02270	Injector Codes Read	ECM (Engine Control Module)
SP02271	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02272	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02273	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02274	Injector Codes Read	ECM (Engine Control Module)
SP02275	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02276	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02277	Speed Limit Setting	ECM (Engine Control Module)
SP02278	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02279	Oil Change	ECM (Engine Control Module)
SP02280	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02281	Injector Codes Read	ECM (Engine Control Module)
SP02282	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02283	EGR Valve Test	ECM (Engine Control Module)
SP02284	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02285	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)

SP02286	Throttle Valve Test	ECM (Engine Control Module)
SP02287	Speed Limit Setting	ECM (Engine Control Module)
SP02288	Oil Change	ECM (Engine Control Module)
SP02289	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02290	Injector Codes Read	ECM (Engine Control Module)
SP02291	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02292	EGR Valve Test	ECM (Engine Control Module)
SP02293	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02294	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02295	Throttle Valve Test	ECM (Engine Control Module)
SP02296	Speed Limit Setting	ECM (Engine Control Module)
SP02297	Oil Change	ECM (Engine Control Module)
SP02298	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02299	Injector Codes Read	ECM (Engine Control Module)
SP02300	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02301	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02302	EGR Valve Test	ECM (Engine Control Module)
SP02303	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02304	Throttle Valve Test	ECM (Engine Control Module)
SP02305	Oil Change	ECM (Engine Control Module)
SP02306	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02307	Injector Codes Read	ECM (Engine Control Module)
SP02308	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02309	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02310	EGR Valve Test	ECM (Engine Control Module)
SP02311	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02312	Throttle Valve Test	ECM (Engine Control Module)
SP02313	Injector Codes Read	ECM (Engine Control Module)
SP02314	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02315	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02316	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02317	Oil Change	ECM (Engine Control Module)
SP02318	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02319	Injector Codes Read	ECM (Engine Control Module)
SP02320	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02321	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02322	EGR Valve Test	ECM (Engine Control Module)
SP02323	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02324	Throttle Valve Test	ECM (Engine Control Module)

SP02325	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02326	Phonic Wheel Reset	ECM (Engine Control Module)
SP02327	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02328	Oil Change	ECM (Engine Control Module)
SP02329	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02330	Injector Codes Read	ECM (Engine Control Module)
SP02331	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02332	EGR Valve Test	ECM (Engine Control Module)
SP02333	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02334	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02335	Throttle Valve Test	ECM (Engine Control Module)
SP02336	Speed Limit Setting	ECM (Engine Control Module)
SP02337	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02338	Phonic Wheel Reset	ECM (Engine Control Module)
SP02339	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02340	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02341	Phonic Wheel Reset	ECM (Engine Control Module)
SP02342	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02343	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02344	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02345	Injector Codes Read	ECM (Engine Control Module)
SP02346	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02347	Oil Change	ECM (Engine Control Module)
SP02348	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02349	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02350	Speed Limit Setting	ECM (Engine Control Module)
SP02351	EGR Valve Test	ECM (Engine Control Module)
SP02352	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02353	Throttle Valve Test	ECM (Engine Control Module)
SP02354	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02355	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02356	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02357	Injector Codes Read	ECM (Engine Control Module)
SP02358	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02359	Oil Change	ECM (Engine Control Module)
SP02360	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02361	Replacement Of EGR Valve	ECM (Engine Control Module)
SP02362	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02363	Speed Limit Setting	ECM (Engine Control Module)

SP02364	EGR Valve Test	ECM (Engine Control Module)
SP02365	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02366	Throttle Valve Test	ECM (Engine Control Module)
SP02367	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02368	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02369	Injector Codes Read	ECM (Engine Control Module)
SP02370	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02371	Oil Change	ECM (Engine Control Module)
SP02372	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02373	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02374	Speed Limit Setting	ECM (Engine Control Module)
SP02375	EGR Valve Test	ECM (Engine Control Module)
SP02376	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02377	Throttle Valve Test	ECM (Engine Control Module)
SP02378	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02379	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02380	Injector Codes Read	ECM (Engine Control Module)
SP02381	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02382	Oil Change	ECM (Engine Control Module)
SP02383	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02384	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02385	Speed Limit Setting	ECM (Engine Control Module)
SP02386	EGR Valve Test	ECM (Engine Control Module)
SP02387	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02388	Throttle Valve Test	ECM (Engine Control Module)
SP02389	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02390	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02391	Injector Codes Read	ECM (Engine Control Module)
SP02392	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02393	Oil Change	ECM (Engine Control Module)
SP02394	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02395	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02396	Speed Limit Setting	ECM (Engine Control Module)
SP02397	EGR Valve Test	ECM (Engine Control Module)
SP02398	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02399	Throttle Valve Test	ECM (Engine Control Module)
SP02400	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02401	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02402	Injector Codes Read	ECM (Engine Control Module)

SP02403	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02404	Oil Change	ECM (Engine Control Module)
SP02405	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02406	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02407	Speed Limit Setting	ECM (Engine Control Module)
SP02408	EGR Valve Test	ECM (Engine Control Module)
SP02409	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02410	Throttle Valve Test	ECM (Engine Control Module)
SP02411	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP02412	Reset Statistical Data	TCM (Transmission Control Module)
SP02413	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP02414	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP02415	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP02416	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02417	Static Test	ABS (Anti-Lock Braking System)
SP02418	Static Test	ABS (Anti-Lock Braking System)
SP02419	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP02420	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP02421	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02422	Static Test	ABS (Anti-Lock Braking System)
SP02423	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP02424	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP02425	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02426	Static Test	ABS (Anti-Lock Braking System)
SP02427	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP02428	TPMS Calibration	ABS (Anti-Lock Braking System)
SP02429	Reset Odometer	IC (Instrument Cluster)
SP02430	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02431	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02432	Reset Service Information	IC (Instrument Cluster)
SP02433	Reset Odometer	IC (Instrument Cluster)
SP02434	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02435	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02436	Reset Service Information	IC (Instrument Cluster)
SP02437	Reset Odometer	IC (Instrument Cluster)
SP02438	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02439	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02440	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP02441	DPF Reset Option	PCM (Powertrain Control Module)

SP02442	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP02443	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP02444	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP02445	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP02446	Throttle Valve Learn	PCM (Powertrain Control Module)
SP02447	Check PCM Odometer	PCM (Powertrain Control Module)
SP02448	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02449	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02450	Reset Memory	PCM (Powertrain Control Module)
SP02451	EGR System Test	PCM (Powertrain Control Module)
SP02452	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02453	Set Engine RPM	PCM (Powertrain Control Module)
SP02454	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP02455	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP02456	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP02457	Auto Door Lock	BCM (Body Control Module)
SP02458	Program Tire Size	BCM (Body Control Module)
SP02459	Configure License Plate Size	EPB (Electrical Parking Brake)
SP02460	System Wiring Test	EPB (Electrical Parking Brake)
SP02461	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02462	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02463	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02464	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02465	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02466	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02467	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP02468	DPF Reset Option	PCM (Powertrain Control Module)
SP02469	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP02470	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP02471	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP02472	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP02473	Throttle Valve Learn	PCM (Powertrain Control Module)
SP02474	Check PCM Odometer	PCM (Powertrain Control Module)
SP02475	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02476	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02477	Reset Memory	PCM (Powertrain Control Module)
SP02478	EGR System Test	PCM (Powertrain Control Module)
SP02479	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02480	Set Engine RPM	PCM (Powertrain Control Module)

SP02481	Check PCM Odometer	PCM (Powertrain Control Module)
SP02482	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02483	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02484	Reset Memory	PCM (Powertrain Control Module)
SP02485	EGR System Test	PCM (Powertrain Control Module)
SP02486	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02487	Set Engine RPM	PCM (Powertrain Control Module)
SP02488	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP02489	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP02490	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP02491	Auto Door Lock	BCM (Body Control Module)
SP02492	Program Tire Size	BCM (Body Control Module)
SP02493	Auto Door Lock	BCM (Body Control Module)
SP02494	Program Tire Size	BCM (Body Control Module)
SP02495	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02496	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02497	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02498	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02499	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02500	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02501	Configure License Plate Size	EPB (Electrical Parking Brake)
SP02502	System Wiring Test	EPB (Electrical Parking Brake)
SP02503	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP02504	DPF Reset Option	PCM (Powertrain Control Module)
SP02505	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP02506	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP02507	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP02508	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP02509	Throttle Valve Learn	PCM (Powertrain Control Module)
SP02510	Check PCM Odometer	PCM (Powertrain Control Module)
SP02511	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02512	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02513	Reset Memory	PCM (Powertrain Control Module)
SP02514	EGR System Test	PCM (Powertrain Control Module)
SP02515	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02516	Set Engine RPM	PCM (Powertrain Control Module)
SP02517	Check PCM Odometer	PCM (Powertrain Control Module)
SP02518	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02519	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)

SP02520	Reset Memory	PCM (Powertrain Control Module)
SP02521	EGR System Test	PCM (Powertrain Control Module)
SP02522	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02523	Set Engine RPM	PCM (Powertrain Control Module)
SP02524	Check PCM Odometer	PCM (Powertrain Control Module)
SP02525	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02526	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02527	Reset Memory	PCM (Powertrain Control Module)
SP02528	EGR System Test	PCM (Powertrain Control Module)
SP02529	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02530	Set Engine RPM	PCM (Powertrain Control Module)
SP02531	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP02532	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP02533	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP02534	Auto Door Lock	BCM (Body Control Module)
SP02535	Program Tire Size	BCM (Body Control Module)
SP02536	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02537	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02538	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02539	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02540	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02541	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02542	Configure License Plate Size	EPB (Electrical Parking Brake)
SP02543	System Wiring Test	EPB (Electrical Parking Brake)
SP02544	Check PCM Odometer	PCM (Powertrain Control Module)
SP02545	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02546	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02547	Reset Memory	PCM (Powertrain Control Module)
SP02548	EGR System Test	PCM (Powertrain Control Module)
SP02549	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02550	Set Engine RPM	PCM (Powertrain Control Module)
SP02551	Check PCM Odometer	PCM (Powertrain Control Module)
SP02552	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02553	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02554	Reset Memory	PCM (Powertrain Control Module)
SP02555	EGR System Test	PCM (Powertrain Control Module)
SP02556	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02557	Set Engine RPM	PCM (Powertrain Control Module)
SP02558	Check PCM Odometer	PCM (Powertrain Control Module)

SP02559	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02560	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02561	Reset Memory	PCM (Powertrain Control Module)
SP02562	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02563	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02564	EGR System Test	PCM (Powertrain Control Module)
SP02565	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02566	Set Engine RPM	PCM (Powertrain Control Module)
SP02567	Check PCM Odometer	PCM (Powertrain Control Module)
SP02568	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02569	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02570	Reset Memory	PCM (Powertrain Control Module)
SP02571	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02572	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02573	EGR System Test	PCM (Powertrain Control Module)
SP02574	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02575	Set Engine RPM	PCM (Powertrain Control Module)
SP02576	Check PCM Odometer	PCM (Powertrain Control Module)
SP02577	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02578	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02579	Reset Memory	PCM (Powertrain Control Module)
SP02580	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02581	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02582	EGR System Test	PCM (Powertrain Control Module)
SP02583	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02584	Set Engine RPM	PCM (Powertrain Control Module)
SP02585	Check PCM Odometer	PCM (Powertrain Control Module)
SP02586	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02587	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02588	Reset Memory	PCM (Powertrain Control Module)
SP02589	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02590	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02591	EGR System Test	PCM (Powertrain Control Module)
SP02592	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02593	Set Engine RPM	PCM (Powertrain Control Module)
SP02594	Check PCM Odometer	PCM (Powertrain Control Module)
SP02595	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02596	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02597	Reset Memory	PCM (Powertrain Control Module)

SP02598	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02599	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02600	EGR System Test	PCM (Powertrain Control Module)
SP02601	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02602	Set Engine RPM	PCM (Powertrain Control Module)
SP02603	Check PCM Odometer	PCM (Powertrain Control Module)
SP02604	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02605	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02606	Reset Memory	PCM (Powertrain Control Module)
SP02607	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02608	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02609	EGR System Test	PCM (Powertrain Control Module)
SP02610	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02611	Set Engine RPM	PCM (Powertrain Control Module)
SP02612	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP02613	DPF Reset Option	PCM (Powertrain Control Module)
SP02614	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP02615	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP02616	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP02617	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP02618	Throttle Valve Learn	PCM (Powertrain Control Module)
SP02619	Check PCM Odometer	PCM (Powertrain Control Module)
SP02620	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02621	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02622	Reset Memory	PCM (Powertrain Control Module)
SP02623	EGR System Test	PCM (Powertrain Control Module)
SP02624	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02625	Set Engine RPM	PCM (Powertrain Control Module)
SP02626	Check PCM Odometer	PCM (Powertrain Control Module)
SP02627	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02628	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02629	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02630	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02631	EGR System Test	PCM (Powertrain Control Module)
SP02632	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02633	Set Engine RPM	PCM (Powertrain Control Module)
SP02634	Check PCM Odometer	PCM (Powertrain Control Module)
SP02635	Quicklearn (62TE)	PCM (Powertrain Control Module)

SP02636	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02637	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02638	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02639	EGR System Test	PCM (Powertrain Control Module)
SP02640	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02641	Set Engine RPM	PCM (Powertrain Control Module)
SP02642	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP02643	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP02644	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP02645	Auto Door Lock	BCM (Body Control Module)
SP02646	Program Tire Size	BCM (Body Control Module)
SP02647	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02648	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02649	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02650	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02651	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02652	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02653	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02654	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02655	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02656	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02657	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02658	Activate TPM High Gain Mode	TPMS (Tire Pressure Monitoring System)
SP02659	TPM Sensor Position Parameter Update	TPMS (Tire Pressure Monitoring System)
SP02660	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02661	Configure License Plate Size	EPB (Electrical Parking Brake)
SP02662	System Wiring Test	EPB (Electrical Parking Brake)
SP02663	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP02664	DPF Reset Option	PCM (Powertrain Control Module)
SP02665	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP02666	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP02667	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP02668	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP02669	Throttle Valve Learn	PCM (Powertrain Control Module)
SP02670	Check PCM Odometer	PCM (Powertrain Control Module)
SP02671	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02672	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)

SP02673	Reset Memory	PCM (Powertrain Control Module)
SP02674	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02675	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02676	Reset Memory	PCM (Powertrain Control Module)
SP02677	EGR System Test	PCM (Powertrain Control Module)
SP02678	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02679	Set Engine RPM	PCM (Powertrain Control Module)
SP02680	Check PCM Odometer	PCM (Powertrain Control Module)
SP02681	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02682	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02683	Reset Memory	PCM (Powertrain Control Module)
SP02684	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02685	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02686	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02687	EGR System Test	PCM (Powertrain Control Module)
SP02688	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02689	Set Engine RPM	PCM (Powertrain Control Module)
SP02690	Check PCM Odometer	PCM (Powertrain Control Module)
SP02691	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02692	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02693	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02694	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02695	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02696	EGR System Test	PCM (Powertrain Control Module)
SP02697	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02698	Set Engine RPM	PCM (Powertrain Control Module)
SP02699	Check PCM Odometer	PCM (Powertrain Control Module)
SP02700	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02701	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02702	Reset Memory	PCM (Powertrain Control Module)
SP02703	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02704	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02705	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02706	EGR System Test	PCM (Powertrain Control Module)
SP02707	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02708	Set Engine RPM	PCM (Powertrain Control Module)
SP02709	Check PCM Odometer	PCM (Powertrain Control Module)
SP02710	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02711	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)

SP02712	Reset Memory	PCM (Powertrain Control Module)
SP02713	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02714	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02715	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02716	EGR System Test	PCM (Powertrain Control Module)
SP02717	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02718	Set Engine RPM	PCM (Powertrain Control Module)
SP02719	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP02720	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP02721	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP02722	Auto Door Lock	BCM (Body Control Module)
SP02723	Program Tire Size	BCM (Body Control Module)
SP02724	Configure License Plate Size	EPB (Electrical Parking Brake)
SP02725	System Wiring Test	EPB (Electrical Parking Brake)
SP02726	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02727	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02728	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02729	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02730	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02731	Activate TPM High Gain Mode	TPMS (Tire Pressure Monitoring System)
SP02732	TPM Sensor Position Parameter Update	TPMS (Tire Pressure Monitoring System)
SP02733	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02734	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP02735	DPF Reset Option	PCM (Powertrain Control Module)
SP02736	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP02737	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP02738	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP02739	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP02740	Throttle Valve Learn	PCM (Powertrain Control Module)
SP02741	Check PCM Odometer	PCM (Powertrain Control Module)
SP02742	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02743	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02744	Reset Memory	PCM (Powertrain Control Module)
SP02745	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02746	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02747	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02748	EGR System Test	PCM (Powertrain Control Module)
SP02749	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02750	Set Engine RPM	PCM (Powertrain Control Module)

SP02751	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP02752	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP02753	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP02754	Auto Door Lock	BCM (Body Control Module)
SP02755	Program Tire Size	BCM (Body Control Module)
SP02756	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02757	Configure License Plate Size	EPB (Electrical Parking Brake)
SP02758	System Wiring Test	EPB (Electrical Parking Brake)
SP02759	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02760	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02761	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02762	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02763	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02764	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02765	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02766	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02767	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02768	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02769	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02770	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02771	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02772	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02773	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02774	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02775	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02776	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02777	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02778	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02779	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02780	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02781	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02782	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02783	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02784	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02785	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02786	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02787	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02788	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02789	Reset Vehicle Configuration	ECM (Engine Control Module)

SP02790	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02791	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02792	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02793	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02794	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02795	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02796	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02797	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02798	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02799	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02800	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02801	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02802	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02803	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02804	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02805	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02806	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02807	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02808	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02809	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02810	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02811	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02812	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02813	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02814	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02815	Reset Functions Self Learned	TCM (Transmission Control Module)
SP02816	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP02817	Quick Learn	TCM (Transmission Control Module)
SP02818	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP02819	BSM Proxi Alignment	ABS (Anti-Lock Braking System)
SP02820	Reset TPMS Calibration	ABS (Anti-Lock Braking System)
SP02821	Lock Doors Command	BCM (Body Control Module)
SP02822	Rear Windows Washer	BCM (Body Control Module)
SP02823	Unlock Doors Command	BCM (Body Control Module)
SP02824	Oil Service Reset	IC (Instrument Cluster)
SP02825	Oil Service Reset	IC (Instrument Cluster)
SP02826	Reset Functions Self Learned	DMM (Doors Management Module)
SP02827	Learn Clutches Contact Point	DMM (Doors Management Module)
SP02828	Quick Learn	DMM (Doors Management Module)

SP02829	ECU Replacement With Value Transfer	DMM (Doors Management Module)
SP02830	Windows Lifter Test	DMM (Doors Management Module)
SP02831	Windows Lifter Test	DMM (Doors Management Module)
SP02832	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02833	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02834	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02835	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02836	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02837	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02838	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02839	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02840	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02841	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02842	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02843	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02844	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02845	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02846	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02847	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02848	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02849	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02850	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02851	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02852	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02853	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02854	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02855	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02856	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02857	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02858	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02859	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02860	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02861	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02862	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02863	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02864	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02865	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02866	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02867	Self Learning Throttle Body Activation	ECM (Engine Control Module)

SP02868	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02869	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02870	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02871	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02872	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02873	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02874	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02875	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02876	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02877	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02878	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02879	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02880	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02881	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02882	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02883	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02884	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02885	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02886	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02887	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02888	Reset Functions Self Learned	TCM (Transmission Control Module)
SP02889	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP02890	Quick Learn	TCM (Transmission Control Module)
SP02891	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP02892	BSM Proxi Alignment	ABS (Anti-Lock Braking System)
SP02893	Lock Doors Command	BCM (Body Control Module)
SP02894	Rear Windows Washer	BCM (Body Control Module)
SP02895	Unlock Doors Command	BCM (Body Control Module)
SP02896	Oil Service Reset	IC (Instrument Cluster)
SP02897	Oil Service Reset	IC (Instrument Cluster)
SP02898	Reset Functions Self Learned	DMM (Doors Management Module)
SP02899	Learn Clutches Contact Point	DMM (Doors Management Module)
SP02900	Quick Learn	DMM (Doors Management Module)
SP02901	ECU Replacement With Value Transfer	DMM (Doors Management Module)
SP02902	Windows Lifter Test	DMM (Doors Management Module)
SP02903	Windows Lifter Test	DMM (Doors Management Module)
SP02904	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02905	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02906	Purge Fuel Circuit Reset	ECM (Engine Control Module)

SP02907	Clutch Pedal Learning	ECM (Engine Control Module)
SP02908	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02909	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02910	Reset Of Cumulative Counter Of Intelligent Alternator Module	ECM (Engine Control Module)
SP02911	Purge Fuel Circuit Reset	ECM (Engine Control Module)
SP02912	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02913	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02914	Reset Of Cumulative Counter Of Intelligent Alternator Module	ECM (Engine Control Module)
SP02915	Purge Fuel Circuit Reset	ECM (Engine Control Module)
SP02916	Clutch Pedal Learning	ECM (Engine Control Module)
SP02917	Reset Functions Self Learned	TCM (Transmission Control Module)
SP02918	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP02919	Quick Learn	TCM (Transmission Control Module)
SP02920	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP02921	Reset TPMS Calibration	ABS (Anti Lock Brakes)
SP02922	Sensors Calibration	ABS (Anti Lock Brakes)
SP02923	Lock Doors Command	BCM (Body Control Module)
SP02924	Unlock Doors Command	BCM (Body Control Module)
SP02925	Rear Window Wiper Command	BCM (Body Control Module)
SP02926	Reset Functions Self Learned	DMM (Door Management Module)
SP02927	Learn Clutches Contact Point	DMM (Door Management Module)
SP02928	Quick Learn	DMM (Door Management Module)
SP02929	ECU Replacement With Value Transfer	DMM (Door Management Module)
SP02930	Windows Lifter Test	DMM (Door Management Module)
SP02931	Windows Lifter Test	DMM (Door Management Module)
SP02932	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02933	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02934	Static Test	ABS (Anti-Lock Braking System)
SP02935	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02936	Static Test	ABS (Anti-Lock Braking System)
SP02937	Steering Angle Sensor	EPS (Electric Power Steering)
SP02938	Steering Angle Sensor	EPS (Electric Power Steering)
SP02939	Reset Odometer	IC (Instrument Cluster)
SP02940	Reset Service Information	IC (Instrument Cluster)
SP02941	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02942	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02943	Reset Odometer	IC (Instrument Cluster)
SP02944	Reset Service Information	IC (Instrument Cluster)

SP02945	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02946	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02947	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP02948	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP02949	Reset Phases Front	PCM (Powertrain Control Module)
SP02950	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP02951	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02952	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP02953	Reset Phases Front	PCM (Powertrain Control Module)
SP02954	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP02955	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02956	Clutch Pedal Learning	PCM (Powertrain Control Module)
SP02957	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP02958	Reset Phases Front	PCM (Powertrain Control Module)
SP02959	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP02960	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02961	Oil Change	PCM (Powertrain Control Module)
SP02962	Injector Replacement (Per Bank)	PCM (Powertrain Control Module)
SP02963	Injector Codes Read	PCM (Powertrain Control Module)
SP02964	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02965	EGR Valve Test	PCM (Powertrain Control Module)
SP02966	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02967	Resetting Distance Travelled With Water Temp. Warning Lamp ON	PCM (Powertrain Control Module)
SP02968	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	PCM (Powertrain Control Module)
SP02969	Throttle Valve Test	PCM (Powertrain Control Module)
SP02970	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02971	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP02972	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02973	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02974	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP02975	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02976	Oil Change	PCM (Powertrain Control Module)
SP02977	Injector Replacement (Per Bank)	PCM (Powertrain Control Module)
SP02978	Injector Codes Read	PCM (Powertrain Control Module)
SP02979	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02980	EGR Valve Test	PCM (Powertrain Control Module)
SP02981	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02982	Resetting Distance Travelled With Water Temp. Warning Lamp ON	PCM (Powertrain Control Module)
SP02983	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	PCM (Powertrain Control Module)

SP02984	Throttle Valve Test	PCM (Powertrain Control Module)
SP02985	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02986	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP02987	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02988	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02989	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP02990	Injector/S Replacement	PCM (Powertrain Control Module)
SP02991	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02992	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02993	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP02994	Reset Phases Front	PCM (Powertrain Control Module)
SP02995	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP02996	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP02997	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02998	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02999	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP03000	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP03001	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03002	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP03003	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03004	Clutch Pedal Learning	PCM (Powertrain Control Module)
SP03005	Reset Phases Front	PCM (Powertrain Control Module)
SP03006	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP03007	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP03008	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP03009	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP03010	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03011	EGR Valve Test	PCM (Powertrain Control Module)
SP03012	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03013	Oil Change	PCM (Powertrain Control Module)
SP03014	Resetting Distance Travelled With Water Temp. Warning Lamp ON	PCM (Powertrain Control Module)
SP03015	Injector Replacement (Per Bank)	PCM (Powertrain Control Module)
SP03016	Injector Codes Read	PCM (Powertrain Control Module)
SP03017	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP03018	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	PCM (Powertrain Control Module)
SP03019	Throttle Valve Test	PCM (Powertrain Control Module)
SP03020	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP03021	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP03022	Self-Learnt Functions Reset	PCM (Powertrain Control Module)

SP03023	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP03024	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03025	Clutch Pedal Learning	PCM (Powertrain Control Module)
SP03026	Reset Phases Front	PCM (Powertrain Control Module)
SP03027	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP03028	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP03029	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP03030	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP03031	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03032	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP03033	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP03034	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03035	Phonic Wheel Reset	PCM (Powertrain Control Module)
SP03036	Reset Phases Front	PCM (Powertrain Control Module)
SP03037	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP03038	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03039	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03040	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03041	Static Test	ABS (Anti-Lock Braking System)
SP03042	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP03043	Gear Configuration Reset	ABS (Anti-Lock Braking System)
SP03044	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03045	Static Test	ABS (Anti-Lock Braking System)
SP03046	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP03047	Gear Configuration Reset	ABS (Anti-Lock Braking System)
SP03048	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03049	Static Test	ABS (Anti-Lock Braking System)
SP03050	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP03051	Gear Configuration Reset	ABS (Anti-Lock Braking System)
SP03052	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03053	Static Test	ABS (Anti-Lock Braking System)
SP03054	TPMS Calibration	ABS (Anti-Lock Braking System)
SP03055	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP03056	Gear Configuration Reset	ABS (Anti-Lock Braking System)
SP03057	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03058	Static Test	ABS (Anti-Lock Braking System)
SP03059	TPMS Calibration	ABS (Anti-Lock Braking System)
SP03060	Steering Angle Calibration	EPS (Electric Power Steering)

SP03061	Reset Odometer	IC (Instrument Cluster)
SP03062	Reset Service Information	IC (Instrument Cluster)
SP03063	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03064	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03065	Reset Odometer	IC (Instrument Cluster)
SP03066	Reset Service Information	IC (Instrument Cluster)
SP03067	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03068	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03069	Enable Tow Hook Presence	PTS (Parktronics)
SP03070	Disable Tow Hook Presence	PTS (Parktronics)
SP03071	Injector Codes Read	ECM (Engine Control Module)
SP03072	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03073	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03074	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03075	Oil Change	ECM (Engine Control Module)
SP03076	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03077	Injector Codes Read	ECM (Engine Control Module)
SP03078	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03079	EGR Valve Test	ECM (Engine Control Module)
SP03080	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03081	Throttle Valve Test	ECM (Engine Control Module)
SP03082	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03083	Oil Change	ECM (Engine Control Module)
SP03084	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03085	Injector Codes Read	ECM (Engine Control Module)
SP03086	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03087	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03088	EGR Valve Test	ECM (Engine Control Module)
SP03089	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03090	Throttle Valve Test	ECM (Engine Control Module)
SP03091	Speed Limit Setting	ECM (Engine Control Module)
SP03092	Injector Codes Read	ECM (Engine Control Module)
SP03093	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03094	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03095	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03096	Injector Codes Read	ECM (Engine Control Module)
SP03097	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03098	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03099	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP03100	Oil Change	ECM (Engine Control Module)
SP03101	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03102	Injector Codes Read	ECM (Engine Control Module)
SP03103	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03104	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03105	EGR Valve Test	ECM (Engine Control Module)
SP03106	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03107	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03108	Throttle Valve Test	ECM (Engine Control Module)
SP03109	Speed Limit Setting	ECM (Engine Control Module)
SP03110	Oil Change	ECM (Engine Control Module)
SP03111	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03112	Injector Codes Read	ECM (Engine Control Module)
SP03113	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03114	EGR Valve Test	ECM (Engine Control Module)
SP03115	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03116	Throttle Valve Test	ECM (Engine Control Module)
SP03117	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03118	Oil Change	ECM (Engine Control Module)
SP03119	Injector Codes Read	ECM (Engine Control Module)
SP03120	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03121	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03122	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03123	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03124	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03125	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03126	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03127	Oil Change	ECM (Engine Control Module)
SP03128	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03129	Injector Codes Read	ECM (Engine Control Module)
SP03130	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03131	EGR Valve Test	ECM (Engine Control Module)
SP03132	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03133	Throttle Valve Test	ECM (Engine Control Module)
SP03134	Speed Limit Setting	ECM (Engine Control Module)
SP03135	Oil Change	ECM (Engine Control Module)
SP03136	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03137	Injector Codes Read	ECM (Engine Control Module)

SP03138	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03139	EGR Valve Test	ECM (Engine Control Module)
SP03140	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03141	Speed Limit Setting	ECM (Engine Control Module)
SP03142	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03143	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03144	Phonic Wheel Reset	ECM (Engine Control Module)
SP03145	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03146	Oil Change	ECM (Engine Control Module)
SP03147	Injector Codes Read	ECM (Engine Control Module)
SP03148	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03149	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03150	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03151	Oil Change	ECM (Engine Control Module)
SP03152	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03153	Injector Codes Read	ECM (Engine Control Module)
SP03154	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03155	EGR Valve Test	ECM (Engine Control Module)
SP03156	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03157	Speed Limit Setting	ECM (Engine Control Module)
SP03158	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03159	Motorized Throttle Learning	ECM (Engine Control Module)
SP03160	Phonic Wheel Reset	ECM (Engine Control Module)
SP03161	Reset Phases Front	ECM (Engine Control Module)
SP03162	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03163	Oil Change	ECM (Engine Control Module)
SP03164	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03165	Injector Codes Read	ECM (Engine Control Module)
SP03166	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03167	EGR Valve Test	ECM (Engine Control Module)
SP03168	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03169	Throttle Valve Test	ECM (Engine Control Module)
SP03170	Speed Limit Setting	ECM (Engine Control Module)
SP03171	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03172	Injector Codes Read	ECM (Engine Control Module)
SP03173	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03174	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03175	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03176	Oil Change	ECM (Engine Control Module)

SP03177	Injector Codes Read	ECM (Engine Control Module)
SP03178	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03179	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03180	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03181	Injector Codes Read	ECM (Engine Control Module)
SP03182	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03183	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03184	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03185	Oil Change	ECM (Engine Control Module)
SP03186	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03187	Injector Codes Read	ECM (Engine Control Module)
SP03188	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03189	EGR Valve Test	ECM (Engine Control Module)
SP03190	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03191	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03192	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03193	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03194	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03195	Oil Change	ECM (Engine Control Module)
SP03196	Injector Codes Read	ECM (Engine Control Module)
SP03197	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03198	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03199	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03200	Injector Codes Read	ECM (Engine Control Module)
SP03201	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03202	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03203	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03204	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03205	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03206	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03207	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03208	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03209	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03210	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03211	Phonic Wheel Reset	ECM (Engine Control Module)
SP03212	Vehicle Configuration Reset	ECM (Engine Control Module)
SP03213	Oil Change	ECM (Engine Control Module)
SP03214	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03215	Injector Codes Read	ECM (Engine Control Module)

SP03216	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03217	EGR Valve Test	ECM (Engine Control Module)
SP03218	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03219	Throttle Valve Test	ECM (Engine Control Module)
SP03220	Speed Limit Setting	ECM (Engine Control Module)
SP03221	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03222	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03223	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03224	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03225	Injector Codes Read	ECM (Engine Control Module)
SP03226	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03227	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03228	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03229	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03230	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03231	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03232	Injector Codes Read	ECM (Engine Control Module)
SP03233	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03234	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03235	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03236	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03237	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03238	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03239	Motorized Throttle Learning	ECM (Engine Control Module)
SP03240	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP03241	Vehicle Configuration Reset	ECM (Engine Control Module)
SP03242	Oil Change	ECM (Engine Control Module)
SP03243	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03244	Injector Codes Read	ECM (Engine Control Module)
SP03245	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03246	EGR Valve Test	ECM (Engine Control Module)
SP03247	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03248	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03249	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03250	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03251	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03252	Oil Change	ECM (Engine Control Module)
SP03253	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP03254	Injector Codes Read	ECM (Engine Control Module)
SP03255	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03256	EGR Valve Test	ECM (Engine Control Module)
SP03257	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03258	Throttle Valve Test	ECM (Engine Control Module)
SP03259	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03260	Oil Change	ECM (Engine Control Module)
SP03261	Injector Codes Read	ECM (Engine Control Module)
SP03262	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03263	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03264	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03265	Clutch Pedal Learning	ECM (Engine Control Module)
SP03266	Motorized Throttle Learning	ECM (Engine Control Module)
SP03267	Phonic Wheel Reset	ECM (Engine Control Module)
SP03268	Reset Phases Front	ECM (Engine Control Module)
SP03269	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03270	Oil Change	ECM (Engine Control Module)
SP03271	Injector Codes Read	ECM (Engine Control Module)
SP03272	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03273	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03274	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03275	Injector Codes Read	ECM (Engine Control Module)
SP03276	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03277	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03278	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03279	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03280	Phonic Wheel Reset	ECM (Engine Control Module)
SP03281	Vehicle Configuration Reset	ECM (Engine Control Module)
SP03282	Oil Change	ECM (Engine Control Module)
SP03283	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03284	Injector Codes Read	ECM (Engine Control Module)
SP03285	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03286	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03287	EGR Valve Test	ECM (Engine Control Module)
SP03288	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03289	Throttle Valve Test	ECM (Engine Control Module)
SP03290	Speed Limit Setting	ECM (Engine Control Module)
SP03291	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03292	Phonic Wheel Replacement	ECM (Engine Control Module)

SP03293	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03294	Clutch Pedal Learning	ECM (Engine Control Module)
SP03295	Motorized Throttle Learning	ECM (Engine Control Module)
SP03296	Phonic Wheel Reset	ECM (Engine Control Module)
SP03297	Reset Phases Front	ECM (Engine Control Module)
SP03298	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03299	Motorized Throttle Learning	ECM (Engine Control Module)
SP03300	Phonic Wheel Reset	ECM (Engine Control Module)
SP03301	Reset Phases Front	ECM (Engine Control Module)
SP03302	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03303	Oil Change	ECM (Engine Control Module)
SP03304	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03305	Injector Codes Read	ECM (Engine Control Module)
SP03306	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03307	EGR Valve Test	ECM (Engine Control Module)
SP03308	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03309	Throttle Valve Test	ECM (Engine Control Module)
SP03310	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03311	Motorized Throttle Learning	ECM (Engine Control Module)
SP03312	Phonic Wheel Reset	ECM (Engine Control Module)
SP03313	Reset Phases Front	ECM (Engine Control Module)
SP03314	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03315	Injector Codes Read	ECM (Engine Control Module)
SP03316	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03317	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03318	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03319	Motorized Throttle Learning	ECM (Engine Control Module)
SP03320	Phonic Wheel Reset	ECM (Engine Control Module)
SP03321	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03322	Oil Change	ECM (Engine Control Module)
SP03323	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03324	Injector Codes Read	ECM (Engine Control Module)
SP03325	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03326	EGR Valve Test	ECM (Engine Control Module)
SP03327	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03328	Throttle Valve Test	ECM (Engine Control Module)
SP03329	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03330	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03331	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP03332	Injector Codes Read	ECM (Engine Control Module)
SP03333	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03334	Oil Change	ECM (Engine Control Module)
SP03335	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03336	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03337	EGR Valve Test	ECM (Engine Control Module)
SP03338	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03339	Throttle Valve Test	ECM (Engine Control Module)
SP03340	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03341	Reset Statistical Data	TCM (Transmission Control Module)
SP03342	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03343	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03344	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03345	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03346	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP03347	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03348	Static Test	ABS (Anti-Lock Braking System)
SP03349	Static Test	ABS (Anti-Lock Braking System)
SP03350	Static Test	ABS (Anti-Lock Braking System)
SP03351	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP03352	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP03353	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03354	Static Test	ABS (Anti-Lock Braking System)
SP03355	TPMS Calibration	ABS (Anti-Lock Braking System)
SP03356	Steering Angle Calibration	EPS (Electric Power Steering)
SP03357	Steering Angle Calibration	EPS (Electric Power Steering)
SP03358	Steering Angle Calibration	EPS (Electric Power Steering)
SP03359	Steering Angle Calibration	EPS (Electric Power Steering)
SP03360	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03361	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03362	Reset Odometer	IC (Instrument Cluster)
SP03363	Reset Service Information	IC (Instrument Cluster)
SP03364	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03365	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03366	Reset Odometer	IC (Instrument Cluster)
SP03367	Reset Service Information	IC (Instrument Cluster)
SP03368	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03369	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03370	Reset Odometer	IC (Instrument Cluster)

SP03371	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03372	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03373	Reset Odometer	IC (Instrument Cluster)
SP03374	Reset Service Information	IC (Instrument Cluster)
SP03375	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03376	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03377	Reset Odometer	IC (Instrument Cluster)
SP03378	Reset Service Information	IC (Instrument Cluster)
SP03379	Alarms Deletion	TPMS (Tire Pressure Monitoring System)
SP03380	Antenna Replacement	TPMS (Tire Pressure Monitoring System)
SP03381	Control Unit Activation	TPMS (Tire Pressure Monitoring System)
SP03382	Control Unit Deactivation	TPMS (Tire Pressure Monitoring System)
SP03383	Manual System Configuration	TPMS (Tire Pressure Monitoring System)
SP03384	Automatic Configuration Read	TPMS (Tire Pressure Monitoring System)
SP03385	Wheel Transmitters Learning	TPMS (Tire Pressure Monitoring System)
SP03386	Automatic Configuration Write	TPMS (Tire Pressure Monitoring System)
SP03387	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP03388	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03389	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03390	Static Test	ABS (Anti-Lock Braking System)
SP03391	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03392	Static Test	ABS (Anti-Lock Braking System)
SP03393	Reset Odometer	IC (Instrument Cluster)
SP03394	Reset Service Information	IC (Instrument Cluster)
SP03395	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03396	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03397	Reset Odometer	IC (Instrument Cluster)
SP03398	Reset Service Information	IC (Instrument Cluster)
SP03399	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03400	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03401	Steering Angle Sensor	EPS (Electric Power Steering)
SP03402	Steering Angle Sensor	EPS (Electric Power Steering)
SP03403	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP03404	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03405	Injector Codes Read	ECM (Engine Control Module)
SP03406	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03407	Oil Change	ECM (Engine Control Module)
SP03408	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03409	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)

SP03410	EGR Valve Test	ECM (Engine Control Module)
SP03411	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03412	Throttle Valve Test	ECM (Engine Control Module)
SP03413	Motorized Throttle Learning	ECM (Engine Control Module)
SP03414	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03415	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03416	Injector/S Replacement	ECM (Engine Control Module)
SP03417	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP03418	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03419	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03420	Injector Codes Read	ECM (Engine Control Module)
SP03421	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03422	Oil Change	ECM (Engine Control Module)
SP03423	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03424	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03425	EGR Valve Test	ECM (Engine Control Module)
SP03426	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03427	Throttle Valve Test	ECM (Engine Control Module)
SP03428	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03429	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03430	Injector/S Replacement	ECM (Engine Control Module)
SP03431	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP03432	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03433	Injector Codes Read	ECM (Engine Control Module)
SP03434	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03435	Oil Change	ECM (Engine Control Module)
SP03436	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03437	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03438	EGR Valve Test	ECM (Engine Control Module)
SP03439	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03440	Throttle Valve Test	ECM (Engine Control Module)
SP03441	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03442	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03443	Injector Codes Read	ECM (Engine Control Module)
SP03444	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03445	Oil Change	ECM (Engine Control Module)
SP03446	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03447	EGR Valve Test	ECM (Engine Control Module)
SP03448	Throttle Valve Test	ECM (Engine Control Module)

SP03449	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03450	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03451	Injector/S Replacement	ECM (Engine Control Module)
SP03452	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP03453	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03454	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03455	Injector Codes Read	ECM (Engine Control Module)
SP03456	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03457	Oil Change	ECM (Engine Control Module)
SP03458	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03459	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03460	EGR Valve Test	ECM (Engine Control Module)
SP03461	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03462	Throttle Valve Test	ECM (Engine Control Module)
SP03463	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03464	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03465	Injector/S Replacement	ECM (Engine Control Module)
SP03466	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP03467	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03468	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03469	Injector Codes Read	ECM (Engine Control Module)
SP03470	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03471	Oil Change	ECM (Engine Control Module)
SP03472	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03473	EGR Valve Test	ECM (Engine Control Module)
SP03474	Throttle Valve Test	ECM (Engine Control Module)
SP03475	Clutch Pedal Learning	ECM (Engine Control Module)
SP03476	Motorized Throttle Learning	ECM (Engine Control Module)
SP03477	Waste Gate Valve Command	ECM (Engine Control Module)
SP03478	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03479	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03480	Injector/S Replacement	ECM (Engine Control Module)
SP03481	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP03482	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03483	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03484	Injector/S Replacement	ECM (Engine Control Module)
SP03485	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP03486	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)

SP03487	Injector Codes Read	ECM (Engine Control Module)
SP03488	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03489	Oil Change	ECM (Engine Control Module)
SP03490	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03491	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03492	EGR Valve Test	ECM (Engine Control Module)
SP03493	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03494	Throttle Valve Test	ECM (Engine Control Module)
SP03495	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03496	Injector Codes Read	ECM (Engine Control Module)
SP03497	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03498	Oil Change	ECM (Engine Control Module)
SP03499	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03500	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03501	EGR Valve Test	ECM (Engine Control Module)
SP03502	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03503	Throttle Valve Test	ECM (Engine Control Module)
SP03504	Motorized Throttle Learning	ECM (Engine Control Module)
SP03505	Motorized Throttle Learning	ECM (Engine Control Module)
SP03506	Reset Mixture Adaptation Values	ECM (Engine Control Module)
SP03507	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03508	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03509	Injector Codes Read	ECM (Engine Control Module)
SP03510	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03511	Oil Change	ECM (Engine Control Module)
SP03512	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03513	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03514	EGR Valve Test	ECM (Engine Control Module)
SP03515	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03516	Throttle Valve Test	ECM (Engine Control Module)
SP03517	Motorized Throttle Learning	ECM (Engine Control Module)
SP03518	Reset Mixture Adaptation Values	ECM (Engine Control Module)
SP03519	Neutral Position Self Learning.	TCM (Transmission Control Module)
SP03520	Neutral Position Self Learning.	TCM (Transmission Control Module)
SP03521	Static Test	ABS (Anti-Lock Braking System)
SP03522	Longitudinal And Lateral Sensor Uncalibration	ABS (Anti-Lock Braking System)
SP03523	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03524	Static Test	ABS (Anti-Lock Braking System)

SP03525	TPMS Calibration	ABS (Anti-Lock Braking System)
SP03526	Reset Service Information	IC (Instrument Cluster)
SP03527	Reset Odometer	IC (Instrument Cluster)
SP03528	Reset Service Information	IC (Instrument Cluster)
SP03529	Reset Odometer	IC (Instrument Cluster)
SP03530	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP03531	Check PCM Odometer	PCM (Powertrain Control Module)
SP03532	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03533	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03534	Reset Memory	PCM (Powertrain Control Module)
SP03535	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP03536	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP03537	EGR System Test	PCM (Powertrain Control Module)
SP03538	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03539	Set Engine RPM	PCM (Powertrain Control Module)
SP03540	Reset Purge Fuel Circuit	ECM (Engine Control Module)
SP03541	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
SP03542	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP03543	Clutch Pedal Learning	ECM (Engine Control Module)
SP03544	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03545	Lambda Function Reset	ECM (Engine Control Module)
SP03546	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03547	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03548	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03549	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03550	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03551	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03552	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03553	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03554	Lambda Function Reset	ECM (Engine Control Module)
SP03555	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03556	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03557	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03558	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03559	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03560	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03561	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03562	Purge Fuel Circuit Reset	ECM (Engine Control Module)

SP03563	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP03564	Clutch Pedal Learning	ECM (Engine Control Module)
SP03565	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03566	Lambda Function Reset	ECM (Engine Control Module)
SP03567	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03568	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03569	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03570	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03571	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03572	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03573	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03574	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03575	Lambda Function Reset	ECM (Engine Control Module)
SP03576	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03577	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03578	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03579	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03580	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03581	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03582	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03583	Clear Self Learning Data	TCM (Transmission Control Module)
SP03584	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP03585	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP03586	Reset Angle Offset	ABS (Anti-Lock Braking System)
SP03587	Lock Doors Command	BCM (Body Control Module)
SP03588	Unlock Doors Command	BCM (Body Control Module)
SP03589	Lock Doors Command	BCM (Body Control Module)
SP03590	Unlock Doors Command	BCM (Body Control Module)
SP03591	Lock Doors Command	BCM (Body Control Module)
SP03592	Unlock Doors Command	BCM (Body Control Module)
SP03593	Reset Service Information	IC (Instrument Cluster)
SP03594	Reset Service Information	IC (Instrument Cluster)
SP03595	Reset Odometer	IC (Instrument Cluster)
SP03596	Reset Odometer	IC (Instrument Cluster)
SP03597	Reset Parameter.	ETM (Entertainment Telematic Module)
SP03598	Reset Parameter	ETM (Entertainment Telematic Module)
SP03599	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP03600	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)

SP03601	Steering Angle Sensor	EPS (Electric Power Steering)
SP03602	Reset Purge Fuel Circuit	ECM (Engine Control Module)
SP03603	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
SP03604	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP03605	Clutch Pedal Learning	ECM (Engine Control Module)
SP03606	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03607	Lambda Function Reset	ECM (Engine Control Module)
SP03608	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03609	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03610	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03611	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03612	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03613	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03614	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03615	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03616	Lambda Function Reset	ECM (Engine Control Module)
SP03617	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03618	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03619	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03620	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03621	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03622	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03623	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03624	Purge Fuel Circuit Reset	ECM (Engine Control Module)
SP03625	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP03626	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03627	Lambda Function Reset	ECM (Engine Control Module)
SP03628	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03629	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03630	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03631	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03632	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03633	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03634	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03635	Clutch Pedal Learning	ECM (Engine Control Module)
SP03636	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03637	Lambda Function Reset	ECM (Engine Control Module)
SP03638	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03639	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)

SP03640	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03641	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03642	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03643	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03644	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03645	Check PCM Odometer	PCM (Powertrain Control Module)
SP03646	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03647	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03648	Reset Memory	PCM (Powertrain Control Module)
SP03649	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP03650	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP03651	EGR System Test	PCM (Powertrain Control Module)
SP03652	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03653	Set Engine RPM	PCM (Powertrain Control Module)
SP03654	Clear Self Learning Data	TCM (Transmission Control Module)
SP03655	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP03656	Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP03657	Reset Angle Offset	ABS (Anti Lock Brakes)
SP03658	Lock Doors Command	BCM (Body Control Module)
SP03659	Unlock Doors Command	BCM (Body Control Module)
SP03660	Lock Doors Command	BCM (Body Control Module)
SP03661	Unlock Doors Command	BCM (Body Control Module)
SP03662	Lock Doors Command	BCM (Body Control Module)
SP03663	Unlock Doors Command	BCM (Body Control Module)
SP03664	Steering Angle Sensor	EPS (Electric Power Steering)
SP03665	Reset Odometer	IPC (Instrument Panel Cluster)
SP03666	Reset Odometer	IPC (Instrument Panel Cluster)
SP03667	Reset Parameter.	ETM (Entertainment Telematic Module)
SP03668	Reset Parameter	ETM (Entertainment Telematic Module)
SP03669	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP03670	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP03671	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03672	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03673	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03674	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03675	Purge Fuel Circuit Reset	ECM (Engine Control Module)
SP03676	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03677	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03678	Reset Vehicle Configuration	ECM (Engine Control Module)

SP03679	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03680	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03681	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03682	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03683	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03684	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03685	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03686	Purge Fuel Circuit Reset	ECM (Engine Control Module)
SP03687	Clutch Pedal Learning	ECM (Engine Control Module)
SP03688	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03689	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03690	Reset Functions Self Learned	TCM (Transmission Control Module)
SP03691	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP03692	Quick Learn	TCM (Transmission Control Module)
SP03693	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP03694	Reset TPMS Calibration	ABS (Anti Lock Brakes)
SP03695	Lock Doors Command	BCM (Body Control Module)
SP03696	Unlock Doors Command	BCM (Body Control Module)
SP03697	Rear Window Wiper Command	BCM (Body Control Module)
SP03698	Reset Functions Self Learned	DMM (Door Management Module)
SP03699	Learn Clutches Contact Point	DMM (Door Management Module)
SP03700	Quick Learn	DMM (Door Management Module)
SP03701	ECU Replacement With Value Transfer	DMM (Door Management Module)
SP03702	Windows Lifter Test	DMM (Door Management Module)
SP03703	Windows Lifter Test	DMM (Door Management Module)
SP03704	Reset Parameter.	ETM (Entertainment Telematic Module)
SP03705	Reset Parameter	ETM (Entertainment Telematic Module)
SP03706	Reset Parameter.	LTM (Low Telematic Module)
SP03707	Oil Change	ECM (Engine Control Module)
SP03708	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03709	Injector Codes Read	ECM (Engine Control Module)
SP03710	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03711	EGR Valve Test	ECM (Engine Control Module)
SP03712	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03713	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03714	Throttle Valve Test	ECM (Engine Control Module)
SP03715	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP03716	Reset Phases Front	ECM (Engine Control Module)
SP03717	Reset Vehicle Configuration	ECM (Engine Control Module)

SP03718	Reset Learning Gear Neutral Position Value	ECM (Engine Control Module)
SP03719	Self Learning Throttle Body	ECM (Engine Control Module)
SP03720	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP03721	Reset Phases Front	ECM (Engine Control Module)
SP03722	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03723	Reset Learning Gear Neutral Position Value	ECM (Engine Control Module)
SP03724	Self Learning Throttle Body	ECM (Engine Control Module)
SP03725	Oil Change	ECM (Engine Control Module)
SP03726	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03727	Injector Codes Read	ECM (Engine Control Module)
SP03728	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03729	EGR Valve Test	ECM (Engine Control Module)
SP03730	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03731	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03732	Throttle Valve Test	ECM (Engine Control Module)
SP03733	Clutch Pedal Learning	ECM (Engine Control Module)
SP03734	Motorized Throttle Learning	ECM (Engine Control Module)
SP03735	Phonic Wheel Reset	ECM (Engine Control Module)
SP03736	Reset Phases Front	ECM (Engine Control Module)
SP03737	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03738	Motorized Throttle Learning	ECM (Engine Control Module)
SP03739	Phonic Wheel Reset	ECM (Engine Control Module)
SP03740	Vehicle Configuration Reset	ECM (Engine Control Module)
SP03741	Clutch Pedal Learning	ECM (Engine Control Module)
SP03742	Motorized Throttle Learning	ECM (Engine Control Module)
SP03743	Phonic Wheel Reset	ECM (Engine Control Module)
SP03744	Reset Phases Front	ECM (Engine Control Module)
SP03745	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03746	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03747	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03748	Clutch Pedal Learning	ECM (Engine Control Module)
SP03749	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03750	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03751	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03752	Clutch Pedal Learning	ECM (Engine Control Module)
SP03753	Neutral Signal Learning With Engine Off	ECM (Engine Control Module)
SP03754	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03755	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP03756	Oil Change	ECM (Engine Control Module)
SP03757	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03758	Injector Codes Read	ECM (Engine Control Module)
SP03759	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03760	EGR Valve Test	ECM (Engine Control Module)
SP03761	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03762	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03763	Throttle Valve Test	ECM (Engine Control Module)
SP03764	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03765	Neutral Signal Learning With Engine Off	ECM (Engine Control Module)
SP03766	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03767	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03768	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03769	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03770	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03771	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03772	Clutch Pedal Learning	ECM (Engine Control Module)
SP03773	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03774	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03775	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03776	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03777	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03778	Oil Change	ECM (Engine Control Module)
SP03779	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03780	Injector Codes Read	ECM (Engine Control Module)
SP03781	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03782	EGR Valve Test	ECM (Engine Control Module)
SP03783	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03784	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03785	Throttle Valve Test	ECM (Engine Control Module)
SP03786	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03787	Clutch Pedal Learning	ECM (Engine Control Module)
SP03788	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03789	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03790	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03791	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03792	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)
SP03793	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP03794	Static Test	ABS (Anti Lock Brakes)

SP03795	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP03796	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)
SP03797	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP03798	Static Test	ABS (Anti Lock Brakes)
SP03799	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP03800	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)
SP03801	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP03802	Static Test	ABS (Anti Lock Brakes)
SP03803	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP03804	Static Test	ABS (Anti Lock Brakes)
SP03805	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP03806	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)
SP03807	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP03808	Static Test	ABS (Anti Lock Brakes)
SP03809	TPMS Calibration	ABS (Anti Lock Brakes)
SP03810	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP03811	Reset Odometer	IPC (Instrument Panel Cluster)
SP03812	Reset Service Information	IPC (Instrument Panel Cluster)
SP03813	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03814	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03815	Reset Odometer	IPC (Instrument Panel Cluster)
SP03816	Reset Service Information	IPC (Instrument Panel Cluster)
SP03817	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03818	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03819	Reset Odometer	IPC (Instrument Panel Cluster)
SP03820	Reset Service Information	IPC (Instrument Panel Cluster)
SP03821	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03822	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03823	Reset Odometer	IPC (Instrument Panel Cluster)
SP03824	Reset Service Information	IPC (Instrument Panel Cluster)
SP03825	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03826	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03827	Steering Angle Calibration	EPS (Electric Power Steering)
SP03828	Check PCM Odometer	PCM (Powertrain Control Module)
SP03829	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03830	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03831	Reset Memory	PCM (Powertrain Control Module)
SP03832	EGR System Test	PCM (Powertrain Control Module)
SP03833	ETC Throttle Follower Test	PCM (Powertrain Control Module)

SP03834	Set Engine RPM	PCM (Powertrain Control Module)
SP03835	Check PCM Odometer	PCM (Powertrain Control Module)
SP03836	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03837	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03838	Reset Memory	PCM (Powertrain Control Module)
SP03839	EGR System Test	PCM (Powertrain Control Module)
SP03840	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03841	Set Engine RPM	PCM (Powertrain Control Module)
SP03842	Bleed Brakes	ABS (Anti Lock Brakes)
SP03843	Initialize ABS	ABS (Anti Lock Brakes)
SP03844	Bleed Brakes	ABS (Anti Lock Brakes)
SP03845	Reset Odometer	PDM (Passenger Door Module)
SP03846	Reset Service Information	PDM (Passenger Door Module)
SP03847	Disable Seat Belts Reminder	PDM (Passenger Door Module)
SP03848	Enable Seat Belts Reminder	PDM (Passenger Door Module)
SP03849	Auto Door Lock	CCN (Instrument Cluster/Cabin Compartment Node)
SP03850	Auto Door Unlock	CCN (Instrument Cluster/Cabin Compartment Node)
SP03851	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP03852	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP03853	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP03854	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP03855	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP03856	Check PCM Odometer	PCM (Powertrain Control Module)
SP03857	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03858	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03859	Reset Memory	PCM (Powertrain Control Module)
SP03860	EGR System Test	PCM (Powertrain Control Module)
SP03861	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03862	Set Engine RPM	PCM (Powertrain Control Module)
SP03863	Check PCM Odometer	PCM (Powertrain Control Module)
SP03864	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03865	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03866	Reset Memory	PCM (Powertrain Control Module)
SP03867	EGR System Test	PCM (Powertrain Control Module)
SP03868	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03869	Set Engine RPM	PCM (Powertrain Control Module)
SP03870	Bleed Brakes	ABS (Anti Lock Brakes)
SP03871	Initialize ABS	ABS (Anti Lock Brakes)

SP03872	Bleed Brakes	ABS (Anti Lock Brakes)
SP03873	Auto Door Lock	CCN (Instrument Cluster/Cabin Compartment Node)
SP03874	Auto Door Unlock	CCN (Instrument Cluster/Cabin Compartment Node)
SP03875	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP03876	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP03877	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP03878	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP03879	Reset Odometer	PDM (Passenger Door Module)
SP03880	Reset Service Information	PDM (Passenger Door Module)
SP03881	Disable Seat Belts Reminder	PDM (Passenger Door Module)
SP03882	Enable Seat Belts Reminder	PDM (Passenger Door Module)
SP03883	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP03884	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP03885	DPF Reset Option	PCM (Powertrain Control Module)
SP03886	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP03887	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP03888	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP03889	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP03890	Throttle Valve Learn	PCM (Powertrain Control Module)
SP03891	Check PCM Odometer	PCM (Powertrain Control Module)
SP03892	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03893	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03894	Reset Memory	PCM (Powertrain Control Module)
SP03895	EGR System Test	PCM (Powertrain Control Module)
SP03896	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03897	Set Engine RPM	PCM (Powertrain Control Module)
SP03898	Check PCM Odometer	PCM (Powertrain Control Module)
SP03899	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03900	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03901	Reset Memory	PCM (Powertrain Control Module)
SP03902	EGR System Test	PCM (Powertrain Control Module)
SP03903	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03904	Set Engine RPM	PCM (Powertrain Control Module)
SP03905	Reset Adaptive Values	TCM (Transmission Control Module)
SP03906	Reset Learned Adaptives	TCM (Transmission Control Module)
SP03907	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP03908	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP03909	Initialize ORC	ORC (Occupant Restraint)
SP03910	Auto Door Lock	BCM (Body Control Module)

SP03911	Program Tire Size	BCM (Body Control Module)
SP03912	Configure License Plate Size	PTS (Parktronics)
SP03913	System Wiring Test	PTS (Parktronics)
SP03914	Disable/Enable Seatbelt Minder Chime	IPC (Instrument Panel Cluster)
SP03915	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03916	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03917	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03918	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03919	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP03920	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP03921	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP03922	DPF Reset Option	PCM (Powertrain Control Module)
SP03923	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP03924	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP03925	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP03926	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP03927	Throttle Valve Learn	PCM (Powertrain Control Module)
SP03928	Check PCM Odometer	PCM (Powertrain Control Module)
SP03929	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03930	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03931	Reset Memory	PCM (Powertrain Control Module)
SP03932	EGR System Test	PCM (Powertrain Control Module)
SP03933	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03934	Set Engine RPM	PCM (Powertrain Control Module)
SP03935	Check PCM Odometer	PCM (Powertrain Control Module)
SP03936	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03937	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03938	Reset Memory	PCM (Powertrain Control Module)
SP03939	EGR System Test	PCM (Powertrain Control Module)
SP03940	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03941	Set Engine RPM	PCM (Powertrain Control Module)
SP03942	Reset Adaptive Values	TCM (Transmission Control Module)
SP03943	Reset Adaptive Values	TCM (Transmission Control Module)
SP03944	Quick Learn	TCM (Transmission Control Module)
SP03945	Reset Learned Adaptives	TCM (Transmission Control Module)
SP03946	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP03947	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP03948	Initialize ORC	ORC (Occupant Restraint)
SP03949	Auto Door Lock	BCM (Body Control Module)

SP03950	Program Tire Size	BCM (Body Control Module)
SP03951	Disable/Enable Seatbelt Minder Chime	IPC (Instrument Panel Cluster)
SP03952	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03953	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03954	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03955	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03956	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP03957	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP03958	Configure License Plate Size	PTS (Parktronics)
SP03959	System Wiring Test	PTS (Parktronics)
SP03960	Check PCM Odometer	PCM (Powertrain Control Module)
SP03961	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03962	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03963	Reset Memory	PCM (Powertrain Control Module)
SP03964	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP03965	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP03966	EGR System Test	PCM (Powertrain Control Module)
SP03967	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03968	Set Engine RPM	PCM (Powertrain Control Module)
SP03969	Check PCM Odometer	PCM (Powertrain Control Module)
SP03970	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03971	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03972	Reset Memory	PCM (Powertrain Control Module)
SP03973	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP03974	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP03975	EGR System Test	PCM (Powertrain Control Module)
SP03976	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03977	Set Engine RPM	PCM (Powertrain Control Module)
SP03978	Check PCM Odometer	PCM (Powertrain Control Module)
SP03979	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03980	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03981	Reset Memory	PCM (Powertrain Control Module)
SP03982	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP03983	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP03984	EGR System Test	PCM (Powertrain Control Module)
SP03985	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03986	Set Engine RPM	PCM (Powertrain Control Module)
SP03987	Check PCM Odometer	PCM (Powertrain Control Module)
SP03988	Quicklearn (62TE)	PCM (Powertrain Control Module)

SP03989	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03990	Reset Memory	PCM (Powertrain Control Module)
SP03991	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP03992	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP03993	EGR System Test	PCM (Powertrain Control Module)
SP03994	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03995	Set Engine RPM	PCM (Powertrain Control Module)
SP03996	Check PCM Odometer	PCM (Powertrain Control Module)
SP03997	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03998	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03999	Reset Memory	PCM (Powertrain Control Module)
SP04000	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04001	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04002	EGR System Test	PCM (Powertrain Control Module)
SP04003	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04004	Set Engine RPM	PCM (Powertrain Control Module)
SP04005	Check PCM Odometer	PCM (Powertrain Control Module)
SP04006	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04007	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04008	Reset Memory	PCM (Powertrain Control Module)
SP04009	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04010	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04011	EGR System Test	PCM (Powertrain Control Module)
SP04012	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04013	Set Engine RPM	PCM (Powertrain Control Module)
SP04014	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP04015	DPF Reset Option	PCM (Powertrain Control Module)
SP04016	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP04017	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP04018	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP04019	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP04020	Throttle Valve Learn	PCM (Powertrain Control Module)
SP04021	Check PCM Odometer	PCM (Powertrain Control Module)
SP04022	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04023	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04024	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04025	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04026	EGR System Test	PCM (Powertrain Control Module)
SP04027	ETC Throttle Follower Test	PCM (Powertrain Control Module)

SP04028	Set Engine RPM	PCM (Powertrain Control Module)
SP04029	Check PCM Odometer	PCM (Powertrain Control Module)
SP04030	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04031	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04032	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04033	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04034	EGR System Test	PCM (Powertrain Control Module)
SP04035	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04036	Set Engine RPM	PCM (Powertrain Control Module)
SP04037	Reset Adaptive Values	TCM (Transmission Control Module)
SP04038	Reset Adaptive Values	TCM (Transmission Control Module)
SP04039	Quick Learn	TCM (Transmission Control Module)
SP04040	Reset Learned Adaptives	TCM (Transmission Control Module)
SP04041	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP04042	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP04043	Initialize ORC	ORC (Occupant Restraint)
SP04044	Auto Door Lock	BCM (Body Control Module)
SP04045	Program Tire Size	BCM (Body Control Module)
SP04046	Disable/Enable Seatbelt Minder Chime	IPC (Instrument Panel Cluster)
SP04047	Configure License Plate Size	PTS (Parktronics)
SP04048	System Wiring Test	PTS (Parktronics)
SP04049	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04050	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04051	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04052	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04053	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04054	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04055	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04056	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04057	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04058	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04059	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04060	Activate TPM High Gain Mode	TPM (Tire Pressure Monitor)
SP04061	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP04062	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04063	Check PCM Odometer	PCM (Powertrain Control Module)
SP04064	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04065	Reset Memory	PCM (Powertrain Control Module)
SP04066	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)

SP04067	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04068	EGR System Test	PCM (Powertrain Control Module)
SP04069	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04070	Set Engine RPM	PCM (Powertrain Control Module)
SP04071	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP04072	DPF Reset Option	PCM (Powertrain Control Module)
SP04073	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP04074	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP04075	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP04076	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP04077	Throttle Valve Learn	PCM (Powertrain Control Module)
SP04078	Check PCM Odometer	PCM (Powertrain Control Module)
SP04079	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04080	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04081	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04082	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04083	EGR System Test	PCM (Powertrain Control Module)
SP04084	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04085	Set Engine RPM	PCM (Powertrain Control Module)
SP04086	Check PCM Odometer	PCM (Powertrain Control Module)
SP04087	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04088	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04089	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04090	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04091	EGR System Test	PCM (Powertrain Control Module)
SP04092	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04093	Set Engine RPM	PCM (Powertrain Control Module)
SP04094	Check PCM Odometer	PCM (Powertrain Control Module)
SP04095	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04096	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04097	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04098	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04099	EGR System Test	PCM (Powertrain Control Module)
SP04100	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04101	Set Engine RPM	PCM (Powertrain Control Module)
SP04102	Check PCM Odometer	PCM (Powertrain Control Module)
SP04103	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04104	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04105	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)

SP04106	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04107	EGR System Test	PCM (Powertrain Control Module)
SP04108	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04109	Set Engine RPM	PCM (Powertrain Control Module)
SP04110	Reset Learned Adaptives	TCM (Transmission Control Module)
SP04111	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP04112	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP04113	Initialize ORC	ORC (Occupant Restraint)
SP04114	Auto Door Lock	BCM (Body Control Module)
SP04115	Program Tire Size	BCM (Body Control Module)
SP04116	Enable/Disable Seatbelt Minder	IPC (Instrument Panel Cluster)
SP04117	Program Left Front Tire Sensor ID	ESM (Electronic Shifter)
SP04118	Program Left Rear Tire Sensor ID	ESM (Electronic Shifter)
SP04119	Program Right Front Tire Sensor ID	ESM (Electronic Shifter)
SP04120	Program Right Rear Tire Sensor ID	ESM (Electronic Shifter)
SP04121	Sensor Rolls Test	ESM (Electronic Shifter)
SP04122	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04123	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04124	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04125	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04126	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04127	Activate TPM High Gain Mode	TPM (Tire Pressure Monitor)
SP04128	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP04129	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04130	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04131	Check PCM Odometer	PCM (Powertrain Control Module)
SP04132	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04133	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04134	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04135	EGR System Test	PCM (Powertrain Control Module)
SP04136	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04137	Set Engine RPM	PCM (Powertrain Control Module)
SP04138	Check PCM Odometer	PCM (Powertrain Control Module)
SP04139	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04140	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04141	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04142	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04143	EGR System Test	PCM (Powertrain Control Module)
SP04144	ETC Throttle Follower Test	PCM (Powertrain Control Module)

SP04145	Set Engine RPM	PCM (Powertrain Control Module)
SP04146	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP04147	DPF Reset Option	PCM (Powertrain Control Module)
SP04148	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP04149	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP04150	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP04151	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP04152	Throttle Valve Learn	PCM (Powertrain Control Module)
SP04153	Reset Learned Adaptives	TCM (Transmission Control Module)
SP04154	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP04155	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP04156	Initialize ORC	ORC (Occupant Restraint)
SP04157	Program Left Front Tire Sensor ID	ESM (Electronic Shifter)
SP04158	Program Left Rear Tire Sensor ID	ESM (Electronic Shifter)
SP04159	Program Right Front Tire Sensor ID	ESM (Electronic Shifter)
SP04160	Program Right Rear Tire Sensor ID	ESM (Electronic Shifter)
SP04161	Sensor Rolls Test	ESM (Electronic Shifter)
SP04162	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04163	Enable/Disable Seatbelt Minder	IPC (Instrument Panel Cluster)
SP04164	Check PCM Odometer	PCM (Powertrain Control Module)
SP04165	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04166	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04167	Reset Memory	PCM (Powertrain Control Module)
SP04168	EGR System Test	PCM (Powertrain Control Module)
SP04169	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04170	Set Engine RPM	PCM (Powertrain Control Module)
SP04171	Check PCM Odometer	PCM (Powertrain Control Module)
SP04172	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04173	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04174	Reset Memory	PCM (Powertrain Control Module)
SP04175	EGR System Test	PCM (Powertrain Control Module)
SP04176	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04177	Set Engine RPM	PCM (Powertrain Control Module)
SP04178	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)
SP04179	Bleed Brakes	ABS (Anti Lock Brakes)
SP04180	Initialize ABS	ABS (Anti Lock Brakes)
SP04181	Bleed Brakes	ABS (Anti Lock Brakes)
SP04182	ABS Bleed Brakes	ABS (Anti Lock Brakes)

SP04183	Initialize ORC	ORC (Occupant Restraint)
SP04184	Auto Wipers	TIPMCGW (Central Gateway)
SP04185	Auto Door Lock	TIPMCGW (Central Gateway)
SP04186	Auto Door Unlock	TIPMCGW (Central Gateway)
SP04187	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP04188	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP04189	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP04190	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04191	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04192	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04193	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04194	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP04195	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04196	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04197	Configure License Plate Size	PTS (Parktronics)
SP04198	System Wiring Test	PTS (Parktronics)
SP04199	Reset WIN Configuration	WCM (Wireless Control)
SP04200	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04201	Reset WIN Configuration	WCM (Wireless Control)
SP04202	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04203	Check PCM Odometer	PCM (Powertrain Control Module)
SP04204	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04205	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04206	Reset Memory	PCM (Powertrain Control Module)
SP04207	EGR System Test	PCM (Powertrain Control Module)
SP04208	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04209	Set Engine RPM	PCM (Powertrain Control Module)
SP04210	Check PCM Odometer	PCM (Powertrain Control Module)
SP04211	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04212	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04213	Reset Memory	PCM (Powertrain Control Module)
SP04214	EGR System Test	PCM (Powertrain Control Module)
SP04215	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04216	Set Engine RPM	PCM (Powertrain Control Module)
SP04217	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)
SP04218	Bleed Brakes	ABS (Anti Lock Brakes)
SP04219	Initialize ABS	ABS (Anti Lock Brakes)
SP04220	Bleed Brakes	ABS (Anti Lock Brakes)
SP04221	ABS Bleed Brakes	ABS (Anti Lock Brakes)

SP04222	Initialize ORC	ORC (Occupant Restraint)
SP04223	Auto Wipers	TIPMCGW (Central Gateway)
SP04224	Auto Door Lock	TIPMCGW (Central Gateway)
SP04225	Auto Door Unlock	TIPMCGW (Central Gateway)
SP04226	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04227	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04228	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04229	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04230	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP04231	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04232	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04233	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP04234	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP04235	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP04236	Reset WIN Configuration	WCM (Wireless Control)
SP04237	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04238	Reset WIN Configuration	WCM (Wireless Control)
SP04239	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04240	Configure License Plate Size	PTS (Parktronics)
SP04241	System Wiring Test	PTS (Parktronics)
SP04242	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)
SP04243	Check PCM Odometer	PCM (Powertrain Control Module)
SP04244	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04245	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04246	Reset Memory	PCM (Powertrain Control Module)
SP04247	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04248	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04249	EGR System Test	PCM (Powertrain Control Module)
SP04250	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04251	Set Engine RPM	PCM (Powertrain Control Module)
SP04252	Check PCM Odometer	PCM (Powertrain Control Module)
SP04253	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04254	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04255	Reset Memory	PCM (Powertrain Control Module)
SP04256	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04257	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04258	EGR System Test	PCM (Powertrain Control Module)
SP04259	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04260	Set Engine RPM	PCM (Powertrain Control Module)

SP04261	Check PCM Odometer	PCM (Powertrain Control Module)
SP04262	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04263	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04264	Reset Memory	PCM (Powertrain Control Module)
SP04265	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04266	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04267	EGR System Test	PCM (Powertrain Control Module)
SP04268	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04269	Set Engine RPM	PCM (Powertrain Control Module)
SP04270	Check PCM Odometer	PCM (Powertrain Control Module)
SP04271	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04272	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04273	Reset Memory	PCM (Powertrain Control Module)
SP04274	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04275	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04276	EGR System Test	PCM (Powertrain Control Module)
SP04277	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04278	Set Engine RPM	PCM (Powertrain Control Module)
SP04279	Check PCM Odometer	PCM (Powertrain Control Module)
SP04280	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04281	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04282	Reset Memory	PCM (Powertrain Control Module)
SP04283	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04284	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04285	EGR System Test	PCM (Powertrain Control Module)
SP04286	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04287	Set Engine RPM	PCM (Powertrain Control Module)
SP04288	Check PCM Odometer	PCM (Powertrain Control Module)
SP04289	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04290	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04291	Reset Memory	PCM (Powertrain Control Module)
SP04292	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04293	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04294	EGR System Test	PCM (Powertrain Control Module)
SP04295	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04296	Set Engine RPM	PCM (Powertrain Control Module)
SP04297	Check PCM Odometer	PCM (Powertrain Control Module)
SP04298	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04299	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)

SP04300	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04301	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04302	EGR System Test	PCM (Powertrain Control Module)
SP04303	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04304	Set Engine RPM	PCM (Powertrain Control Module)
SP04305	Check PCM Odometer	PCM (Powertrain Control Module)
SP04306	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04307	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04308	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04309	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04310	EGR System Test	PCM (Powertrain Control Module)
SP04311	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04312	Set Engine RPM	PCM (Powertrain Control Module)
SP04313	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP04314	Initialize ORC	ORC (Occupant Restraint)
SP04315	Auto Wipers	TIPMCGW (Central Gateway)
SP04316	Auto Door Lock	TIPMCGW (Central Gateway)
SP04317	Auto Door Unlock	TIPMCGW (Central Gateway)
SP04318	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04319	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04320	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04321	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04322	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP04323	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04324	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04325	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04326	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04327	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04328	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04329	Turn Off Gain Mode Override	TPM (Tire Pressure Monitor)
SP04330	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04331	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04332	Reset WIN Configuration	WCM (Wireless Control)
SP04333	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04334	Reset WIN Configuration	WCM (Wireless Control)
SP04335	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04336	Configure License Plate Size	PTS (Parktronics)
SP04337	System Wiring Test	PTS (Parktronics)
SP04338	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)

SP04339	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP04340	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP04341	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)
SP04342	Check PCM Odometer	PCM (Powertrain Control Module)
SP04343	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04344	Reset Memory	PCM (Powertrain Control Module)
SP04345	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04346	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04347	EGR System Test	PCM (Powertrain Control Module)
SP04348	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04349	Set Engine RPM	PCM (Powertrain Control Module)
SP04350	Check PCM Odometer	PCM (Powertrain Control Module)
SP04351	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04352	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04353	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04354	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04355	EGR System Test	PCM (Powertrain Control Module)
SP04356	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04357	Set Engine RPM	PCM (Powertrain Control Module)
SP04358	Check PCM Odometer	PCM (Powertrain Control Module)
SP04359	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04360	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04361	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04362	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04363	EGR System Test	PCM (Powertrain Control Module)
SP04364	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04365	Set Engine RPM	PCM (Powertrain Control Module)
SP04366	Check PCM Odometer	PCM (Powertrain Control Module)
SP04367	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04368	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04369	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04370	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04371	EGR System Test	PCM (Powertrain Control Module)
SP04372	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04373	Set Engine RPM	PCM (Powertrain Control Module)
SP04374	Check PCM Odometer	PCM (Powertrain Control Module)
SP04375	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04376	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04377	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)

SP04378	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04379	EGR System Test	PCM (Powertrain Control Module)
SP04380	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04381	Set Engine RPM	PCM (Powertrain Control Module)
SP04382	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP04383	Initialize ORC	ORC (Occupant Restraint)
SP04384	Auto Wipers	TIPMCGW (Central Gateway)
SP04385	Auto Door Lock	TIPMCGW (Central Gateway)
SP04386	Auto Door Unlock	TIPMCGW (Central Gateway)
SP04387	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04388	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04389	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04390	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04391	Turn Off Gain Mode Override	TPM (Tire Pressure Monitor)
SP04392	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04393	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04394	Reset WIN Configuration	WCM (Wireless Control)
SP04395	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04396	Reset WIN Configuration	WCM (Wireless Control)
SP04397	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04398	Configure License Plate Size	PTS (Parktronics)
SP04399	System Wiring Test	PTS (Parktronics)
SP04400	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP04401	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP04402	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP04403	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)
SP04404	Check PCM Odometer	PCM (Powertrain Control Module)
SP04405	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04406	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04407	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04408	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04409	EGR System Test	PCM (Powertrain Control Module)
SP04410	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04411	Set Engine RPM	PCM (Powertrain Control Module)
SP04412	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP04413	Initialize ORC	ORC (Occupant Restraint)
SP04414	Auto Wipers	TIPMCGW (Central Gateway)
SP04415	Auto Door Lock	TIPMCGW (Central Gateway)
SP04416	Auto Door Unlock	TIPMCGW (Central Gateway)

SP04417	Reset WIN Configuration	WCM (Wireless Control)
SP04418	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04419	Reset WIN Configuration	WCM (Wireless Control)
SP04420	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04421	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04422	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04423	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04424	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04425	TPM Sensor Position Parameter Update	TPMS (Tire Pressure Monitoring System)
SP04426	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP04427	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP04428	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04429	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04430	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04431	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04432	Turn Off Gain Mode Override	TPMS (Tire Pressure Monitoring System)
SP04433	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP04434	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP04435	Configure License Plate Size	PTS (Parktronics)
SP04436	System Wiring Test	PTS (Parktronics)
SP04437	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP04438	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP04439	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP04440	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04441	Injector Codes Read	ECM (Engine Control Module)
SP04442	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04443	Oil Change	ECM (Engine Control Module)
SP04444	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04445	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04446	EGR Valve Test	ECM (Engine Control Module)
SP04447	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04448	Throttle Valve Test	ECM (Engine Control Module)
SP04449	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04450	Oil Change	ECM (Engine Control Module)
SP04451	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04452	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04453	Injector/S Replacement	ECM (Engine Control Module)
SP04454	Waste Gate Valve Command	ECM (Engine Control Module)
SP04455	Motorized Throttle Replacement	ECM (Engine Control Module)

SP04456	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04457	Injector/S Replacement	ECM (Engine Control Module)
SP04458	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP04459	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04460	Oil Change	ECM (Engine Control Module)
SP04461	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04462	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04463	Injector/S Replacement	ECM (Engine Control Module)
SP04464	Waste Gate Valve Command	ECM (Engine Control Module)
SP04465	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04466	Injector Codes Read	ECM (Engine Control Module)
SP04467	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04468	Oil Change	ECM (Engine Control Module)
SP04469	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04470	EGR Valve Test	ECM (Engine Control Module)
SP04471	Throttle Valve Test	ECM (Engine Control Module)
SP04472	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04473	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04474	Injector/S Replacement	ECM (Engine Control Module)
SP04475	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP04476	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04477	Injector Codes Read	ECM (Engine Control Module)
SP04478	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04479	Oil Change	ECM (Engine Control Module)
SP04480	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04481	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04482	EGR Valve Test	ECM (Engine Control Module)
SP04483	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04484	Throttle Valve Test	ECM (Engine Control Module)
SP04485	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04486	Oil Change	ECM (Engine Control Module)
SP04487	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04488	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04489	Injector/S Replacement	ECM (Engine Control Module)
SP04490	Waste Gate Valve Command	ECM (Engine Control Module)
SP04491	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04492	Oil Change	ECM (Engine Control Module)
SP04493	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04494	Oil Temperature Sensor Replacement	ECM (Engine Control Module)

SP04495	Injector/S Replacement	ECM (Engine Control Module)
SP04496	Waste Gate Valve Command	ECM (Engine Control Module)
SP04497	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04498	Oil Change	ECM (Engine Control Module)
SP04499	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04500	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04501	Injector/S Replacement	ECM (Engine Control Module)
SP04502	Waste Gate Valve Command	ECM (Engine Control Module)
SP04503	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04504	Injector Codes Read	ECM (Engine Control Module)
SP04505	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04506	Oil Change	ECM (Engine Control Module)
SP04507	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04508	EGR Valve Test	ECM (Engine Control Module)
SP04509	Throttle Valve Test	ECM (Engine Control Module)
SP04510	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04511	Oil Change	ECM (Engine Control Module)
SP04512	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04513	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04514	Injector/S Replacement	ECM (Engine Control Module)
SP04515	Waste Gate Valve Command	ECM (Engine Control Module)
SP04516	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04517	Injector Codes Read	ECM (Engine Control Module)
SP04518	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04519	Oil Change	ECM (Engine Control Module)
SP04520	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04521	EGR Valve Test	ECM (Engine Control Module)
SP04522	Throttle Valve Test	ECM (Engine Control Module)
SP04523	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04524	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04525	Injector/S Replacement	ECM (Engine Control Module)
SP04526	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP04527	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04528	Injector Codes Read	ECM (Engine Control Module)
SP04529	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04530	Oil Change	ECM (Engine Control Module)
SP04531	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04532	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04533	EGR Valve Test	ECM (Engine Control Module)

SP04534	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04535	Throttle Valve Test	ECM (Engine Control Module)
SP04536	Check PCM Odometer	ECM (Engine Control Module)
SP04537	Cooled EGR H-Bridge Valve System Test	ECM (Engine Control Module)
SP04538	Reset Enhanced Automatic Oil Change Indicator	ECM (Engine Control Module)
SP04539	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP04540	EGR System Test	ECM (Engine Control Module)
SP04541	ETC Throttle Follower Test	ECM (Engine Control Module)
SP04542	Set Engine RPM	ECM (Engine Control Module)
SP04543	Air-Conditioning Self-Learning	ECM (Engine Control Module)
SP04544	Brake Switch Learn	ECM (Engine Control Module)
SP04545	Check PCM Odometer	ECM (Engine Control Module)
SP04546	Reset Accelerator Pedal Adaptives	ECM (Engine Control Module)
SP04547	Reset Memory	ECM (Engine Control Module)
SP04548	Throttle Body Self-Learning	ECM (Engine Control Module)
SP04549	Check PCM Odometer	ECM (Engine Control Module)
SP04550	Cooled EGR H-Bridge Valve System Test	ECM (Engine Control Module)
SP04551	Reset Enhanced Automatic Oil Change Indicator	ECM (Engine Control Module)
SP04552	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP04553	EGR System Test	ECM (Engine Control Module)
SP04554	ETC Throttle Follower Test	ECM (Engine Control Module)
SP04555	Set Engine RPM	ECM (Engine Control Module)
SP04556	Check PCM Odometer	ECM (Engine Control Module)
SP04557	Cooled EGR H-Bridge Valve System Test	ECM (Engine Control Module)
SP04558	Reset Enhanced Automatic Oil Change Indicator	ECM (Engine Control Module)
SP04559	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP04560	EGR System Test	ECM (Engine Control Module)
SP04561	ETC Throttle Follower Test	ECM (Engine Control Module)
SP04562	Set Engine RPM	ECM (Engine Control Module)
SP04563	Check PCM Odometer	ECM (Engine Control Module)
SP04564	Cooled EGR H-Bridge Valve System Test	ECM (Engine Control Module)
SP04565	Reset Enhanced Automatic Oil Change Indicator	ECM (Engine Control Module)
SP04566	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP04567	EGR System Test	ECM (Engine Control Module)
SP04568	ETC Throttle Follower Test	ECM (Engine Control Module)
SP04569	Set Engine RPM	ECM (Engine Control Module)
SP04570	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04571	Injector Codes Read	ECM (Engine Control Module)
SP04572	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP04573	Oil Change	ECM (Engine Control Module)
SP04574	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04575	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04576	EGR Valve Test	ECM (Engine Control Module)
SP04577	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04578	Throttle Valve Test	ECM (Engine Control Module)
SP04579	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04580	Oil Change	ECM (Engine Control Module)
SP04581	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04582	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04583	Injector/S Replacement	ECM (Engine Control Module)
SP04584	Waste Gate Valve Command	ECM (Engine Control Module)
SP04585	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04586	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP04587	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04588	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04589	Oil Change	ECM (Engine Control Module)
SP04590	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04591	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04592	Injector/S Replacement	ECM (Engine Control Module)
SP04593	Waste Gate Valve Command	ECM (Engine Control Module)
SP04594	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04595	Oil Change	ECM (Engine Control Module)
SP04596	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04597	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04598	Injector/S Replacement	ECM (Engine Control Module)
SP04599	Waste Gate Valve Command	ECM (Engine Control Module)
SP04600	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04601	Injector Codes Read	ECM (Engine Control Module)
SP04602	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04603	Oil Change	ECM (Engine Control Module)
SP04604	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04605	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04606	EGR Valve Test	ECM (Engine Control Module)
SP04607	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04608	Throttle Valve Test	ECM (Engine Control Module)
SP04609	Motorized Throttle Learning	ECM (Engine Control Module)
SP04610	Reset Mixture Adaptation Values	ECM (Engine Control Module)
SP04611	Motorized Throttle Replacement	ECM (Engine Control Module)

SP04612	Oil Change	ECM (Engine Control Module)
SP04613	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04614	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04615	Injector/S Replacement	ECM (Engine Control Module)
SP04616	Waste Gate Valve Command	ECM (Engine Control Module)
SP04617	Clutch Pedal Learning	ECM (Engine Control Module)
SP04618	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04619	Oil Change	ECM (Engine Control Module)
SP04620	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04621	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04622	Injector/S Replacement	ECM (Engine Control Module)
SP04623	Waste Gate Valve Command	ECM (Engine Control Module)
SP04624	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04625	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP04626	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04627	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04628	Injector Codes Read	ECM (Engine Control Module)
SP04629	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04630	Oil Change	ECM (Engine Control Module)
SP04631	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04632	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04633	EGR Valve Test	ECM (Engine Control Module)
SP04634	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04635	Throttle Valve Test	ECM (Engine Control Module)
SP04636	Clutch Pedal Learning	ECM (Engine Control Module)
SP04637	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04638	Oil Change	ECM (Engine Control Module)
SP04639	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04640	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04641	Injector/S Replacement	ECM (Engine Control Module)
SP04642	Waste Gate Valve Command	ECM (Engine Control Module)
SP04643	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04644	Injector Codes Read	ECM (Engine Control Module)
SP04645	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04646	Oil Change	ECM (Engine Control Module)
SP04647	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04648	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04649	EGR Valve Test	ECM (Engine Control Module)
SP04650	EGR Low Pressure Valve Test	ECM (Engine Control Module)

SP04651	Throttle Valve Test	ECM (Engine Control Module)
SP04652	ECU Substitution	ABS (Anti Lock Brakes)
SP04653	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP04654	Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP04655	ECU Substitution	ABS (Anti Lock Brakes)
SP04656	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP04657	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP04658	Steering Angle Sensor	EPS (Electric Power Steering)
SP04659	Reset Service Information	IPC (Instrument Panel Cluster)
SP04660	Reset Odometer	IPC (Instrument Panel Cluster)
SP04661	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04662	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04663	Reset Service Information	IPC (Instrument Panel Cluster)
SP04664	Reset Odometer	IPC (Instrument Panel Cluster)
SP04665	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04666	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04667	Reset Odometer	IPC (Instrument Panel Cluster)
SP04668	Reset Service Information	IPC (Instrument Panel Cluster)
SP04669	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04670	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04671	Reset Odometer	IPC (Instrument Panel Cluster)
SP04672	Reset Service Information	IPC (Instrument Panel Cluster)
SP04673	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04674	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04675	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP04676	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP04677	Check PCM Odometer	PCM (Powertrain Control Module)
SP04678	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04679	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04680	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04681	EGR System Test	PCM (Powertrain Control Module)
SP04682	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04683	Set Engine RPM	PCM (Powertrain Control Module)
SP04684	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP04685	Brake Switch Learn	PCM (Powertrain Control Module)
SP04686	Check PCM Odometer	PCM (Powertrain Control Module)
SP04687	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP04688	Reset Memory	PCM (Powertrain Control Module)
SP04689	Throttle Body Self-Learning	PCM (Powertrain Control Module)

SP04690	Check PCM Odometer	PCM (Powertrain Control Module)
SP04691	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04692	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04693	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04694	EGR System Test	PCM (Powertrain Control Module)
SP04695	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04696	Set Engine RPM	PCM (Powertrain Control Module)
SP04697	Check PCM Odometer	PCM (Powertrain Control Module)
SP04698	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04699	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04700	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04701	EGR System Test	PCM (Powertrain Control Module)
SP04702	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04703	Set Engine RPM	PCM (Powertrain Control Module)
SP04704	Check PCM Odometer	PCM (Powertrain Control Module)
SP04705	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04706	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04707	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04708	EGR System Test	PCM (Powertrain Control Module)
SP04709	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04710	Set Engine RPM	PCM (Powertrain Control Module)
SP04711	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04712	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04713	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04714	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04715	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04716	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04717	Injector/S Replacement	ECM (Engine Control Module)
SP04718	Oil Change	ECM (Engine Control Module)
SP04719	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04720	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04721	Oil Change	ECM (Engine Control Module)
SP04722	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04723	Injector Codes Read	ECM (Engine Control Module)
SP04724	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04725	EGR Valve Test	ECM (Engine Control Module)
SP04726	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04727	Throttle Valve Test	ECM (Engine Control Module)
SP04728	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP04729	Phonic Wheel Reset	ECM (Engine Control Module)
SP04730	Reset Phases Front	ECM (Engine Control Module)
SP04731	Motorized Throttle Learning	ECM (Engine Control Module)
SP04732	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04733	Clutch Pedal Learning	ECM (Engine Control Module)
SP04734	Motorized Throttle Learning	ECM (Engine Control Module)
SP04735	Phonic Wheel Reset	ECM (Engine Control Module)
SP04736	Reset Phases Front	ECM (Engine Control Module)
SP04737	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04738	Motorized Throttle Learning	ECM (Engine Control Module)
SP04739	Phonic Wheel Reset	ECM (Engine Control Module)
SP04740	Reset Phases Front	ECM (Engine Control Module)
SP04741	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04742	Oil Change	ECM (Engine Control Module)
SP04743	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04744	Injector Codes Read	ECM (Engine Control Module)
SP04745	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04746	EGR Valve Test	ECM (Engine Control Module)
SP04747	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04748	Throttle Valve Test	ECM (Engine Control Module)
SP04749	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04750	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04751	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04752	Oil Change	ECM (Engine Control Module)
SP04753	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04754	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04755	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04756	Motorized Throttle Learning	ECM (Engine Control Module)
SP04757	Reset Phases Front	ECM (Engine Control Module)
SP04758	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04759	Motorized Throttle Learning	ECM (Engine Control Module)
SP04760	Phonic Wheel Reset	ECM (Engine Control Module)
SP04761	Reset Phases Front	ECM (Engine Control Module)
SP04762	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04763	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04764	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04765	Oil Change	ECM (Engine Control Module)
SP04766	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04767	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP04768	Oil Change	ECM (Engine Control Module)
SP04769	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04770	Injector Codes Read	ECM (Engine Control Module)
SP04771	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04772	EGR Valve Test	ECM (Engine Control Module)
SP04773	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04774	Throttle Valve Test	ECM (Engine Control Module)
SP04775	Speed Limit Setting	ECM (Engine Control Module)
SP04776	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04777	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04778	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04779	Oil Change	ECM (Engine Control Module)
SP04780	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04781	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04782	Motorized Throttle Learning	ECM (Engine Control Module)
SP04783	Phonic Wheel Reset	ECM (Engine Control Module)
SP04784	Reset Phases Front	ECM (Engine Control Module)
SP04785	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04786	Injector Codes Read	ECM (Engine Control Module)
SP04787	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04788	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04789	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04790	Clutch Pedal Learning	ECM (Engine Control Module)
SP04791	Motorized Throttle Learning	ECM (Engine Control Module)
SP04792	Phonic Wheel Reset	ECM (Engine Control Module)
SP04793	Reset Phases Front	ECM (Engine Control Module)
SP04794	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04795	Clutch Pedal Learning	ECM (Engine Control Module)
SP04796	Motorized Throttle Learning	ECM (Engine Control Module)
SP04797	Phonic Wheel Reset	ECM (Engine Control Module)
SP04798	Reset Phases Front	ECM (Engine Control Module)
SP04799	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04800	Overboost Counter Reset	ECM (Engine Control Module)
SP04801	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04802	Oil Change	ECM (Engine Control Module)
SP04803	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04804	Injector Codes Read	ECM (Engine Control Module)
SP04805	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04806	EGR Valve Test	ECM (Engine Control Module)

SP04807	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04808	Throttle Valve Test	ECM (Engine Control Module)
SP04809	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04810	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04811	Overboost Counter Reset	ECM (Engine Control Module)
SP04812	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04813	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04814	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04815	Oil Change	ECM (Engine Control Module)
SP04816	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04817	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04818	Oil Change	ECM (Engine Control Module)
SP04819	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04820	Injector Codes Read	ECM (Engine Control Module)
SP04821	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04822	EGR Valve Test	ECM (Engine Control Module)
SP04823	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04824	Throttle Valve Test	ECM (Engine Control Module)
SP04825	Speed Limit Setting	ECM (Engine Control Module)
SP04826	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04827	Oil Change	ECM (Engine Control Module)
SP04828	Injector Codes Read	ECM (Engine Control Module)
SP04829	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04830	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04831	Speed Limit Setting	ECM (Engine Control Module)
SP04832	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04833	Injector Codes Read	ECM (Engine Control Module)
SP04834	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04835	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04836	Speed Limit Setting	ECM (Engine Control Module)
SP04837	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04838	Motorized Throttle Learning	ECM (Engine Control Module)
SP04839	Phonic Wheel Reset	ECM (Engine Control Module)
SP04840	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04841	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04842	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP04843	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04844	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04845	Phonic Wheel Reset	ECM (Engine Control Module)

SP04846	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04847	Clutch Pedal Learning	ECM (Engine Control Module)
SP04848	Motorized Throttle Learning	ECM (Engine Control Module)
SP04849	Phonic Wheel Reset	ECM (Engine Control Module)
SP04850	Reset Phases Front	ECM (Engine Control Module)
SP04851	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04852	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04853	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04854	Oil Change	ECM (Engine Control Module)
SP04855	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04856	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04857	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04858	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04859	Injector Codes Read	ECM (Engine Control Module)
SP04860	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04861	Oil Change	ECM (Engine Control Module)
SP04862	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04863	EGR Valve Test	ECM (Engine Control Module)
SP04864	Throttle Valve Test	ECM (Engine Control Module)
SP04865	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04866	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04867	Injector/S Replacement	ECM (Engine Control Module)
SP04868	Oil Change	ECM (Engine Control Module)
SP04869	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04870	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04871	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04872	Injector Codes Read	ECM (Engine Control Module)
SP04873	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04874	Oil Change	ECM (Engine Control Module)
SP04875	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04876	EGR Valve Test	ECM (Engine Control Module)
SP04877	Throttle Valve Test	ECM (Engine Control Module)
SP04878	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04879	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04880	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04881	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04882	Clutch Pedal Learning	ECM (Engine Control Module)
SP04883	Motorized Throttle Learning	ECM (Engine Control Module)
SP04884	Phonic Wheel Reset	ECM (Engine Control Module)

SP04885	Reset Phases Front	ECM (Engine Control Module)
SP04886	Phonic Wheel Reset	ECM (Engine Control Module)
SP04887	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04888	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04889	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04890	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04891	Injector Codes Read	ECM (Engine Control Module)
SP04892	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04893	Oil Change	ECM (Engine Control Module)
SP04894	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04895	EGR Valve Test	ECM (Engine Control Module)
SP04896	Throttle Valve Test	ECM (Engine Control Module)
SP04897	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04898	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04899	Injector Codes Read	ECM (Engine Control Module)
SP04900	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04901	Oil Change	ECM (Engine Control Module)
SP04902	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04903	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04904	Speed Limit Setting	ECM (Engine Control Module)
SP04905	EGR Valve Test	ECM (Engine Control Module)
SP04906	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04907	Throttle Valve Test	ECM (Engine Control Module)
SP04908	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04909	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04910	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04911	Clutch Pedal Learning	ECM (Engine Control Module)
SP04912	Motorized Throttle Learning	ECM (Engine Control Module)
SP04913	Phonic Wheel Reset	ECM (Engine Control Module)
SP04914	Reset Phases Front	ECM (Engine Control Module)
SP04915	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04916	Clutch Pedal Learning	ECM (Engine Control Module)
SP04917	Motorized Throttle Learning	ECM (Engine Control Module)
SP04918	Phonic Wheel Reset	ECM (Engine Control Module)
SP04919	Reset Phases Front	ECM (Engine Control Module)
SP04920	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04921	Injector Codes Read	ECM (Engine Control Module)
SP04922	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04923	Oil Change	ECM (Engine Control Module)

SP04924	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04925	EGR Valve Test	ECM (Engine Control Module)
SP04926	Throttle Valve Test	ECM (Engine Control Module)
SP04927	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04928	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04929	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04930	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04931	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04932	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04933	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04934	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04935	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04936	Static Test	ABS (Anti-Lock Braking System)
SP04937	Static Test	ABS (Anti-Lock Braking System)
SP04938	Longitudinal/Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP04939	Static Test	ABS (Anti-Lock Braking System)
SP04940	TPMS Calibration	ABS (Anti-Lock Braking System)
SP04941	Static Test	ABS (Anti-Lock Braking System)
SP04942	Static Test	ABS (Anti-Lock Braking System)
SP04943	Ecu Replacement	ABS (Anti-Lock Braking System)
SP04944	Electric Park Brake Management	ABS (Anti-Lock Braking System)
SP04945	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP04946	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP04947	Longitudinal/Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP04948	Static Test	ABS (Anti-Lock Braking System)
SP04949	TPMS Calibration	ABS (Anti-Lock Braking System)
SP04950	Steering Angle Calibration	EPS (Electric Power Steering)
SP04951	Steering Angle Calibration	EPS (Electric Power Steering)
SP04952	Steering Angle Calibration	EPS (Electric Power Steering)
SP04953	Steering Angle Calibration	EPS (Electric Power Steering)
SP04954	Steering Angle Calibration	EPS (Electric Power Steering)
SP04955	Reset Odometer	IC (Instrument Cluster)
SP04956	Reset Service Information	IC (Instrument Cluster)
SP04957	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04958	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04959	Reset Odometer	IC (Instrument Cluster)
SP04960	Reset Service Information	IC (Instrument Cluster)
SP04961	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04962	Enable Seat Belts Reminder	IC (Instrument Cluster)

SP04963	Reset Odometer	IC (Instrument Cluster)
SP04964	Reset Service Information	IC (Instrument Cluster)
SP04965	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04966	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04967	Reset Odometer	IC (Instrument Cluster)
SP04968	Reset Service Information	IC (Instrument Cluster)
SP04969	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04970	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04971	Reset Odometer	IC (Instrument Cluster)
SP04972	Reset Service Information	IC (Instrument Cluster)
SP04973	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04974	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04975	Reset Odometer	IC (Instrument Cluster)
SP04976	Reset Service Information	IC (Instrument Cluster)
SP04977	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04978	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04979	Reset Odometer	IC (Instrument Cluster)
SP04980	Reset Service Information	IC (Instrument Cluster)
SP04981	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04982	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04983	Reset Odometer	IC (Instrument Cluster)
SP04984	Reset Service Information	IC (Instrument Cluster)
SP04985	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04986	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04987	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04988	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04989	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04990	Oil Change	ECM (Engine Control Module)
SP04991	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04992	Injector Codes Read	ECM (Engine Control Module)
SP04993	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04994	EGR Valve Test	ECM (Engine Control Module)
SP04995	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04996	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04997	Oil Change	ECM (Engine Control Module)
SP04998	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04999	Injector Codes Read	ECM (Engine Control Module)
SP05000	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05001	EGR Valve Test	ECM (Engine Control Module)

SP05002	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05003	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05004	Oil Change	ECM (Engine Control Module)
SP05005	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05006	Injector Codes Read	ECM (Engine Control Module)
SP05007	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05008	EGR Valve Test	ECM (Engine Control Module)
SP05009	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05010	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05011	Oil Change	ECM (Engine Control Module)
SP05012	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05013	Injector Codes Read	ECM (Engine Control Module)
SP05014	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05015	EGR Valve Test	ECM (Engine Control Module)
SP05016	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05017	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05018	Oil Change	ECM (Engine Control Module)
SP05019	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05020	Injector Codes Read	ECM (Engine Control Module)
SP05021	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05022	EGR Valve Test	ECM (Engine Control Module)
SP05023	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05024	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05025	Oil Change	ECM (Engine Control Module)
SP05026	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05027	Injector Codes Read	ECM (Engine Control Module)
SP05028	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05029	EGR Valve Test	ECM (Engine Control Module)
SP05030	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05031	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05032	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP05033	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05034	Oil Change	ECM (Engine Control Module)
SP05035	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05036	Injector Codes Read	ECM (Engine Control Module)
SP05037	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05038	EGR Valve Test	ECM (Engine Control Module)
SP05039	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05040	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP05041	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05042	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05043	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05044	Oil Change	ECM (Engine Control Module)
SP05045	Overboost Counter Reset	ECM (Engine Control Module)
SP05046	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05047	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05048	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05049	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05050	Oil Change	ECM (Engine Control Module)
SP05051	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05052	Injector Codes Read	ECM (Engine Control Module)
SP05053	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05054	EGR Valve Test	ECM (Engine Control Module)
SP05055	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05056	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05057	Oil Change	ECM (Engine Control Module)
SP05058	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05059	Injector Codes Read	ECM (Engine Control Module)
SP05060	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05061	EGR Valve Test	ECM (Engine Control Module)
SP05062	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05063	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05064	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05065	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05066	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05067	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05068	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05069	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05070	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05071	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05072	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05073	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05074	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05075	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05076	Oil Change	ECM (Engine Control Module)
SP05077	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05078	Injector Codes Read	ECM (Engine Control Module)
SP05079	Replacement Of EGR Valve	ECM (Engine Control Module)

SP05080	EGR Valve Test	ECM (Engine Control Module)
SP05081	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05082	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05083	Oil Change	ECM (Engine Control Module)
SP05084	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05085	Injector Codes Read	ECM (Engine Control Module)
SP05086	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05087	EGR Valve Test	ECM (Engine Control Module)
SP05088	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05089	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05090	Overboost Counter Reset	ECM (Engine Control Module)
SP05091	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05092	Oil Change	ECM (Engine Control Module)
SP05093	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05094	Injector Codes Read	ECM (Engine Control Module)
SP05095	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05096	EGR Valve Test	ECM (Engine Control Module)
SP05097	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05098	Throttle Valve Test	ECM (Engine Control Module)
SP05099	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05100	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05101	Oil Change	ECM (Engine Control Module)
SP05102	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05103	Injector Codes Read	ECM (Engine Control Module)
SP05104	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05105	EGR Valve Test	ECM (Engine Control Module)
SP05106	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05107	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05108	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05109	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05110	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05111	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05112	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05113	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05114	Overboost Counter Reset	ECM (Engine Control Module)
SP05115	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05116	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05117	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05118	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP05119	Oil Change	ECM (Engine Control Module)
SP05120	Overboost Counter Reset	ECM (Engine Control Module)
SP05121	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05122	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05123	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05124	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05125	Oil Change	ECM (Engine Control Module)
SP05126	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05127	Injector Codes Read	ECM (Engine Control Module)
SP05128	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05129	EGR Valve Test	ECM (Engine Control Module)
SP05130	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05131	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05132	Oil Change	ECM (Engine Control Module)
SP05133	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05134	Injector Codes Read	ECM (Engine Control Module)
SP05135	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05136	EGR Valve Test	ECM (Engine Control Module)
SP05137	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05138	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05139	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05140	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05141	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05142	Oil Change	ECM (Engine Control Module)
SP05143	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05144	Injector Codes Read	ECM (Engine Control Module)
SP05145	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05146	EGR Valve Test	ECM (Engine Control Module)
SP05147	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05148	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05149	Oil Change	ECM (Engine Control Module)
SP05150	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05151	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05152	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05153	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05154	Oil Change	ECM (Engine Control Module)
SP05155	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05156	Injector Codes Read	ECM (Engine Control Module)
SP05157	Replacement Of EGR Valve	ECM (Engine Control Module)

SP05158	EGR Valve Test	ECM (Engine Control Module)
SP05159	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05160	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05161	Oil Change	ECM (Engine Control Module)
SP05162	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05163	Injector Codes Read	ECM (Engine Control Module)
SP05164	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05165	EGR Valve Test	ECM (Engine Control Module)
SP05166	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05167	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05168	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05169	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05170	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05171	Oil Change	ECM (Engine Control Module)
SP05172	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05173	Injector Codes Read	ECM (Engine Control Module)
SP05174	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05175	EGR Valve Test	ECM (Engine Control Module)
SP05176	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05177	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05178	Motorized Throttle Learning	ECM (Engine Control Module)
SP05179	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05180	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP05181	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05182	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05183	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05184	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05185	Oil Change	ECM (Engine Control Module)
SP05186	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05187	Injector Codes Read	ECM (Engine Control Module)
SP05188	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05189	EGR Valve Test	ECM (Engine Control Module)
SP05190	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05191	Throttle Valve Test	ECM (Engine Control Module)
SP05192	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05193	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05194	Oil Change	ECM (Engine Control Module)
SP05195	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05196	Injector Codes Read	ECM (Engine Control Module)

SP05197	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05198	EGR Valve Test	ECM (Engine Control Module)
SP05199	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05200	Throttle Valve Test	ECM (Engine Control Module)
SP05201	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05202	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05203	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05204	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05205	Oil Change	ECM (Engine Control Module)
SP05206	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05207	Injector Codes Read	ECM (Engine Control Module)
SP05208	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05209	EGR Valve Test	ECM (Engine Control Module)
SP05210	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05211	Throttle Valve Test	ECM (Engine Control Module)
SP05212	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05213	Inlet Valve Calibration	ABS (Anti Lock Brakes)
SP05214	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP05215	Pilot Valve Calibration	ABS (Anti Lock Brakes)
SP05216	Brake Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP05217	Steering Wheel Angle Sensor Offset Calibration	ABS (Anti Lock Brakes)
SP05218	Inlet Valve Calibration	ABS (Anti Lock Brakes)
SP05219	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP05220	Pilot Valve Calibration	ABS (Anti Lock Brakes)
SP05221	Brake Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP05222	Steering Wheel Angle Sensor Offset Calibration	ABS (Anti Lock Brakes)
SP05223	TPMS Calibration	ABS (Anti Lock Brakes)
SP05224	Inlet Valve Calibration	ABS (Anti Lock Brakes)
SP05225	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP05226	Pilot Valve Calibration	ABS (Anti Lock Brakes)
SP05227	Brake Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP05228	Steering Wheel Angle Sensor Offset Calibration	ABS (Anti Lock Brakes)
SP05229	Self Learning Motor Test	HVAC (Heat, Ventilation And A/C)
SP05230	Self Learning Motor Test	HVAC (Heat, Ventilation And A/C)
SP05231	Steering Angle Calibration	EPS (Electric Power Steering)
SP05232	Steering Angle Calibration	EPS (Electric Power Steering)
SP05233	Reset Odometer	IPC (Instrument Panel)
SP05234	Reset Service Information	IPC (Instrument Panel)
SP05235	Disable Seat Belts Reminder	IPC (Instrument Panel)

SP05236	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05237	Reset Odometer	IPC (Instrument Panel)
SP05238	Reset Service Information	IPC (Instrument Panel)
SP05239	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05240	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05241	Reset Odometer	IPC (Instrument Panel)
SP05242	Reset Service Information	IPC (Instrument Panel)
SP05243	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05244	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05245	Reset Odometer	IPC (Instrument Panel)
SP05246	Reset Service Information	IPC (Instrument Panel)
SP05247	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05248	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05249	Reset Odometer	IPC (Instrument Panel)
SP05250	Reset Service Information	IPC (Instrument Panel)
SP05251	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05252	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05253	Reset Odometer	IPC (Instrument Panel)
SP05254	Reset Service Information	IPC (Instrument Panel)
SP05255	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05256	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05257	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05258	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05259	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05260	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05261	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05262	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05263	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05264	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05265	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05266	Oil Change	ECM (Engine Control Module)
SP05267	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05268	Injector Codes Read	ECM (Engine Control Module)
SP05269	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05270	EGR Valve Test	ECM (Engine Control Module)
SP05271	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05272	Throttle Valve Test	ECM (Engine Control Module)
SP05273	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05274	Motorised Throttle Replacement	ECM (Engine Control Module)

SP05275	Neutral Signal Learning With Engine Off	ECM (Engine Control Module)
SP05276	Phonic Wheel Reset	ECM (Engine Control Module)
SP05277	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05278	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05279	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05280	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05281	Oil Change	ECM (Engine Control Module)
SP05282	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05283	Injector Codes Read	ECM (Engine Control Module)
SP05284	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05285	EGR Valve Test	ECM (Engine Control Module)
SP05286	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05287	Throttle Valve Test	ECM (Engine Control Module)
SP05288	Speed Limit Setting	ECM (Engine Control Module)
SP05289	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05290	Oil Change	ECM (Engine Control Module)
SP05291	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05292	Injector Codes Read	ECM (Engine Control Module)
SP05293	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05294	EGR Valve Test	ECM (Engine Control Module)
SP05295	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05296	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05297	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05298	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05299	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05300	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05301	Phonic Wheel Reset	ECM (Engine Control Module)
SP05302	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05303	Motorized Throttle Learning	ECM (Engine Control Module)
SP05304	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05305	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05306	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05307	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05308	Oil Change	ECM (Engine Control Module)
SP05309	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05310	Injector Codes Read	ECM (Engine Control Module)
SP05311	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05312	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05313	EGR Valve Test	ECM (Engine Control Module)

SP05314	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05315	Throttle Valve Test	ECM (Engine Control Module)
SP05316	Speed Limit Setting	ECM (Engine Control Module)
SP05317	Overboost Counter Reset	ECM (Engine Control Module)
SP05318	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05319	Overboost Counter Reset	ECM (Engine Control Module)
SP05320	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05321	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05322	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05323	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05324	Oil Change	ECM (Engine Control Module)
SP05325	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05326	Injector Codes Read	ECM (Engine Control Module)
SP05327	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05328	EGR Valve Test	ECM (Engine Control Module)
SP05329	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05330	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05331	Oil Change	ECM (Engine Control Module)
SP05332	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05333	Injector Codes Read	ECM (Engine Control Module)
SP05334	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05335	EGR Valve Test	ECM (Engine Control Module)
SP05336	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05337	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05338	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05339	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05340	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05341	Oil Change	ECM (Engine Control Module)
SP05342	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05343	Injector Codes Read	ECM (Engine Control Module)
SP05344	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05345	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05346	EGR Valve Test	ECM (Engine Control Module)
SP05347	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05348	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05349	Throttle Valve Test	ECM (Engine Control Module)
SP05350	Speed Limit Setting	ECM (Engine Control Module)
SP05351	Oil Change	ECM (Engine Control Module)
SP05352	Injector Codes Read	ECM (Engine Control Module)

SP05353	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05354	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05355	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05356	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05357	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05358	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05359	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP05360	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05361	Overboost Counter Reset	ECM (Engine Control Module)
SP05362	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05363	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05364	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05365	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05366	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05367	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05368	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05369	Overboost Counter Reset	ECM (Engine Control Module)
SP05370	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05371	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05372	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05373	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05374	Oil Change	ECM (Engine Control Module)
SP05375	Injector Codes Read	ECM (Engine Control Module)
SP05376	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05377	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05378	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05379	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05380	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05381	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05382	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05383	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05384	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05385	Oil Change	ECM (Engine Control Module)
SP05386	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05387	Injector Codes Read	ECM (Engine Control Module)
SP05388	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05389	EGR Valve Test	ECM (Engine Control Module)
SP05390	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05391	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP05392	Oil Change	ECM (Engine Control Module)
SP05393	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05394	Injector Codes Read	ECM (Engine Control Module)
SP05395	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05396	EGR Valve Test	ECM (Engine Control Module)
SP05397	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05398	Throttle Valve Test	ECM (Engine Control Module)
SP05399	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05400	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05401	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05402	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05403	Clutch Pedal Learning	ECM (Engine Control Module)
SP05404	Motorized Throttle Learning	ECM (Engine Control Module)
SP05405	Phonic Wheel Reset	ECM (Engine Control Module)
SP05406	Reset Phases Front	ECM (Engine Control Module)
SP05407	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05408	Clutch Pedal Learning	ECM (Engine Control Module)
SP05409	Motorized Throttle Learning	ECM (Engine Control Module)
SP05410	Reset Phases Front	ECM (Engine Control Module)
SP05411	Phonic Wheel Reset	ECM (Engine Control Module)
SP05412	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05413	Static Test	ABS (Anti Lock Brakes)
SP05414	Longitudinal G-Sensor Calibration Test	ABS (Anti Lock Brakes)
SP05415	Static Test	ABS (Anti Lock Brakes)
SP05416	Static Test	ABS (Anti Lock Brakes)
SP05417	Longitudinal G-Sensor Calibration Test	ABS (Anti Lock Brakes)
SP05418	Steering Angle Calibration	EPS (Electric Power Steering)
SP05419	Steering Angle Calibration	EPS (Electric Power Steering)
SP05420	Steering Angle Calibration	EPS (Electric Power Steering)
SP05421	Clear TPM Warnings	TPM (Tire Pressure Monitor)
SP05422	Clear TPM Sensor Rolls Test Results	TPM (Tire Pressure Monitor)
SP05423	Update Front And Rear Axle Nominal Tire Pressure Values	TPM (Tire Pressure Monitor)
SP05424	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05425	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05426	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05427	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05428	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP05429	Alarms Deletion	TPM (Tire Pressure Monitor)
SP05430	Antenna Replacement	TPM (Tire Pressure Monitor)

SP05431	Control Unit Activation	TPM (Tire Pressure Monitor)
SP05432	Control Unit Deactivation	TPM (Tire Pressure Monitor)
SP05433	Manual System Configuration	TPM (Tire Pressure Monitor)
SP05434	Automatic Configuration Read	TPM (Tire Pressure Monitor)
SP05435	Wheel Transmitters Learning	TPM (Tire Pressure Monitor)
SP05436	Automatic Configuration Write	TPM (Tire Pressure Monitor)
SP05437	Reset Odometer	IPC (Instrument Panel)
SP05438	Reset Service Information	IPC (Instrument Panel)
SP05439	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05440	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05441	Reset Odometer	IPC (Instrument Panel)
SP05442	Reset Service Information	IPC (Instrument Panel)
SP05443	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05444	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05445	Reset Odometer	IPC (Instrument Panel)
SP05446	Reset Service Information	IPC (Instrument Panel)
SP05447	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05448	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05449	Reset Odometer	IPC (Instrument Panel)
SP05450	Reset Service Information	IPC (Instrument Panel)
SP05451	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05452	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05453	Reset Odometer	IPC (Instrument Panel)
SP05454	Reset Service Information	IPC (Instrument Panel)
SP05455	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05456	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05457	Reset Odometer	IPC (Instrument Panel)
SP05458	Reset Service Information	IPC (Instrument Panel)
SP05459	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05460	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05461	Oil Change	ECM (Engine Control Module)
SP05462	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05463	Oil Change	ECM (Engine Control Module)
SP05464	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05465	Oil Change	ECM (Engine Control Module)
SP05466	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05467	Oil Change	ECM (Engine Control Module)
SP05468	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05469	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)

SP05470	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP05471	Static Test	ABS (Anti Lock Brakes)
SP05472	Steering Angle Sensor Calibration	ABS (Anti Lock Brakes)
SP05473	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)
SP05474	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP05475	Static Test	ABS (Anti Lock Brakes)
SP05476	Steering Angle Sensor Calibration	ABS (Anti Lock Brakes)
SP05477	Write Front And Rear Nominal Tire Pressure Values	TPM (Tire Pressure Monitor)
SP05478	Clear TPM Warnings	TPM (Tire Pressure Monitor)
SP05479	Clear TPM Sensor Rolls Test Results	TPM (Tire Pressure Monitor)
SP05480	ECU SERIAL NUMBER Management	TPM (Tire Pressure Monitor)
SP05481	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP05482	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05483	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05484	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05485	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05486	Reset Odometer	IPC (Instrument Panel)
SP05487	Reset Service Information	IPC (Instrument Panel)
SP05488	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05489	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05490	Electronic Throttle Replacement	ECM (Engine Control Module)
SP05491	Oil Change	ECM (Engine Control Module)
SP05492	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP05493	Phonic Wheel Reset	ECM (Engine Control Module)
SP05494	Motorized Throttle Replacement	ECM (Engine Control Module)
SP05495	Oil Change	ECM (Engine Control Module)
SP05496	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05497	Injector Codes Read	ECM (Engine Control Module)
SP05498	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05499	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05500	EGR Valve Test	ECM (Engine Control Module)
SP05501	Throttle Valve Test	ECM (Engine Control Module)
SP05502	Oil Change	ECM (Engine Control Module)
SP05503	Electronic Throttle Replacement	ECM (Engine Control Module)
SP05504	Oil Change	ECM (Engine Control Module)
SP05505	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP05506	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05507	Injector Codes Read	ECM (Engine Control Module)
SP05508	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP05509	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05510	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP05511	EGR Valve Test	ECM (Engine Control Module)
SP05512	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP05513	Throttle Valve Test	ECM (Engine Control Module)
SP05514	Oil Change	ECM (Engine Control Module)
SP05515	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05516	Injector Codes Read	ECM (Engine Control Module)
SP05517	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05518	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05519	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP05520	EGR Valve Test	ECM (Engine Control Module)
SP05521	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP05522	Throttle Valve Test	ECM (Engine Control Module)
SP05523	Oil Change	ECM (Engine Control Module)
SP05524	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05525	Injector Codes Read	ECM (Engine Control Module)
SP05526	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05527	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05528	EGR Valve Test	ECM (Engine Control Module)
SP05529	Throttle Valve Test	ECM (Engine Control Module)
SP05530	Oil Change	ECM (Engine Control Module)
SP05531	Electronic Throttle Replacement	ECM (Engine Control Module)
SP05532	Oil Change	ECM (Engine Control Module)
SP05533	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP05534	Phonic Wheel Reset	ECM (Engine Control Module)
SP05535	Motorized Throttle Replacement	ECM (Engine Control Module)
SP05536	Oil Change	ECM (Engine Control Module)
SP05537	Phonic Wheel Reset	ECM (Engine Control Module)
SP05538	Motorized Throttle Replacement	ECM (Engine Control Module)
SP05539	Oil Change	ECM (Engine Control Module)
SP05540	Phonic Wheel Reset	ECM (Engine Control Module)
SP05541	Motorized Throttle Replacement	ECM (Engine Control Module)
SP05542	Oil Change	ECM (Engine Control Module)
SP05543	Phonic Wheel Reset	ECM (Engine Control Module)
SP05544	Motorized Throttle Replacement	ECM (Engine Control Module)
SP05545	Oil Change	ECM (Engine Control Module)
SP05546	Check Air Presence In ABS Unit	ABS (Anti-Lock Braking System)
SP05547	Brake Pads Substitution (Brembo)	ABS (Anti-Lock Braking System)

SP05548	Brake Pads Substitution EPB (Brembo)	ABS (Anti-Lock Braking System)
SP05549	Brake Pads Substitution (Continental)	ABS (Anti-Lock Braking System)
SP05550	Disks Management Brembo	ABS (Anti-Lock Braking System)
SP05551	Replacement Brake Discs	ABS (Anti-Lock Braking System)
SP05552	Control Unit Reprogramming	ABS (Anti-Lock Braking System)
SP05553	Electric Park Brake Management	ABS (Anti-Lock Braking System)
SP05554	Electric Park Brake Motors Substitution	ABS (Anti-Lock Braking System)
SP05555	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP05556	Calibration Of The Brake Pressure Sensor	ABS (Anti-Lock Braking System)
SP05557	Settling Group Caliper And Brake Pads	ABS (Anti-Lock Braking System)
SP05558	Production State	ABS (Anti-Lock Braking System)
SP05559	Reset Angle Offset	ABS (Anti-Lock Braking System)
SP05560	Bleeding Brake System	ABS (Anti-Lock Braking System)
SP05561	Enable/Disable The Roll Bench Mode	ABS (Anti-Lock Braking System)
SP05562	ABS Unit Bleed	ABS (Anti-Lock Braking System)
SP05563	Calibrate Tandem Master Cylinder Sensor	ABS (Anti-Lock Braking System)
SP05564	Checking Air In The Hydraulic Circuit Between The Control Unit And B	ABS (Anti-Lock Braking System)
SP05565	Enabling Brake Pedal	ABS (Anti-Lock Braking System)
SP05566	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP05567	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP05568	Transfer Case Reset	DTCM (Drive Train Control Module)
SP05569	Calibration Reset	DTCM (Drive Train Control Module)
SP05570	Upload Configuration	EMCM (Entertainment Multimedia Control Module)
SP05571	Restore Default Configuration	EMCM (Entertainment Multimedia Control Module)
SP05572	Reset Service Information	IC (Instrument Cluster)
SP05573	Reset Service Information	IC (Instrument Cluster)
SP05574	Steering Angle Calibration	EPS (Electric Power Steering)
SP05575	Self Learning - Sensors Calibration	AAMR (Active Aerodynamic Module Right)
SP05576	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP05577	Self Test	TBM (Telematic Box Module)
SP05578	Oil Change Reset	TVM (Torque Vectoring Module)
SP05579	E-Motor Replacement	TVM (Torque Vectoring Module)
SP05580	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05581	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05582	Static Test	ABS (Anti-Lock Braking System)
SP05583	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP05584	Static Test	ABS (Anti-Lock Braking System)
SP05585	Reset Odometer	IC (Instrument Cluster)
SP05586	Reset Service Information	IC (Instrument Cluster)

SP05587	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP05588	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP05589	Reset Odometer	IC (Instrument Cluster)
SP05590	Reset Service Information	IC (Instrument Cluster)
SP05591	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP05592	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP05593	Steering Angle Sensor	EPS (Electric Power Steering)
SP05594	Steering Angle Sensor	EPS (Electric Power Steering)
SP05595	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP05596	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05597	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05598	Static Test	ABS (Anti-Lock Braking System)
SP05599	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP05600	Static Test	ABS (Anti-Lock Braking System)
SP05601	Steering Angle Sensor	EPS (Electric Power Steering)
SP05602	Steering Angle Sensor	EPS (Electric Power Steering)
SP05603	Reset Odometer	IC (Instrument Cluster)
SP05604	Reset Service Information	IC (Instrument Cluster)
SP05605	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP05606	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP05607	Reset Odometer	IC (Instrument Cluster)
SP05608	Reset Service Information	IC (Instrument Cluster)
SP05609	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP05610	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP05611	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)

Special Functions List

No.	Functions Name	System Name
SP00001	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00002	Brake Switch Learn	PCM (Powertrain Control Module)
SP00003	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00004	Check PCM Odometer	PCM (Powertrain Control Module)
SP00005	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00006	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00007	Reset ECU	PCM (Powertrain Control Module)
SP00008	Reset Memory	PCM (Powertrain Control Module)
SP00009	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00010	Brake Switch Learn	PCM (Powertrain Control Module)
SP00011	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00012	Check PCM Odometer	PCM (Powertrain Control Module)
SP00013	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00014	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00015	Reset ECU	PCM (Powertrain Control Module)
SP00016	Reset Memory	PCM (Powertrain Control Module)
SP00017	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00018	Brake Switch Learn	PCM (Powertrain Control Module)
SP00019	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00020	Check PCM Odometer	PCM (Powertrain Control Module)
SP00021	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00022	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00023	Reset ECU	PCM (Powertrain Control Module)
SP00024	Reset Memory	PCM (Powertrain Control Module)
SP00025	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00026	Brake Switch Learn	PCM (Powertrain Control Module)
SP00027	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00028	Check PCM Odometer	PCM (Powertrain Control Module)
SP00029	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00030	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00031	Reset ECU	PCM (Powertrain Control Module)
SP00032	Reset Memory	PCM (Powertrain Control Module)

SP00033	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00034	Brake Switch Learn	PCM (Powertrain Control Module)
SP00035	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00036	Check PCM Odometer	PCM (Powertrain Control Module)
SP00037	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00038	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00039	Reset ECU	PCM (Powertrain Control Module)
SP00040	Reset Memory	PCM (Powertrain Control Module)
SP00041	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00042	Brake Switch Learn	PCM (Powertrain Control Module)
SP00043	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00044	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00045	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00046	Reset ECU	PCM (Powertrain Control Module)
SP00047	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00048	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00049	Brake Switch Learn	PCM (Powertrain Control Module)
SP00050	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00051	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00052	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00053	Reset ECU	PCM (Powertrain Control Module)
SP00054	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00055	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00056	Brake Switch Learn	PCM (Powertrain Control Module)
SP00057	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00058	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00059	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00060	Reset ECU	PCM (Powertrain Control Module)
SP00061	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00062	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00063	Brake Switch Learn	PCM (Powertrain Control Module)
SP00064	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00065	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00066	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00067	Reset ECU	PCM (Powertrain Control Module)
SP00068	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00069	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)

SP00070	Brake Switch Learn	PCM (Powertrain Control Module)
SP00071	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00072	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00073	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00074	Reset ECU	PCM (Powertrain Control Module)
SP00075	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00076	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00077	Brake Switch Learn	PCM (Powertrain Control Module)
SP00078	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00079	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00080	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00081	Reset ECU	PCM (Powertrain Control Module)
SP00082	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00083	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00084	Brake Switch Learn	PCM (Powertrain Control Module)
SP00085	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00086	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00087	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00088	Reset ECU	PCM (Powertrain Control Module)
SP00089	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00090	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00091	Brake Switch Learn	PCM (Powertrain Control Module)
SP00092	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00093	Check PCM Odometer	PCM (Powertrain Control Module)
SP00094	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00095	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00096	Reset ECU	PCM (Powertrain Control Module)
SP00097	Reset Memory	PCM (Powertrain Control Module)
SP00098	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00099	Brake Switch Learn	PCM (Powertrain Control Module)
SP00100	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00101	Check PCM Odometer	PCM (Powertrain Control Module)
SP00102	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00103	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00104	Reset ECU	PCM (Powertrain Control Module)
SP00105	Reset Memory	PCM (Powertrain Control Module)
SP00106	ECU Replacement With Value Transfer	TCM (Transmission Control Module)

SP00107	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00108	Quick Learn	TCM (Transmission Control Module)
SP00109	Clear Self Learning Data	TCM (Transmission Control Module)
SP00110	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00111	ABS Static Test	ABS (Anti-Lock Braking System)
SP00112	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP00113	Initialize Power Top	BCM (Body Control Module)
SP00114	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00115	Reset Service Information	IC (Instrument Cluster)
SP00116	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00117	IPC Replacement	IC (Instrument Cluster)
SP00118	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00119	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00120	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00121	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00122	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00123	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00124	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00125	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00126	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00127	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00128	CTM Proxi Configuration	CTM (Convergence Telematic Module)
SP00129	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP00130	Initialize EPS	EPS (Electric Power Steering)
SP00131	RADIO Proxi Configuration	RADIO (RADIO)
SP00132	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00133	Brake Switch Learn	PCM (Powertrain Control Module)
SP00134	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00135	Check PCM Odometer	PCM (Powertrain Control Module)
SP00136	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00137	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00138	Reset ECU	PCM (Powertrain Control Module)
SP00139	Reset Memory	PCM (Powertrain Control Module)
SP00140	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00141	Brake Switch Learn	PCM (Powertrain Control Module)
SP00142	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00143	Check PCM Odometer	PCM (Powertrain Control Module)

SP00144	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00145	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00146	Reset ECU	PCM (Powertrain Control Module)
SP00147	Reset Memory	PCM (Powertrain Control Module)
SP00148	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00149	Brake Switch Learn	PCM (Powertrain Control Module)
SP00150	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00151	Check PCM Odometer	PCM (Powertrain Control Module)
SP00152	Emissions Rolls Test Mode	PCM (Powertrain Control Module)
SP00153	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00154	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00155	Reset ECU	PCM (Powertrain Control Module)
SP00156	Reset Memory	PCM (Powertrain Control Module)
SP00157	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00158	Brake Switch Learn	PCM (Powertrain Control Module)
SP00159	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00160	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00161	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00162	Reset ECU	PCM (Powertrain Control Module)
SP00163	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00164	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00165	Brake Switch Learn	PCM (Powertrain Control Module)
SP00166	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00167	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00168	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00169	Reset ECU	PCM (Powertrain Control Module)
SP00170	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00171	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00172	Brake Switch Learn	PCM (Powertrain Control Module)
SP00173	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00174	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00175	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00176	Reset ECU	PCM (Powertrain Control Module)
SP00177	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00178	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00179	Brake Switch Learn	PCM (Powertrain Control Module)
SP00180	Clutch Pedal Learn	PCM (Powertrain Control Module)

SP00181	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00182	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00183	Reset ECU	PCM (Powertrain Control Module)
SP00184	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00185	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00186	Brake Switch Learn	PCM (Powertrain Control Module)
SP00187	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00188	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00189	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00190	Reset ECU	PCM (Powertrain Control Module)
SP00191	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00192	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00193	Brake Switch Learn	PCM (Powertrain Control Module)
SP00194	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00195	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00196	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00197	Reset ECU	PCM (Powertrain Control Module)
SP00198	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00199	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00200	Brake Switch Learn	PCM (Powertrain Control Module)
SP00201	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00202	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00203	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00204	Reset ECU	PCM (Powertrain Control Module)
SP00205	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00206	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00207	Brake Switch Learn	PCM (Powertrain Control Module)
SP00208	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00209	Check PCM Odometer	PCM (Powertrain Control Module)
SP00210	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00211	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00212	Reset ECU	PCM (Powertrain Control Module)
SP00213	Reset Memory	PCM (Powertrain Control Module)
SP00214	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00215	Brake Switch Learn	PCM (Powertrain Control Module)
SP00216	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00217	Check PCM Odometer	PCM (Powertrain Control Module)

SP00218	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00219	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00220	Reset ECU	PCM (Powertrain Control Module)
SP00221	Reset Memory	PCM (Powertrain Control Module)
SP00222	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP00223	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00224	Quick Learn	TCM (Transmission Control Module)
SP00225	Clear Self Learning Data	TCM (Transmission Control Module)
SP00226	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00227	ABS Static Test	ABS (Anti-Lock Braking System)
SP00228	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP00229	Initialize Power Top	BCM (Body Control Module)
SP00230	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00231	Reset Service Information	IC (Instrument Cluster)
SP00232	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00233	IPC Replacement	IC (Instrument Cluster)
SP00234	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00235	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00236	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00237	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00238	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00239	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00240	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00241	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00242	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00243	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00244	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00245	CTM Proxi Configuration	CTM (Convergence Telematic Module)
SP00246	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP00247	Initialize EPS	EPS (Electric Power Steering)
SP00248	RADIO Proxi Configuration	RADIO (RADIO)
SP00249	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00250	Brake Switch Learn	PCM (Powertrain Control Module)
SP00251	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00252	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00253	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00254	Reset ECU	PCM (Powertrain Control Module)

SP00255	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00256	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00257	Brake Switch Learn	PCM (Powertrain Control Module)
SP00258	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00259	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00260	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00261	Reset ECU	PCM (Powertrain Control Module)
SP00262	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00263	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00264	Brake Switch Learn	PCM (Powertrain Control Module)
SP00265	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00266	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00267	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00268	Reset ECU	PCM (Powertrain Control Module)
SP00269	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00270	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00271	Brake Switch Learn	PCM (Powertrain Control Module)
SP00272	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00273	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00274	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00275	Reset ECU	PCM (Powertrain Control Module)
SP00276	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00277	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00278	Brake Switch Learn	PCM (Powertrain Control Module)
SP00279	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00280	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00281	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00282	Reset ECU	PCM (Powertrain Control Module)
SP00283	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00284	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00285	Brake Switch Learn	PCM (Powertrain Control Module)
SP00286	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00287	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00288	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00289	Reset ECU	PCM (Powertrain Control Module)
SP00290	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00291	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)

SP00292	Brake Switch Learn	PCM (Powertrain Control Module)
SP00293	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00294	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00295	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00296	Reset ECU	PCM (Powertrain Control Module)
SP00297	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00298	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00299	Brake Switch Learn	PCM (Powertrain Control Module)
SP00300	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00301	Check PCM Odometer	PCM (Powertrain Control Module)
SP00302	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00303	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00304	Reset ECU	PCM (Powertrain Control Module)
SP00305	Reset Memory	PCM (Powertrain Control Module)
SP00306	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00307	Brake Switch Learn	PCM (Powertrain Control Module)
SP00308	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00309	Check PCM Odometer	PCM (Powertrain Control Module)
SP00310	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00311	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00312	Reset ECU	PCM (Powertrain Control Module)
SP00313	Reset Memory	PCM (Powertrain Control Module)
SP00314	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00315	Brake Switch Learn	PCM (Powertrain Control Module)
SP00316	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00317	Check PCM Odometer	PCM (Powertrain Control Module)
SP00318	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00319	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00320	Reset ECU	PCM (Powertrain Control Module)
SP00321	Reset Memory	PCM (Powertrain Control Module)
SP00322	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00323	Brake Switch Learn	PCM (Powertrain Control Module)
SP00324	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00325	Check PCM Odometer	PCM (Powertrain Control Module)
SP00326	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00327	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00328	Reset ECU	PCM (Powertrain Control Module)

SP00329	Reset Memory	PCM (Powertrain Control Module)
SP00330	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00331	Brake Switch Learn	PCM (Powertrain Control Module)
SP00332	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00333	Check PCM Odometer	PCM (Powertrain Control Module)
SP00334	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00335	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00336	Reset ECU	PCM (Powertrain Control Module)
SP00337	Reset Memory	PCM (Powertrain Control Module)
SP00338	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00339	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00340	Brake Switch Learn	PCM (Powertrain Control Module)
SP00341	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00342	Check PCM Odometer	PCM (Powertrain Control Module)
SP00343	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00344	Reset ECU	PCM (Powertrain Control Module)
SP00345	Reset Memory	PCM (Powertrain Control Module)
SP00346	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00347	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00348	Brake Switch Learn	PCM (Powertrain Control Module)
SP00349	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00350	Check PCM Odometer	PCM (Powertrain Control Module)
SP00351	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00352	Reset ECU	PCM (Powertrain Control Module)
SP00353	Reset Memory	PCM (Powertrain Control Module)
SP00354	Reset Memory	PCM (Powertrain Control Module)
SP00355	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00356	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00357	Brake Switch Learn	PCM (Powertrain Control Module)
SP00358	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00359	Check PCM Odometer	PCM (Powertrain Control Module)
SP00360	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00361	Reset ECU	PCM (Powertrain Control Module)
SP00362	Reset Memory	PCM (Powertrain Control Module)
SP00363	Reset Memory	PCM (Powertrain Control Module)
SP00364	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00365	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)

SP00366	Brake Switch Learn	PCM (Powertrain Control Module)
SP00367	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00368	Check PCM Odometer	PCM (Powertrain Control Module)
SP00369	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00370	Reset ECU	PCM (Powertrain Control Module)
SP00371	Reset Memory	PCM (Powertrain Control Module)
SP00372	Reset Memory	PCM (Powertrain Control Module)
SP00373	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP00374	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00375	Quick Learn	TCM (Transmission Control Module)
SP00376	Clear Self Learning Data	TCM (Transmission Control Module)
SP00377	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00378	Clear Self Learning Data	TCM (Transmission Control Module)
SP00379	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00380	ABS Static Test	ABS (Anti-Lock Braking System)
SP00381	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP00382	Initialize Power Top	BCM (Body Control Module)
SP00383	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00384	Reset Service Information	IC (Instrument Cluster)
SP00385	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00386	IPC Replacement	IC (Instrument Cluster)
SP00387	CTM Proxi Configuration	CTM (Convergence Telematic Module)
SP00388	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP00389	Initialize EPS	EPS (Electric Power Steering)
SP00390	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00391	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00392	RADIO Proxi Configuration	RADIO (RADIO)
SP00393	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00394	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00395	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00396	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00397	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00398	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00399	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00400	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00401	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00402	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)

SP00403	Brake Switch Learn	PCM (Powertrain Control Module)
SP00404	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00405	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00406	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00407	Reset ECU	PCM (Powertrain Control Module)
SP00408	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00409	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00410	Brake Switch Learn	PCM (Powertrain Control Module)
SP00411	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00412	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00413	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00414	Reset ECU	PCM (Powertrain Control Module)
SP00415	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00416	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00417	Brake Switch Learn	PCM (Powertrain Control Module)
SP00418	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00419	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00420	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00421	Reset ECU	PCM (Powertrain Control Module)
SP00422	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00423	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00424	Brake Switch Learn	PCM (Powertrain Control Module)
SP00425	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00426	Check PCM Odometer	PCM (Powertrain Control Module)
SP00427	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00428	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00429	Reset ECU	PCM (Powertrain Control Module)
SP00430	Reset Memory	PCM (Powertrain Control Module)
SP00431	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00432	Brake Switch Learn	PCM (Powertrain Control Module)
SP00433	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00434	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00435	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00436	Reset ECU	PCM (Powertrain Control Module)
SP00437	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00438	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00439	Brake Switch Learn	PCM (Powertrain Control Module)

SP00440	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00441	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00442	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00443	Reset ECU	PCM (Powertrain Control Module)
SP00444	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00445	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00446	Brake Switch Learn	PCM (Powertrain Control Module)
SP00447	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00448	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00449	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00450	Reset ECU	PCM (Powertrain Control Module)
SP00451	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00452	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00453	Brake Switch Learn	PCM (Powertrain Control Module)
SP00454	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00455	Air-Conditioning Self Learning	PCM (Powertrain Control Module)
SP00456	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00457	Reset ECU	PCM (Powertrain Control Module)
SP00458	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00459	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP00460	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00461	Quick Learn	TCM (Transmission Control Module)
SP00462	Clear Self Learning Data	TCM (Transmission Control Module)
SP00463	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00464	Clear Self Learning Data	TCM (Transmission Control Module)
SP00465	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00466	ABS Static Test	ABS (Anti-Lock Braking System)
SP00467	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP00468	Initialize Power Top	BCM (Body Control Module)
SP00469	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP00470	IPC Enable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00471	Reset Service Information	IC (Instrument Cluster)
SP00472	IPC Disable Seatbelt Minder Chime	IC (Instrument Cluster)
SP00473	IPC Replacement	IC (Instrument Cluster)
SP00474	RADIO Proxi Configuration	RADIO (RADIO)
SP00475	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP00476	Initialize EPS	EPS (Electric Power Steering)

SP00477	CTM Proxi Configuration	CTM (Convergence Telematic Module)
SP00478	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00479	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00480	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00481	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00482	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00483	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00484	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00485	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00486	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00487	Body Blinking Lights Configuration	BCM (Body Control Module)
SP00488	Body Blinking Lights Configuration	BCM (Body Control Module)
SP00489	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00490	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00491	Clutch Pedal Learning	ECM (Engine Control Module)
SP00492	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00493	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00494	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP00495	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00496	Oil Change	ECM (Engine Control Module)
SP00497	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00498	Injector Codes Read	ECM (Engine Control Module)
SP00499	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00500	EGR Valve Test	ECM (Engine Control Module)
SP00501	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00502	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00503	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00504	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00505	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00506	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00507	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP00508	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00509	Oil Change	ECM (Engine Control Module)
SP00510	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00511	Injector Codes Read	ECM (Engine Control Module)
SP00512	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00513	EGR Valve Test	ECM (Engine Control Module)

SP00514	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00515	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00516	Oil Change	ECM (Engine Control Module)
SP00517	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00518	Injector Codes Read	ECM (Engine Control Module)
SP00519	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00520	EGR Valve Test	ECM (Engine Control Module)
SP00521	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00522	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00523	Throttle Valve Test	ECM (Engine Control Module)
SP00524	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00525	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP00526	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00527	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00528	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00529	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00530	Oil Change	ECM (Engine Control Module)
SP00531	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00532	Injector Codes Read	ECM (Engine Control Module)
SP00533	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00534	EGR Valve Test	ECM (Engine Control Module)
SP00535	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00536	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00537	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00538	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00539	Clutch Pedal Learning	ECM (Engine Control Module)
SP00540	Neutral Signal Learning With Engine Off	ECM (Engine Control Module)
SP00541	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00542	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00543	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00544	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00545	Oil Change	ECM (Engine Control Module)
SP00546	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00547	Injector Codes Read	ECM (Engine Control Module)
SP00548	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00549	EGR Valve Test	ECM (Engine Control Module)
SP00550	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP00551	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00552	Throttle Valve Test	ECM (Engine Control Module)
SP00553	Oil Change	ECM (Engine Control Module)
SP00554	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00555	Injector Codes Read	ECM (Engine Control Module)
SP00556	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00557	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00558	EGR Valve Test	ECM (Engine Control Module)
SP00559	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00560	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00561	Throttle Valve Test	ECM (Engine Control Module)
SP00562	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00563	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00564	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP00565	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00566	Oil Change	ECM (Engine Control Module)
SP00567	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00568	Injector Codes Read	ECM (Engine Control Module)
SP00569	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00570	EGR Valve Test	ECM (Engine Control Module)
SP00571	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00572	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00573	Throttle Valve Test	ECM (Engine Control Module)
SP00574	Motorized Throttle Learning	ECM (Engine Control Module)
SP00575	Vehicle Configuration Reset	ECM (Engine Control Module)
SP00576	Oil Change	ECM (Engine Control Module)
SP00577	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00578	Injector Codes Read	ECM (Engine Control Module)
SP00579	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00580	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00581	EGR Valve Test	ECM (Engine Control Module)
SP00582	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00583	Throttle Valve Test	ECM (Engine Control Module)
SP00584	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00585	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00586	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00587	Motorised Throttle Replacement	ECM (Engine Control Module)

SP00588	Clutch Pedal Learning	ECM (Engine Control Module)
SP00589	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00590	Oil Change	ECM (Engine Control Module)
SP00591	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00592	Injector Codes Read	ECM (Engine Control Module)
SP00593	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00594	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00595	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00596	EGR Valve Test	ECM (Engine Control Module)
SP00597	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00598	Throttle Valve Test	ECM (Engine Control Module)
SP00599	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00600	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00601	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP00602	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00603	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00604	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00605	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00606	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00607	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00608	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00609	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00610	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00611	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
SP00612	Enable/Disable The Roll Bench Mode	ABS (Anti-Lock Braking System)
SP00613	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00614	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00615	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00616	Enable/Disable The Roll Bench Mode	ABS (Anti-Lock Braking System)
SP00617	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00618	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00619	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00620	Steering Angle Sensor	EPS (Electric Power Steering)
SP00621	Reset Odometer	IC (Instrument Cluster)
SP00622	Reset Service Information	IC (Instrument Cluster)
SP00623	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00624	Enable Seat Belts Reminder	IC (Instrument Cluster)

SP00625	Reset Odometer	IC (Instrument Cluster)
SP00626	Reset Service Information	IC (Instrument Cluster)
SP00627	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00628	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00629	Reset Odometer	IC (Instrument Cluster)
SP00630	Reset Service Information	IC (Instrument Cluster)
SP00631	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00632	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00633	Reset Odometer	IC (Instrument Cluster)
SP00634	Reset Service Information	IC (Instrument Cluster)
SP00635	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00636	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00637	Reset Odometer	IC (Instrument Cluster)
SP00638	Reset Service Information	IC (Instrument Cluster)
SP00639	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00640	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00641	Reset Odometer	IC (Instrument Cluster)
SP00642	Reset Service Information	IC (Instrument Cluster)
SP00643	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00644	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00645	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00646	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00647	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00648	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00649	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00650	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00651	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00652	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00653	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00654	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00655	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00656	Brake Switch Learn	PCM (Powertrain Control Module)
SP00657	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00658	Check PCM Odometer	PCM (Powertrain Control Module)
SP00659	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00660	Reset ECU	PCM (Powertrain Control Module)
SP00661	Reset Memory	PCM (Powertrain Control Module)

SP00662	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00663	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00664	Brake Switch Learn	PCM (Powertrain Control Module)
SP00665	Clutch Pedal Learn	PCM (Powertrain Control Module)
SP00666	Check PCM Odometer	PCM (Powertrain Control Module)
SP00667	Throttle Body Self Learning	PCM (Powertrain Control Module)
SP00668	Reset ECU	PCM (Powertrain Control Module)
SP00669	Reset Memory	PCM (Powertrain Control Module)
SP00670	Clear Self Learning Data	TCM (Transmission Control Module)
SP00671	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00672	Clear Self Learning Data	TCM (Transmission Control Module)
SP00673	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00674	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00675	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00676	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00677	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00678	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00679	Body Blinking Lights Configuration	BCM (Body Control Module)
SP00680	Body Blinking Lights Configuration	BCM (Body Control Module)
SP00681	Steering Angle Sensor	EPS (Electric Power Steering)
SP00682	Reset Odometer	IC (Instrument Cluster)
SP00683	Reset Service Information	IC (Instrument Cluster)
SP00684	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00685	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00686	Reset Odometer	IC (Instrument Cluster)
SP00687	Reset Service Information	IC (Instrument Cluster)
SP00688	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00689	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00690	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00691	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00692	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00693	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00694	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00695	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00696	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00697	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00698	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)

SP00699	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00700	Brake Switch Learn	PCM (Powertrain Control Module)
SP00701	Check PCM Odometer	PCM (Powertrain Control Module)
SP00702	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP00703	Reset Memory	PCM (Powertrain Control Module)
SP00704	Throttle Body Self-Learning	PCM (Powertrain Control Module)
SP00705	Clear Self Learning Data	TCM (Transmission Control Module)
SP00706	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00707	Clear Self Learning Data	TCM (Transmission Control Module)
SP00708	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP00709	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00710	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP00711	Reset Gear Configuration	ABS (Anti-Lock Braking System)
SP00712	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00713	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00714	Body Blinking Lights Configuration	BCM (Body Control Module)
SP00715	Body Blinking Lights Configuration	BCM (Body Control Module)
SP00716	Steering Angle Sensor	EPS (Electric Power Steering)
SP00717	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP00718	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP00719	TPM FGA Proxi Configuration	TPMS (Tire Pressure Monitoring System)
SP00720	Update Front And Rear Axle Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP00721	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00722	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00723	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00724	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP00725	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP00726	Reset Odometer	IC (Instrument Cluster)
SP00727	Reset Service Information	IC (Instrument Cluster)
SP00728	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00729	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00730	Reset Odometer	IC (Instrument Cluster)
SP00731	Reset Service Information	IC (Instrument Cluster)
SP00732	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00733	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00734	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00735	Motorized Throttle Replacement	ECM (Engine Control Module)

SP00736	Injector/S Replacement	ECM (Engine Control Module)
SP00737	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00738	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00739	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00740	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00741	Injector/S Replacement	ECM (Engine Control Module)
SP00742	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00743	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00744	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00745	Injector Codes Read	ECM (Engine Control Module)
SP00746	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00747	Oil Change	ECM (Engine Control Module)
SP00748	EGR Valve Test	ECM (Engine Control Module)
SP00749	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00750	Throttle Valve Test	ECM (Engine Control Module)
SP00751	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00752	Oil Change	ECM (Engine Control Module)
SP00753	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00754	Injector Codes Read	ECM (Engine Control Module)
SP00755	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00756	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00757	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00758	EGR Valve Test	ECM (Engine Control Module)
SP00759	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00760	Throttle Valve Test	ECM (Engine Control Module)
SP00761	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00762	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00763	Injector Codes Read	ECM (Engine Control Module)
SP00764	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00765	Oil Change	ECM (Engine Control Module)
SP00766	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00767	EGR Valve Test	ECM (Engine Control Module)
SP00768	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00769	Throttle Valve Test	ECM (Engine Control Module)
SP00770	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00771	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00772	Injector Codes Read	ECM (Engine Control Module)
SP00773	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00774	Oil Change	ECM (Engine Control Module)

SP00775	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00776	EGR Valve Test	ECM (Engine Control Module)
SP00777	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00778	Throttle Valve Test	ECM (Engine Control Module)
SP00779	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00780	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00781	Injector Codes Read	ECM (Engine Control Module)
SP00782	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00783	Oil Change	ECM (Engine Control Module)
SP00784	EGR Valve Test	ECM (Engine Control Module)
SP00785	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00786	Throttle Valve Test	ECM (Engine Control Module)
SP00787	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00788	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00789	Oil Change	ECM (Engine Control Module)
SP00790	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00791	Injector/S Replacement	ECM (Engine Control Module)
SP00792	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00793	Waste Gate Valve Command	ECM (Engine Control Module)
SP00794	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00795	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00796	Oil Change	ECM (Engine Control Module)
SP00797	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00798	Clutch Pedal Learning	ECM (Engine Control Module)
SP00799	Injector/S Replacement	ECM (Engine Control Module)
SP00800	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00801	Waste Gate Valve Command	ECM (Engine Control Module)
SP00802	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00803	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00804	Oil Change	ECM (Engine Control Module)
SP00805	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00806	Injector/S Replacement	ECM (Engine Control Module)
SP00807	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00808	Waste Gate Valve Command	ECM (Engine Control Module)
SP00809	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00810	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00811	Injector/S Replacement	ECM (Engine Control Module)
SP00812	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00813	Motorized Throttle Replacement	ECM (Engine Control Module)

SP00814	Oil Change	ECM (Engine Control Module)
SP00815	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00816	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00817	Injector/S Replacement	ECM (Engine Control Module)
SP00818	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00819	Waste Gate Valve Command	ECM (Engine Control Module)
SP00820	Clutch Pedal Learning	ECM (Engine Control Module)
SP00821	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00822	Oil Change	ECM (Engine Control Module)
SP00823	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00824	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00825	Injector/S Replacement	ECM (Engine Control Module)
SP00826	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00827	Waste Gate Valve Command	ECM (Engine Control Module)
SP00828	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00829	Oil Change	ECM (Engine Control Module)
SP00830	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00831	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00832	Injector/S Replacement	ECM (Engine Control Module)
SP00833	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00834	Waste Gate Valve Command	ECM (Engine Control Module)
SP00835	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00836	Oil Change	ECM (Engine Control Module)
SP00837	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00838	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00839	Injector/S Replacement	ECM (Engine Control Module)
SP00840	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00841	Waste Gate Valve Command	ECM (Engine Control Module)
SP00842	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00843	Oil Change	ECM (Engine Control Module)
SP00844	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00845	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00846	Injector/S Replacement	ECM (Engine Control Module)
SP00847	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00848	Proxi Alignment Procedure	ECM (Engine Control Module)
SP00849	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00850	Injector Codes Read	ECM (Engine Control Module)
SP00851	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00852	Oil Change	ECM (Engine Control Module)

SP00853	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00854	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00855	EGR Valve Test	ECM (Engine Control Module)
SP00856	Throttle Valve Test	ECM (Engine Control Module)
SP00857	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00858	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00859	Injector/S Replacement	ECM (Engine Control Module)
SP00860	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00861	Clutch Pedal Learning	ECM (Engine Control Module)
SP00862	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00863	Oil Change	ECM (Engine Control Module)
SP00864	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00865	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00866	Injector/S Replacement	ECM (Engine Control Module)
SP00867	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00868	Waste Gate Valve Command	ECM (Engine Control Module)
SP00869	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00870	Injector Codes Read	ECM (Engine Control Module)
SP00871	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00872	Oil Change	ECM (Engine Control Module)
SP00873	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00874	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00875	EGR Valve Test	ECM (Engine Control Module)
SP00876	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00877	Throttle Valve Test	ECM (Engine Control Module)
SP00878	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00879	Injector Codes Read	ECM (Engine Control Module)
SP00880	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00881	Oil Change	ECM (Engine Control Module)
SP00882	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00883	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00884	EGR Valve Test	ECM (Engine Control Module)
SP00885	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00886	Throttle Valve Test	ECM (Engine Control Module)
SP00887	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00888	Oil Change	ECM (Engine Control Module)
SP00889	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00890	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00891	Injector/S Replacement	ECM (Engine Control Module)

SP00892	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00893	Waste Gate Valve Command	ECM (Engine Control Module)
SP00894	Clutch Pedal Learning	ECM (Engine Control Module)
SP00895	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00896	Oil Change	ECM (Engine Control Module)
SP00897	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00898	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00899	Injector/S Replacement	ECM (Engine Control Module)
SP00900	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00901	Waste Gate Valve Command	ECM (Engine Control Module)
SP00902	Motorized Throttle Learning	ECM (Engine Control Module)
SP00903	Reset Mixture Adaptation Values	ECM (Engine Control Module)
SP00904	Motorized Throttle Replacement	ECM (Engine Control Module)
SP00905	Oil Change	ECM (Engine Control Module)
SP00906	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00907	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00908	Injector/S Replacement	ECM (Engine Control Module)
SP00909	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP00910	Waste Gate Valve Command	ECM (Engine Control Module)
SP00911	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00912	Injector Codes Read	ECM (Engine Control Module)
SP00913	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00914	Oil Change	ECM (Engine Control Module)
SP00915	Replacement Of EGR Valve	ECM (Engine Control Module)
SP00916	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP00917	EGR Valve Test	ECM (Engine Control Module)
SP00918	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP00919	Throttle Valve Test	ECM (Engine Control Module)
SP00920	Check PCM Odometer	PCM (Powertrain Control Module)
SP00921	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP00922	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP00923	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00924	EGR System Test	PCM (Powertrain Control Module)
SP00925	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP00926	Set Engine RPM	PCM (Powertrain Control Module)
SP00927	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP00928	Brake Switch Learn	PCM (Powertrain Control Module)
SP00929	Check PCM Odometer	PCM (Powertrain Control Module)
SP00930	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)

SP00931	Reset Memory	PCM (Powertrain Control Module)
SP00932	Throttle Body Self-Learning	PCM (Powertrain Control Module)
SP00933	Check PCM Odometer	PCM (Powertrain Control Module)
SP00934	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP00935	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP00936	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00937	EGR System Test	PCM (Powertrain Control Module)
SP00938	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP00939	Set Engine RPM	PCM (Powertrain Control Module)
SP00940	Check PCM Odometer	PCM (Powertrain Control Module)
SP00941	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP00942	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP00943	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00944	EGR System Test	PCM (Powertrain Control Module)
SP00945	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP00946	Set Engine RPM	PCM (Powertrain Control Module)
SP00947	Check PCM Odometer	PCM (Powertrain Control Module)
SP00948	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP00949	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP00950	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP00951	EGR System Test	PCM (Powertrain Control Module)
SP00952	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP00953	Set Engine RPM	PCM (Powertrain Control Module)
SP00954	ECU Substitution	ABS (Anti-Lock Braking System)
SP00955	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00956	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00957	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
SP00958	ECU Substitution	ABS (Anti-Lock Braking System)
SP00959	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP00960	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP00961	TPMS Reset Calibration	ABS (Anti-Lock Braking System)
SP00962	Reset Odometer	IC (Instrument Cluster)
SP00963	Reset Service Information	IC (Instrument Cluster)
SP00964	Reset Odometer	IC (Instrument Cluster)
SP00965	Reset Service Information	IC (Instrument Cluster)
SP00966	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP00967	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP00968	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)

SP00969	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP00970	Steering Angle Sensor	EPS (Electric Power Steering)
SP00971	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00972	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00973	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00974	Vehicle Configuration Reset	ECM (Engine Control Module)
SP00975	Motorised Throttle Replacement	ECM (Engine Control Module)
SP00976	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00977	Injector/S Replacement	ECM (Engine Control Module)
SP00978	Oil Change	ECM (Engine Control Module)
SP00979	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP00980	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00981	Oil Change	ECM (Engine Control Module)
SP00982	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP00983	Injector Codes Read	ECM (Engine Control Module)
SP00984	Phonic Wheel Replacement	ECM (Engine Control Module)
SP00985	EGR Valve Test	ECM (Engine Control Module)
SP00986	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP00987	Throttle Valve Test	ECM (Engine Control Module)
SP00988	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00989	Phonic Wheel Reset	ECM (Engine Control Module)
SP00990	Reset Phases Front	ECM (Engine Control Module)
SP00991	Motorized Throttle Learning	ECM (Engine Control Module)
SP00992	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00993	Clutch Pedal Learning	ECM (Engine Control Module)
SP00994	Motorized Throttle Learning	ECM (Engine Control Module)
SP00995	Phonic Wheel Reset	ECM (Engine Control Module)
SP00996	Reset Phases Front	ECM (Engine Control Module)
SP00997	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP00998	Motorized Throttle Learning	ECM (Engine Control Module)
SP00999	Phonic Wheel Reset	ECM (Engine Control Module)
SP01000	Reset Phases Front	ECM (Engine Control Module)
SP01001	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01002	Oil Change	ECM (Engine Control Module)
SP01003	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01004	Injector Codes Read	ECM (Engine Control Module)
SP01005	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01006	EGR Valve Test	ECM (Engine Control Module)

SP01007	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01008	Throttle Valve Test	ECM (Engine Control Module)
SP01009	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01010	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01011	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01012	Oil Change	ECM (Engine Control Module)
SP01013	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP01014	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01015	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01016	Motorized Throttle Learning	ECM (Engine Control Module)
SP01017	Reset Phases Front	ECM (Engine Control Module)
SP01018	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01019	Motorized Throttle Learning	ECM (Engine Control Module)
SP01020	Phonic Wheel Reset	ECM (Engine Control Module)
SP01021	Reset Phases Front	ECM (Engine Control Module)
SP01022	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01023	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01024	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01025	Oil Change	ECM (Engine Control Module)
SP01026	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP01027	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01028	Oil Change	ECM (Engine Control Module)
SP01029	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01030	Injector Codes Read	ECM (Engine Control Module)
SP01031	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01032	EGR Valve Test	ECM (Engine Control Module)
SP01033	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01034	Throttle Valve Test	ECM (Engine Control Module)
SP01035	Speed Limit Setting	ECM (Engine Control Module)
SP01036	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01037	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01038	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01039	Oil Change	ECM (Engine Control Module)
SP01040	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP01041	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01042	Motorized Throttle Learning	ECM (Engine Control Module)
SP01043	Phonic Wheel Reset	ECM (Engine Control Module)
SP01044	Reset Phases Front	ECM (Engine Control Module)
SP01045	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP01046	Injector Codes Read	ECM (Engine Control Module)
SP01047	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01048	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01049	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01050	Clutch Pedal Learning	ECM (Engine Control Module)
SP01051	Motorized Throttle Learning	ECM (Engine Control Module)
SP01052	Phonic Wheel Reset	ECM (Engine Control Module)
SP01053	Reset Phases Front	ECM (Engine Control Module)
SP01054	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01055	Clutch Pedal Learning	ECM (Engine Control Module)
SP01056	Motorized Throttle Learning	ECM (Engine Control Module)
SP01057	Phonic Wheel Reset	ECM (Engine Control Module)
SP01058	Reset Phases Front	ECM (Engine Control Module)
SP01059	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01060	Overboost Counter Reset	ECM (Engine Control Module)
SP01061	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01062	Oil Change	ECM (Engine Control Module)
SP01063	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01064	Injector Codes Read	ECM (Engine Control Module)
SP01065	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01066	EGR Valve Test	ECM (Engine Control Module)
SP01067	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01068	Throttle Valve Test	ECM (Engine Control Module)
SP01069	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01070	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01071	Overboost Counter Reset	ECM (Engine Control Module)
SP01072	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01073	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01074	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01075	Oil Change	ECM (Engine Control Module)
SP01076	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP01077	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01078	Oil Change	ECM (Engine Control Module)
SP01079	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01080	Injector Codes Read	ECM (Engine Control Module)
SP01081	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01082	EGR Valve Test	ECM (Engine Control Module)
SP01083	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)

SP01084	Throttle Valve Test	ECM (Engine Control Module)
SP01085	Speed Limit Setting	ECM (Engine Control Module)
SP01086	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01087	Oil Change	ECM (Engine Control Module)
SP01088	Injector Codes Read	ECM (Engine Control Module)
SP01089	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01090	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01091	Speed Limit Setting	ECM (Engine Control Module)
SP01092	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01093	Injector Codes Read	ECM (Engine Control Module)
SP01094	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01095	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01096	Speed Limit Setting	ECM (Engine Control Module)
SP01097	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01098	Motorized Throttle Learning	ECM (Engine Control Module)
SP01099	Phonic Wheel Reset	ECM (Engine Control Module)
SP01100	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01101	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01102	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP01103	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01104	Motorized Throttle Replacement	ECM (Engine Control Module)
SP01105	Phonic Wheel Reset	ECM (Engine Control Module)
SP01106	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01107	Clutch Pedal Learning	ECM (Engine Control Module)
SP01108	Motorized Throttle Learning	ECM (Engine Control Module)
SP01109	Phonic Wheel Reset	ECM (Engine Control Module)
SP01110	Reset Phases Front	ECM (Engine Control Module)
SP01111	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01112	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01113	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01114	Oil Change	ECM (Engine Control Module)
SP01115	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP01116	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01117	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01118	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01119	Injector Codes Read	ECM (Engine Control Module)
SP01120	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01121	Oil Change	ECM (Engine Control Module)

SP01122	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01123	EGR Valve Test	ECM (Engine Control Module)
SP01124	Throttle Valve Test	ECM (Engine Control Module)
SP01125	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01126	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01127	Injector/S Replacement	ECM (Engine Control Module)
SP01128	Oil Change	ECM (Engine Control Module)
SP01129	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01130	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP01131	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01132	Injector Codes Read	ECM (Engine Control Module)
SP01133	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01134	Oil Change	ECM (Engine Control Module)
SP01135	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01136	EGR Valve Test	ECM (Engine Control Module)
SP01137	Throttle Valve Test	ECM (Engine Control Module)
SP01138	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01139	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01140	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01141	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01142	Clutch Pedal Learning	ECM (Engine Control Module)
SP01143	Motorized Throttle Learning	ECM (Engine Control Module)
SP01144	Phonic Wheel Reset	ECM (Engine Control Module)
SP01145	Reset Phases Front	ECM (Engine Control Module)
SP01146	Phonic Wheel Reset	ECM (Engine Control Module)
SP01147	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01148	Motorized Throttle Replacement	ECM (Engine Control Module)
SP01149	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01150	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01151	Injector Codes Read	ECM (Engine Control Module)
SP01152	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01153	Oil Change	ECM (Engine Control Module)
SP01154	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01155	EGR Valve Test	ECM (Engine Control Module)
SP01156	Throttle Valve Test	ECM (Engine Control Module)
SP01157	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01158	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01159	Injector Codes Read	ECM (Engine Control Module)
SP01160	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP01161	Oil Change	ECM (Engine Control Module)
SP01162	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01163	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01164	Speed Limit Setting	ECM (Engine Control Module)
SP01165	EGR Valve Test	ECM (Engine Control Module)
SP01166	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01167	Throttle Valve Test	ECM (Engine Control Module)
SP01168	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01169	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01170	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01171	Clutch Pedal Learning	ECM (Engine Control Module)
SP01172	Motorized Throttle Learning	ECM (Engine Control Module)
SP01173	Phonic Wheel Reset	ECM (Engine Control Module)
SP01174	Reset Phases Front	ECM (Engine Control Module)
SP01175	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01176	Clutch Pedal Learning	ECM (Engine Control Module)
SP01177	Motorized Throttle Learning	ECM (Engine Control Module)
SP01178	Phonic Wheel Reset	ECM (Engine Control Module)
SP01179	Reset Phases Front	ECM (Engine Control Module)
SP01180	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01181	Injector Codes Read	ECM (Engine Control Module)
SP01182	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01183	Oil Change	ECM (Engine Control Module)
SP01184	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01185	EGR Valve Test	ECM (Engine Control Module)
SP01186	Throttle Valve Test	ECM (Engine Control Module)
SP01187	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01188	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01189	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01190	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01191	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01192	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01193	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01194	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01195	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01196	Static Test	ABS (Anti-Lock Braking System)
SP01197	Static Test	ABS (Anti-Lock Braking System)
SP01198	Longitudinal/Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01199	Static Test	ABS (Anti-Lock Braking System)

SP01200	TPMS Calibration	ABS (Anti-Lock Braking System)
SP01201	Static Test	ABS (Anti-Lock Braking System)
SP01202	Static Test	ABS (Anti-Lock Braking System)
SP01203	Ecu Replacement	ABS (Anti-Lock Braking System)
SP01204	Electric Park Brake Management	ABS (Anti-Lock Braking System)
SP01205	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01206	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01207	Longitudinal/Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01208	Static Test	ABS (Anti-Lock Braking System)
SP01209	TPMS Calibration	ABS (Anti-Lock Braking System)
SP01210	Steering Angle Calibration	EPS (Electric Power Steering)
SP01211	Steering Angle Calibration	EPS (Electric Power Steering)
SP01212	Steering Angle Calibration	EPS (Electric Power Steering)
SP01213	Steering Angle Calibration	EPS (Electric Power Steering)
SP01214	Steering Angle Calibration	EPS (Electric Power Steering)
SP01215	Reset Odometer	IC (Instrument Cluster)
SP01216	Reset Service Information	IC (Instrument Cluster)
SP01217	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01218	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01219	Reset Odometer	IC (Instrument Cluster)
SP01220	Reset Service Information	IC (Instrument Cluster)
SP01221	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01222	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01223	Reset Odometer	IC (Instrument Cluster)
SP01224	Reset Service Information	IC (Instrument Cluster)
SP01225	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01226	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01227	Reset Odometer	IC (Instrument Cluster)
SP01228	Reset Service Information	IC (Instrument Cluster)
SP01229	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01230	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01231	Reset Odometer	IC (Instrument Cluster)
SP01232	Reset Service Information	IC (Instrument Cluster)
SP01233	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01234	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01235	Reset Odometer	IC (Instrument Cluster)
SP01236	Reset Service Information	IC (Instrument Cluster)
SP01237	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01238	Enable Seat Belts Reminder	IC (Instrument Cluster)

SP01239	Reset Odometer	IC (Instrument Cluster)
SP01240	Reset Service Information	IC (Instrument Cluster)
SP01241	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01242	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01243	Reset Odometer	IC (Instrument Cluster)
SP01244	Reset Service Information	IC (Instrument Cluster)
SP01245	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01246	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01247	Speed Limit Setting	ECM (Engine Control Module)
SP01248	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01249	Oil Change	ECM (Engine Control Module)
SP01250	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01251	Injector Codes Read	ECM (Engine Control Module)
SP01252	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01253	EGR Valve Test	ECM (Engine Control Module)
SP01254	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01255	Throttle Valve Test	ECM (Engine Control Module)
SP01256	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01257	Oil Change	ECM (Engine Control Module)
SP01258	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01259	Injector Codes Read	ECM (Engine Control Module)
SP01260	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01261	EGR Valve Test	ECM (Engine Control Module)
SP01262	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01263	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01264	Speed Limit Setting	ECM (Engine Control Module)
SP01265	Oil Change	ECM (Engine Control Module)
SP01266	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01267	Injector Codes Read	ECM (Engine Control Module)
SP01268	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01269	EGR Valve Test	ECM (Engine Control Module)
SP01270	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01271	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01272	Speed Limit Setting	ECM (Engine Control Module)
SP01273	Oil Change	ECM (Engine Control Module)
SP01274	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01275	Injector Codes Read	ECM (Engine Control Module)
SP01276	Phonic Wheel Replacement	ECM (Engine Control Module)

SP01277	EGR Valve Test	ECM (Engine Control Module)
SP01278	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01279	Throttle Valve Test	ECM (Engine Control Module)
SP01280	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01281	Speed Limit Setting	ECM (Engine Control Module)
SP01282	Injector Codes Read	ECM (Engine Control Module)
SP01283	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01284	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01285	Speed Limit Setting	ECM (Engine Control Module)
SP01286	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01287	Motorized Throttle Learning	ECM (Engine Control Module)
SP01288	Speed Limit Setting	ECM (Engine Control Module)
SP01289	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01290	Oil Change	ECM (Engine Control Module)
SP01291	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01292	Injector Codes Read	ECM (Engine Control Module)
SP01293	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01294	EGR Valve Test	ECM (Engine Control Module)
SP01295	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01296	Throttle Valve Test	ECM (Engine Control Module)
SP01297	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01298	Oil Change	ECM (Engine Control Module)
SP01299	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01300	Injector Codes Read	ECM (Engine Control Module)
SP01301	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01302	EGR Valve Test	ECM (Engine Control Module)
SP01303	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01304	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01305	Speed Limit Setting	ECM (Engine Control Module)
SP01306	Oil Change	ECM (Engine Control Module)
SP01307	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01308	Injector Codes Read	ECM (Engine Control Module)
SP01309	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01310	EGR Valve Test	ECM (Engine Control Module)
SP01311	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01312	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01313	Speed Limit Setting	ECM (Engine Control Module)
SP01314	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP01315	Injector Codes Read	ECM (Engine Control Module)
SP01316	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01317	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01318	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01319	Speed Limit Setting	ECM (Engine Control Module)
SP01320	Oil Change	ECM (Engine Control Module)
SP01321	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01322	Injector Codes Read	ECM (Engine Control Module)
SP01323	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01324	EGR Valve Test	ECM (Engine Control Module)
SP01325	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01326	Throttle Valve Test	ECM (Engine Control Module)
SP01327	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01328	Oil Change	ECM (Engine Control Module)
SP01329	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01330	Injector Codes Read	ECM (Engine Control Module)
SP01331	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01332	EGR Valve Test	ECM (Engine Control Module)
SP01333	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01334	Throttle Valve Test	ECM (Engine Control Module)
SP01335	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01336	Oil Change	ECM (Engine Control Module)
SP01337	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01338	Injector Codes Read	ECM (Engine Control Module)
SP01339	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01340	EGR Valve Test	ECM (Engine Control Module)
SP01341	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01342	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01343	Speed Limit Setting	ECM (Engine Control Module)
SP01344	Injector Codes Read	ECM (Engine Control Module)
SP01345	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01346	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01347	Speed Limit Setting	ECM (Engine Control Module)
SP01348	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01349	Oil Change	ECM (Engine Control Module)
SP01350	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01351	Injector Codes Read	ECM (Engine Control Module)
SP01352	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01353	EGR Valve Test	ECM (Engine Control Module)

SP01354	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01355	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01356	Speed Limit Setting	ECM (Engine Control Module)
SP01357	Oil Change	ECM (Engine Control Module)
SP01358	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01359	Injector Codes Read	ECM (Engine Control Module)
SP01360	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01361	EGR Valve Test	ECM (Engine Control Module)
SP01362	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01363	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01364	Speed Limit Setting	ECM (Engine Control Module)
SP01365	Oil Change	ECM (Engine Control Module)
SP01366	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01367	Injector Codes Read	ECM (Engine Control Module)
SP01368	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01369	EGR Valve Test	ECM (Engine Control Module)
SP01370	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01371	Speed Limit Setting	ECM (Engine Control Module)
SP01372	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01373	Oil Change	ECM (Engine Control Module)
SP01374	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01375	Injector Codes Read	ECM (Engine Control Module)
SP01376	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01377	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01378	EGR Valve Test	ECM (Engine Control Module)
SP01379	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01380	Throttle Valve Test	ECM (Engine Control Module)
SP01381	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01382	Speed Limit Setting	ECM (Engine Control Module)
SP01383	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01384	Oil Change	ECM (Engine Control Module)
SP01385	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01386	Injector Codes Read	ECM (Engine Control Module)
SP01387	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01388	EGR Valve Test	ECM (Engine Control Module)
SP01389	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01390	Throttle Valve Test	ECM (Engine Control Module)
SP01391	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01392	Oil Change	ECM (Engine Control Module)

SP01393	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01394	Injector Codes Read	ECM (Engine Control Module)
SP01395	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01396	EGR Valve Test	ECM (Engine Control Module)
SP01397	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01398	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01399	Speed Limit Setting	ECM (Engine Control Module)
SP01400	Oil Change	ECM (Engine Control Module)
SP01401	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01402	Injector Codes Read	ECM (Engine Control Module)
SP01403	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01404	EGR Valve Test	ECM (Engine Control Module)
SP01405	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01406	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01407	Speed Limit Setting	ECM (Engine Control Module)
SP01408	Oil Change	ECM (Engine Control Module)
SP01409	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01410	Injector Codes Read	ECM (Engine Control Module)
SP01411	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01412	EGR Valve Test	ECM (Engine Control Module)
SP01413	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01414	Throttle Valve Test	ECM (Engine Control Module)
SP01415	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01416	Speed Limit Setting	ECM (Engine Control Module)
SP01417	Oil Change	ECM (Engine Control Module)
SP01418	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01419	Injector Codes Read	ECM (Engine Control Module)
SP01420	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01421	EGR Valve Test	ECM (Engine Control Module)
SP01422	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01423	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01424	Speed Limit Setting	ECM (Engine Control Module)
SP01425	Speed Limit Setting	ECM (Engine Control Module)
SP01426	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01427	Speed Limit Setting	ECM (Engine Control Module)
SP01428	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01429	Oil Change	ECM (Engine Control Module)
SP01430	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01431	Injector Codes Read	ECM (Engine Control Module)

SP01432	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01433	EGR Valve Test	ECM (Engine Control Module)
SP01434	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01435	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01436	Speed Limit Setting	ECM (Engine Control Module)
SP01437	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01438	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP01439	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01440	Speed Limit Setting	ECM (Engine Control Module)
SP01441	Oil Change	ECM (Engine Control Module)
SP01442	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01443	Injector Codes Read	ECM (Engine Control Module)
SP01444	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01445	EGR Valve Test	ECM (Engine Control Module)
SP01446	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01447	Throttle Valve Test	ECM (Engine Control Module)
SP01448	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01449	Speed Limit Setting	ECM (Engine Control Module)
SP01450	Oil Change	ECM (Engine Control Module)
SP01451	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01452	Injector Codes Read	ECM (Engine Control Module)
SP01453	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01454	EGR Valve Test	ECM (Engine Control Module)
SP01455	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01456	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01457	Speed Limit Setting	ECM (Engine Control Module)
SP01458	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01459	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01460	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01461	Speed Limit Setting	ECM (Engine Control Module)
SP01462	Oil Change	ECM (Engine Control Module)
SP01463	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01464	Injector Codes Read	ECM (Engine Control Module)
SP01465	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01466	EGR Valve Test	ECM (Engine Control Module)
SP01467	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01468	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01469	Speed Limit Setting	ECM (Engine Control Module)
SP01470	Oil Change	ECM (Engine Control Module)

SP01471	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01472	Injector Codes Read	ECM (Engine Control Module)
SP01473	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01474	EGR Valve Test	ECM (Engine Control Module)
SP01475	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01476	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01477	Speed Limit Setting	ECM (Engine Control Module)
SP01478	Oil Change	ECM (Engine Control Module)
SP01479	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01480	Injector Codes Read	ECM (Engine Control Module)
SP01481	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01482	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01483	EGR Valve Test	ECM (Engine Control Module)
SP01484	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01485	Throttle Valve Test	ECM (Engine Control Module)
SP01486	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01487	Speed Limit Setting	ECM (Engine Control Module)
SP01488	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01489	Oil Change	ECM (Engine Control Module)
SP01490	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01491	Injector Codes Read	ECM (Engine Control Module)
SP01492	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01493	EGR Valve Test	ECM (Engine Control Module)
SP01494	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01495	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01496	Speed Limit Setting	ECM (Engine Control Module)
SP01497	Oil Change	ECM (Engine Control Module)
SP01498	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01499	Injector Codes Read	ECM (Engine Control Module)
SP01500	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01501	EGR Valve Test	ECM (Engine Control Module)
SP01502	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01503	Throttle Valve Test	ECM (Engine Control Module)
SP01504	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01505	Overboost Counter Reset	ECM (Engine Control Module)
SP01506	Speed Limit Setting	ECM (Engine Control Module)
SP01507	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01508	Oil Change	ECM (Engine Control Module)
SP01509	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP01510	Injector Codes Read	ECM (Engine Control Module)
SP01511	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01512	EGR Valve Test	ECM (Engine Control Module)
SP01513	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01514	Throttle Valve Test	ECM (Engine Control Module)
SP01515	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01516	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01517	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP01518	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01519	Speed Limit Setting	ECM (Engine Control Module)
SP01520	Oil Change	ECM (Engine Control Module)
SP01521	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01522	Injector Codes Read	ECM (Engine Control Module)
SP01523	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01524	EGR Valve Test	ECM (Engine Control Module)
SP01525	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01526	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01527	Speed Limit Setting	ECM (Engine Control Module)
SP01528	Oil Change	ECM (Engine Control Module)
SP01529	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01530	Injector Codes Read	ECM (Engine Control Module)
SP01531	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01532	EGR Valve Test	ECM (Engine Control Module)
SP01533	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01534	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01535	Speed Limit Setting	ECM (Engine Control Module)
SP01536	Overboost Counter Reset	ECM (Engine Control Module)
SP01537	Speed Limit Setting	ECM (Engine Control Module)
SP01538	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01539	Oil Change	ECM (Engine Control Module)
SP01540	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01541	Injector Codes Read	ECM (Engine Control Module)
SP01542	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01543	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01544	EGR Valve Test	ECM (Engine Control Module)
SP01545	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01546	Throttle Valve Test	ECM (Engine Control Module)
SP01547	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01548	Speed Limit Setting	ECM (Engine Control Module)

SP01549	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01550	Oil Change	ECM (Engine Control Module)
SP01551	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01552	Injector Codes Read	ECM (Engine Control Module)
SP01553	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01554	EGR Valve Test	ECM (Engine Control Module)
SP01555	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01556	Throttle Valve Test	ECM (Engine Control Module)
SP01557	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01558	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01559	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01560	Injector Codes Read	ECM (Engine Control Module)
SP01561	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01562	Oil Change	ECM (Engine Control Module)
SP01563	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01564	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01565	EGR Valve Test	ECM (Engine Control Module)
SP01566	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01567	Throttle Valve Test	ECM (Engine Control Module)
SP01568	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01569	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01570	Injector Codes Read	ECM (Engine Control Module)
SP01571	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01572	Oil Change	ECM (Engine Control Module)
SP01573	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01574	EGR Valve Test	ECM (Engine Control Module)
SP01575	Throttle Valve Test	ECM (Engine Control Module)
SP01576	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01577	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01578	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01579	Injector Codes Read	ECM (Engine Control Module)
SP01580	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01581	Oil Change	ECM (Engine Control Module)
SP01582	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01583	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01584	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01585	Speed Limit Setting	ECM (Engine Control Module)
SP01586	EGR Valve Test	ECM (Engine Control Module)
SP01587	EGR Low Pressure Valve Test	ECM (Engine Control Module)

SP01588	Throttle Valve Test	ECM (Engine Control Module)
SP01589	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01590	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01591	Injector Codes Read	ECM (Engine Control Module)
SP01592	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01593	Oil Change	ECM (Engine Control Module)
SP01594	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01595	EGR Valve Test	ECM (Engine Control Module)
SP01596	Throttle Valve Test	ECM (Engine Control Module)
SP01597	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01598	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01599	Injector Codes Read	ECM (Engine Control Module)
SP01600	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01601	Oil Change	ECM (Engine Control Module)
SP01602	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01603	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01604	EGR Valve Test	ECM (Engine Control Module)
SP01605	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01606	Throttle Valve Test	ECM (Engine Control Module)
SP01607	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01608	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01609	Injector Codes Read	ECM (Engine Control Module)
SP01610	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01611	Oil Change	ECM (Engine Control Module)
SP01612	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01613	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01614	EGR Valve Test	ECM (Engine Control Module)
SP01615	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01616	Throttle Valve Test	ECM (Engine Control Module)
SP01617	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01618	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01619	Injector Codes Read	ECM (Engine Control Module)
SP01620	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01621	Oil Change	ECM (Engine Control Module)
SP01622	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01623	EGR Valve Test	ECM (Engine Control Module)
SP01624	Throttle Valve Test	ECM (Engine Control Module)
SP01625	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01626	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP01627	Injector Codes Read	ECM (Engine Control Module)
SP01628	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01629	Oil Change	ECM (Engine Control Module)
SP01630	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01631	EGR Valve Test	ECM (Engine Control Module)
SP01632	Throttle Valve Test	ECM (Engine Control Module)
SP01633	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01634	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01635	Injector Codes Read	ECM (Engine Control Module)
SP01636	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01637	Oil Change	ECM (Engine Control Module)
SP01638	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01639	EGR Valve Test	ECM (Engine Control Module)
SP01640	Throttle Valve Test	ECM (Engine Control Module)
SP01641	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01642	Inlet Valve Calibration	ABS (Anti-Lock Braking System)
SP01643	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01644	Pilot Valve Calibration	ABS (Anti-Lock Braking System)
SP01645	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01646	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP01647	Inlet Valve Calibration	ABS (Anti-Lock Braking System)
SP01648	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01649	Pilot Valve Calibration	ABS (Anti-Lock Braking System)
SP01650	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01651	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP01652	Inlet Valve Calibration	ABS (Anti-Lock Braking System)
SP01653	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01654	Pilot Valve Calibration	ABS (Anti-Lock Braking System)
SP01655	Brake Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01656	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP01657	Reset Odometer	IC (Instrument Cluster)
SP01658	Reset Service Information	IC (Instrument Cluster)
SP01659	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01660	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01661	Reset Odometer	IC (Instrument Cluster)
SP01662	Reset Service Information	IC (Instrument Cluster)
SP01663	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01664	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01665	Reset Odometer	IC (Instrument Cluster)

SP01666	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP01667	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP01668	Write Front And Rear Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP01669	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP01670	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP01671	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP01672	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP01673	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01674	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01675	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01676	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01677	Oil Change	ECM (Engine Control Module)
SP01678	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01679	Injector Codes Read	ECM (Engine Control Module)
SP01680	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01681	Speed Limit Setting	ECM (Engine Control Module)
SP01682	Speed Limit Setting	ECM (Engine Control Module)
SP01683	EGR Valve Test	ECM (Engine Control Module)
SP01684	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01685	Throttle Valve Test	ECM (Engine Control Module)
SP01686	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01687	Oil Change	ECM (Engine Control Module)
SP01688	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01689	Injector Codes Read	ECM (Engine Control Module)
SP01690	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01691	EGR Valve Test	ECM (Engine Control Module)
SP01692	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01693	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01694	Speed Limit Setting	ECM (Engine Control Module)
SP01695	Motorized Throttle Learning	ECM (Engine Control Module)
SP01696	Speed Limit Setting	ECM (Engine Control Module)
SP01697	Vehicle Configuration Reset	ECM (Engine Control Module)
SP01698	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01699	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP01700	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01701	Speed Limit Setting	ECM (Engine Control Module)
SP01702	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01703	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01704	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP01705	Speed Limit Setting	ECM (Engine Control Module)
SP01706	Oil Change	ECM (Engine Control Module)
SP01707	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01708	Injector Codes Read	ECM (Engine Control Module)
SP01709	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01710	EGR Valve Test	ECM (Engine Control Module)
SP01711	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01712	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01713	Speed Limit Setting	ECM (Engine Control Module)
SP01714	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01715	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP01716	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01717	Speed Limit Setting	ECM (Engine Control Module)
SP01718	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01719	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01720	Injector Codes Read	ECM (Engine Control Module)
SP01721	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01722	Oil Change	ECM (Engine Control Module)
SP01723	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01724	Speed Limit Setting	ECM (Engine Control Module)
SP01725	EGR Valve Test	ECM (Engine Control Module)
SP01726	Throttle Valve Test	ECM (Engine Control Module)
SP01727	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01728	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01729	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01730	Injector Codes Read	ECM (Engine Control Module)
SP01731	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01732	Oil Change	ECM (Engine Control Module)
SP01733	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01734	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01735	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01736	Speed Limit Setting	ECM (Engine Control Module)
SP01737	EGR Valve Test	ECM (Engine Control Module)
SP01738	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01739	Throttle Valve Test	ECM (Engine Control Module)
SP01740	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01741	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01742	Injector Codes Read	ECM (Engine Control Module)
SP01743	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP01744	Oil Change	ECM (Engine Control Module)
SP01745	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01746	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01747	EGR Valve Test	ECM (Engine Control Module)
SP01748	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01749	Throttle Valve Test	ECM (Engine Control Module)
SP01750	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01751	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01752	Injector Codes Read	ECM (Engine Control Module)
SP01753	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01754	Oil Change	ECM (Engine Control Module)
SP01755	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01756	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01757	EGR Valve Test	ECM (Engine Control Module)
SP01758	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01759	Throttle Valve Test	ECM (Engine Control Module)
SP01760	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01761	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01762	Injector Codes Read	ECM (Engine Control Module)
SP01763	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01764	Oil Change	ECM (Engine Control Module)
SP01765	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01766	Speed Limit Setting	ECM (Engine Control Module)
SP01767	EGR Valve Test	ECM (Engine Control Module)
SP01768	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01769	Throttle Valve Test	ECM (Engine Control Module)
SP01770	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01771	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01772	Injector Codes Read	ECM (Engine Control Module)
SP01773	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01774	Oil Change	ECM (Engine Control Module)
SP01775	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01776	EGR Valve Test	ECM (Engine Control Module)
SP01777	Throttle Valve Test	ECM (Engine Control Module)
SP01778	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01779	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01780	Injector Codes Read	ECM (Engine Control Module)
SP01781	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP01782	Oil Change	ECM (Engine Control Module)
SP01783	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01784	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01785	EGR Valve Test	ECM (Engine Control Module)
SP01786	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01787	Throttle Valve Test	ECM (Engine Control Module)
SP01788	Oil Change	ECM (Engine Control Module)
SP01789	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01790	Injector Codes Read	ECM (Engine Control Module)
SP01791	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01792	EGR Valve Test	ECM (Engine Control Module)
SP01793	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01794	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01795	Speed Limit Setting	ECM (Engine Control Module)
SP01796	Oil Change	ECM (Engine Control Module)
SP01797	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01798	Injector Codes Read	ECM (Engine Control Module)
SP01799	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01800	EGR Valve Test	ECM (Engine Control Module)
SP01801	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01802	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01803	Speed Limit Setting	ECM (Engine Control Module)
SP01804	Oil Change	ECM (Engine Control Module)
SP01805	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01806	Injector Codes Read	ECM (Engine Control Module)
SP01807	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01808	EGR Valve Test	ECM (Engine Control Module)
SP01809	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01810	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01811	Speed Limit Setting	ECM (Engine Control Module)
SP01812	Oil Change	ECM (Engine Control Module)
SP01813	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01814	Injector Codes Read	ECM (Engine Control Module)
SP01815	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01816	EGR Valve Test	ECM (Engine Control Module)
SP01817	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01818	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01819	Speed Limit Setting	ECM (Engine Control Module)
SP01820	Oil Change	ECM (Engine Control Module)

SP01821	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01822	Injector Codes Read	ECM (Engine Control Module)
SP01823	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01824	EGR Valve Test	ECM (Engine Control Module)
SP01825	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01826	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01827	Speed Limit Setting	ECM (Engine Control Module)
SP01828	Oil Change	ECM (Engine Control Module)
SP01829	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01830	Injector Codes Read	ECM (Engine Control Module)
SP01831	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01832	EGR Valve Test	ECM (Engine Control Module)
SP01833	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01834	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01835	Speed Limit Setting	ECM (Engine Control Module)
SP01836	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01837	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01838	Injector Codes Read	ECM (Engine Control Module)
SP01839	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01840	Oil Change	ECM (Engine Control Module)
SP01841	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01842	EGR Valve Test	ECM (Engine Control Module)
SP01843	Throttle Valve Test	ECM (Engine Control Module)
SP01844	Oil Change	ECM (Engine Control Module)
SP01845	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01846	Injector Codes Read	ECM (Engine Control Module)
SP01847	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01848	EGR Valve Test	ECM (Engine Control Module)
SP01849	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01850	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01851	Speed Limit Setting	ECM (Engine Control Module)
SP01852	Oil Change	ECM (Engine Control Module)
SP01853	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01854	Injector Codes Read	ECM (Engine Control Module)
SP01855	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01856	EGR Valve Test	ECM (Engine Control Module)
SP01857	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01858	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP01859	Speed Limit Setting	ECM (Engine Control Module)
SP01860	Oil Change	ECM (Engine Control Module)
SP01861	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01862	Injector Codes Read	ECM (Engine Control Module)
SP01863	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01864	EGR Valve Test	ECM (Engine Control Module)
SP01865	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01866	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01867	Speed Limit Setting	ECM (Engine Control Module)
SP01868	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01869	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01870	Injector Codes Read	ECM (Engine Control Module)
SP01871	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01872	Oil Change	ECM (Engine Control Module)
SP01873	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01874	EGR Valve Test	ECM (Engine Control Module)
SP01875	Throttle Valve Test	ECM (Engine Control Module)
SP01876	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01877	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01878	Injector Codes Read	ECM (Engine Control Module)
SP01879	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01880	Oil Change	ECM (Engine Control Module)
SP01881	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01882	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP01883	Speed Limit Setting	ECM (Engine Control Module)
SP01884	EGR Valve Test	ECM (Engine Control Module)
SP01885	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP01886	Throttle Valve Test	ECM (Engine Control Module)
SP01887	Oil Change	ECM (Engine Control Module)
SP01888	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01889	Injector Codes Read	ECM (Engine Control Module)
SP01890	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01891	EGR Valve Test	ECM (Engine Control Module)
SP01892	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01893	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01894	Speed Limit Setting	ECM (Engine Control Module)
SP01895	Oil Change	ECM (Engine Control Module)
SP01896	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP01897	Injector Codes Read	ECM (Engine Control Module)
SP01898	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01899	EGR Valve Test	ECM (Engine Control Module)
SP01900	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01901	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01902	Speed Limit Setting	ECM (Engine Control Module)
SP01903	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01904	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01905	Injector Codes Read	ECM (Engine Control Module)
SP01906	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01907	Oil Change	ECM (Engine Control Module)
SP01908	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01909	EGR Valve Test	ECM (Engine Control Module)
SP01910	Throttle Valve Test	ECM (Engine Control Module)
SP01911	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP01912	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP01913	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP01914	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP01915	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01916	Reset Odometer	IPC (Instrument Panel Cluster)
SP01917	Reset Service Information	IPC (Instrument Panel Cluster)
SP01918	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01919	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01920	Reset Odometer	IPC (Instrument Panel Cluster)
SP01921	Reset Service Information	IPC (Instrument Panel Cluster)
SP01922	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01923	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01924	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP01925	Reset Odometer	IPC (Instrument Panel Cluster)
SP01926	Reset Service Information	IPC (Instrument Panel Cluster)
SP01927	Write Front And Rear Nominal Tire Pressure Values	TPMS (Tire Pressure Monitoring System)
SP01928	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP01929	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP01930	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP01931	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP01932	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01933	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01934	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)

SP01935	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP01936	Oil Change	ECM (Engine Control Module)
SP01937	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01938	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01939	Injector Codes Read	ECM (Engine Control Module)
SP01940	Speed Limit Setting	ECM (Engine Control Module)
SP01941	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01942	EGR Valve Test	ECM (Engine Control Module)
SP01943	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01944	Throttle Valve Test	ECM (Engine Control Module)
SP01945	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01946	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01947	Injector Codes Read	ECM (Engine Control Module)
SP01948	Speed Limit Setting	ECM (Engine Control Module)
SP01949	EGR Valve Test	ECM (Engine Control Module)
SP01950	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01951	Throttle Valve Test	ECM (Engine Control Module)
SP01952	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01953	Oil Change	ECM (Engine Control Module)
SP01954	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01955	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01956	Injector Codes Read	ECM (Engine Control Module)
SP01957	Speed Limit Setting	ECM (Engine Control Module)
SP01958	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01959	EGR Valve Test	ECM (Engine Control Module)
SP01960	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01961	Throttle Valve Test	ECM (Engine Control Module)
SP01962	Oil Change	ECM (Engine Control Module)
SP01963	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01964	Injector Codes Read	ECM (Engine Control Module)
SP01965	Replacement Of EGR Valve	ECM (Engine Control Module)
SP01966	Speed Limit Setting	ECM (Engine Control Module)
SP01967	EGR Valve Test	ECM (Engine Control Module)
SP01968	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01969	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01970	Oil Change	ECM (Engine Control Module)
SP01971	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01972	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01973	Injector Codes Read	ECM (Engine Control Module)

SP01974	Speed Limit Setting	ECM (Engine Control Module)
SP01975	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01976	EGR Valve Test	ECM (Engine Control Module)
SP01977	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01978	Throttle Valve Test	ECM (Engine Control Module)
SP01979	Oil Change	ECM (Engine Control Module)
SP01980	Phonic Wheel Replacement	ECM (Engine Control Module)
SP01981	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01982	Injector Codes Read	ECM (Engine Control Module)
SP01983	Speed Limit Setting	ECM (Engine Control Module)
SP01984	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01985	EGR Valve Test	ECM (Engine Control Module)
SP01986	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01987	Throttle Valve Test	ECM (Engine Control Module)
SP01988	Oil Change	ECM (Engine Control Module)
SP01989	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP01990	Injector Codes Read	ECM (Engine Control Module)
SP01991	Speed Limit Setting	ECM (Engine Control Module)
SP01992	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP01993	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP01994	EGR Valve Test	ECM (Engine Control Module)
SP01995	Motorised Throttle Replacement	ECM (Engine Control Module)
SP01996	Speed Limit Setting	ECM (Engine Control Module)
SP01997	Phonic Wheel Reset	ECM (Engine Control Module)
SP01998	Injector/S Replacement	ECM (Engine Control Module)
SP01999	Vehicle Configuration Reset	ECM (Engine Control Module)
SP02000	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02001	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02002	Injector Codes Read	ECM (Engine Control Module)
SP02003	EGR Valve Test	ECM (Engine Control Module)
SP02004	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02005	Throttle Valve Test	ECM (Engine Control Module)
SP02006	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02007	Speed Limit Setting	ECM (Engine Control Module)
SP02008	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02009	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02010	Injector Codes Read	ECM (Engine Control Module)
SP02011	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02012	Oil Change	ECM (Engine Control Module)

SP02013	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02014	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02015	Speed Limit Setting	ECM (Engine Control Module)
SP02016	EGR Valve Test	ECM (Engine Control Module)
SP02017	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02018	Throttle Valve Test	ECM (Engine Control Module)
SP02019	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02020	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02021	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02022	Oil Change	ECM (Engine Control Module)
SP02023	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02024	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02025	Speed Limit Setting	ECM (Engine Control Module)
SP02026	EGR Valve Test	ECM (Engine Control Module)
SP02027	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02028	Throttle Valve Test	ECM (Engine Control Module)
SP02029	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02030	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02031	Injector Codes Read	ECM (Engine Control Module)
SP02032	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02033	Oil Change	ECM (Engine Control Module)
SP02034	Replacement Of EGR Valve	ECM (Engine Control Module)
SP02035	EGR Valve Test	ECM (Engine Control Module)
SP02036	Throttle Valve Test	ECM (Engine Control Module)
SP02037	Speed Limit Setting	ECM (Engine Control Module)
SP02038	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02039	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02040	Injector Codes Read	ECM (Engine Control Module)
SP02041	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02042	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02043	Speed Limit Setting	ECM (Engine Control Module)
SP02044	Throttle Valve Test	ECM (Engine Control Module)
SP02045	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02046	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02047	Injector Codes Read	ECM (Engine Control Module)
SP02048	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02049	Oil Change	ECM (Engine Control Module)
SP02050	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02051	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)

SP02052	Speed Limit Setting	ECM (Engine Control Module)
SP02053	EGR Valve Test	ECM (Engine Control Module)
SP02054	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02055	Throttle Valve Test	ECM (Engine Control Module)
SP02056	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02057	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02058	Injector Codes Read	ECM (Engine Control Module)
SP02059	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02060	Oil Change	ECM (Engine Control Module)
SP02061	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02062	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02063	Speed Limit Setting	ECM (Engine Control Module)
SP02064	EGR Valve Test	ECM (Engine Control Module)
SP02065	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02066	Throttle Valve Test	ECM (Engine Control Module)
SP02067	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02068	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02069	Injector Codes Read	ECM (Engine Control Module)
SP02070	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02071	Oil Change	ECM (Engine Control Module)
SP02072	Replacement Of EGR Valve	ECM (Engine Control Module)
SP02073	EGR Valve Test	ECM (Engine Control Module)
SP02074	Throttle Valve Test	ECM (Engine Control Module)
SP02075	Speed Limit Setting	ECM (Engine Control Module)
SP02076	Phonic Wheel Reset	ECM (Engine Control Module)
SP02077	Vehicle Configuration Reset	ECM (Engine Control Module)
SP02078	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02079	Speed Limit Setting	ECM (Engine Control Module)
SP02080	Injector/S Replacement	ECM (Engine Control Module)
SP02081	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02082	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02083	Injector Codes Read	ECM (Engine Control Module)
SP02084	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02085	Oil Change	ECM (Engine Control Module)
SP02086	Replacement Of EGR Valve	ECM (Engine Control Module)
SP02087	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02088	Speed Limit Setting	ECM (Engine Control Module)
SP02089	EGR Valve Test	ECM (Engine Control Module)
SP02090	EGR Low Pressure Valve Test	ECM (Engine Control Module)

SP02091	Throttle Valve Test	ECM (Engine Control Module)
SP02092	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02093	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02094	Injector Codes Read	ECM (Engine Control Module)
SP02095	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02096	Oil Change	ECM (Engine Control Module)
SP02097	Replacement Of EGR Valve	ECM (Engine Control Module)
SP02098	EGR Valve Test	ECM (Engine Control Module)
SP02099	Throttle Valve Test	ECM (Engine Control Module)
SP02100	Speed Limit Setting	ECM (Engine Control Module)
SP02101	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP02102	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP02103	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02104	Static Test	ABS (Anti-Lock Braking System)
SP02105	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP02106	Static Test	ABS (Anti-Lock Braking System)
SP02107	Static Test	ABS (Anti-Lock Braking System)
SP02108	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP02109	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02110	Static Test	ABS (Anti-Lock Braking System)
SP02111	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP02112	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP02113	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP02114	Program Left Rear Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02115	Program Right Rear Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02116	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP02117	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02118	Write Front And Rear Axle Nominal Tire Pressure	TPMS (Tire Pressure Monitoring System)
SP02119	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02120	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02121	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02122	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02123	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP02124	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP02125	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP02126	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02127	Write Front And Rear Axle Nominal Tire Pressure	TPMS (Tire Pressure Monitoring System)
SP02128	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02129	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)

SP02130	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02131	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02132	Clear TPM Warnings	TPMS (Tire Pressure Monitoring System)
SP02133	Clear TPM Sensor Rolls Test Results	TPMS (Tire Pressure Monitoring System)
SP02134	ECU SERIAL NUMBER Management	TPMS (Tire Pressure Monitoring System)
SP02135	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02136	Write Front And Rear Axle Nominal Tire Pressure	TPMS (Tire Pressure Monitoring System)
SP02137	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02138	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02139	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02140	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02141	Reset Odometer	IC (Instrument Cluster)
SP02142	Reset Service Information	IC (Instrument Cluster)
SP02143	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02144	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02145	Reset Odometer	IC (Instrument Cluster)
SP02146	Reset Service Information	IC (Instrument Cluster)
SP02147	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02148	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02149	Oil Change	ECM (Engine Control Module)
SP02150	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02151	Injector Codes Read	ECM (Engine Control Module)
SP02152	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02153	EGR Valve Test	ECM (Engine Control Module)
SP02154	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02155	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02156	Throttle Valve Test	ECM (Engine Control Module)
SP02157	Speed Limit Setting	ECM (Engine Control Module)
SP02158	Reset Learned Adaptives	ECM (Engine Control Module)
SP02159	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02160	Reset Learned Adaptives	ECM (Engine Control Module)
SP02161	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02162	Oil Change	ECM (Engine Control Module)
SP02163	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02164	Injector Codes Read	ECM (Engine Control Module)
SP02165	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02166	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02167	EGR Valve Test	ECM (Engine Control Module)
SP02168	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)

SP02169	Throttle Valve Test	ECM (Engine Control Module)
SP02170	Speed Limit Setting	ECM (Engine Control Module)
SP02171	Oil Change	ECM (Engine Control Module)
SP02172	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02173	Injector Codes Read	ECM (Engine Control Module)
SP02174	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02175	EGR Valve Test	ECM (Engine Control Module)
SP02176	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02177	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02178	Throttle Valve Test	ECM (Engine Control Module)
SP02179	Speed Limit Setting	ECM (Engine Control Module)
SP02180	Oil Change	ECM (Engine Control Module)
SP02181	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02182	Injector Codes Read	ECM (Engine Control Module)
SP02183	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02184	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02185	EGR Valve Test	ECM (Engine Control Module)
SP02186	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02187	Throttle Valve Test	ECM (Engine Control Module)
SP02188	Speed Limit Setting	ECM (Engine Control Module)
SP02189	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02190	Oil Change	ECM (Engine Control Module)
SP02191	Injector Codes Read	ECM (Engine Control Module)
SP02192	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02193	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02194	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02195	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02196	Phonic Wheel Reset	ECM (Engine Control Module)
SP02197	Vehicle Configuration Reset	ECM (Engine Control Module)
SP02198	Oil Change	ECM (Engine Control Module)
SP02199	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02200	Injector Codes Read	ECM (Engine Control Module)
SP02201	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02202	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02203	EGR Valve Test	ECM (Engine Control Module)
SP02204	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02205	Throttle Valve Test	ECM (Engine Control Module)
SP02206	Speed Limit Setting	ECM (Engine Control Module)
SP02207	Oil Change	ECM (Engine Control Module)

SP02208	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02209	Injector Codes Read	ECM (Engine Control Module)
SP02210	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02211	EGR Valve Test	ECM (Engine Control Module)
SP02212	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02213	Throttle Valve Test	ECM (Engine Control Module)
SP02214	Speed Limit Setting	ECM (Engine Control Module)
SP02215	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02216	Oil Change	ECM (Engine Control Module)
SP02217	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02218	Injector Codes Read	ECM (Engine Control Module)
SP02219	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02220	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02221	EGR Valve Test	ECM (Engine Control Module)
SP02222	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02223	Throttle Valve Test	ECM (Engine Control Module)
SP02224	Speed Limit Setting	ECM (Engine Control Module)
SP02225	Injector Codes Read	ECM (Engine Control Module)
SP02226	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02227	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02228	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02229	Oil Change	ECM (Engine Control Module)
SP02230	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02231	Injector Codes Read	ECM (Engine Control Module)
SP02232	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02233	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02234	EGR Valve Test	ECM (Engine Control Module)
SP02235	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02236	Throttle Valve Test	ECM (Engine Control Module)
SP02237	Oil Change	ECM (Engine Control Module)
SP02238	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02239	Injector Codes Read	ECM (Engine Control Module)
SP02240	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02241	EGR Valve Test	ECM (Engine Control Module)
SP02242	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02243	Throttle Valve Test	ECM (Engine Control Module)
SP02244	Speed Limit Setting	ECM (Engine Control Module)
SP02245	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02246	Oil Change	ECM (Engine Control Module)

SP02247	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02248	Injector Codes Read	ECM (Engine Control Module)
SP02249	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02250	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02251	EGR Valve Test	ECM (Engine Control Module)
SP02252	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02253	Throttle Valve Test	ECM (Engine Control Module)
SP02254	Speed Limit Setting	ECM (Engine Control Module)
SP02255	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02256	Oil Change	ECM (Engine Control Module)
SP02257	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02258	Injector Codes Read	ECM (Engine Control Module)
SP02259	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02260	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02261	EGR Valve Test	ECM (Engine Control Module)
SP02262	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02263	Throttle Valve Test	ECM (Engine Control Module)
SP02264	Oil Change	ECM (Engine Control Module)
SP02265	Injector Codes Read	ECM (Engine Control Module)
SP02266	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02267	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02268	Speed Limit Setting	ECM (Engine Control Module)
SP02269	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02270	Injector Codes Read	ECM (Engine Control Module)
SP02271	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02272	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02273	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02274	Injector Codes Read	ECM (Engine Control Module)
SP02275	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02276	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02277	Speed Limit Setting	ECM (Engine Control Module)
SP02278	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02279	Oil Change	ECM (Engine Control Module)
SP02280	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02281	Injector Codes Read	ECM (Engine Control Module)
SP02282	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02283	EGR Valve Test	ECM (Engine Control Module)
SP02284	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02285	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)

SP02286	Throttle Valve Test	ECM (Engine Control Module)
SP02287	Speed Limit Setting	ECM (Engine Control Module)
SP02288	Oil Change	ECM (Engine Control Module)
SP02289	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02290	Injector Codes Read	ECM (Engine Control Module)
SP02291	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02292	EGR Valve Test	ECM (Engine Control Module)
SP02293	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02294	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02295	Throttle Valve Test	ECM (Engine Control Module)
SP02296	Speed Limit Setting	ECM (Engine Control Module)
SP02297	Oil Change	ECM (Engine Control Module)
SP02298	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02299	Injector Codes Read	ECM (Engine Control Module)
SP02300	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02301	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02302	EGR Valve Test	ECM (Engine Control Module)
SP02303	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02304	Throttle Valve Test	ECM (Engine Control Module)
SP02305	Oil Change	ECM (Engine Control Module)
SP02306	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02307	Injector Codes Read	ECM (Engine Control Module)
SP02308	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02309	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02310	EGR Valve Test	ECM (Engine Control Module)
SP02311	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02312	Throttle Valve Test	ECM (Engine Control Module)
SP02313	Injector Codes Read	ECM (Engine Control Module)
SP02314	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02315	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02316	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02317	Oil Change	ECM (Engine Control Module)
SP02318	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02319	Injector Codes Read	ECM (Engine Control Module)
SP02320	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02321	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02322	EGR Valve Test	ECM (Engine Control Module)
SP02323	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02324	Throttle Valve Test	ECM (Engine Control Module)

SP02325	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02326	Phonic Wheel Reset	ECM (Engine Control Module)
SP02327	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02328	Oil Change	ECM (Engine Control Module)
SP02329	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02330	Injector Codes Read	ECM (Engine Control Module)
SP02331	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02332	EGR Valve Test	ECM (Engine Control Module)
SP02333	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02334	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02335	Throttle Valve Test	ECM (Engine Control Module)
SP02336	Speed Limit Setting	ECM (Engine Control Module)
SP02337	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02338	Phonic Wheel Reset	ECM (Engine Control Module)
SP02339	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02340	Motorised Throttle Replacement	ECM (Engine Control Module)
SP02341	Phonic Wheel Reset	ECM (Engine Control Module)
SP02342	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02343	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02344	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02345	Injector Codes Read	ECM (Engine Control Module)
SP02346	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02347	Oil Change	ECM (Engine Control Module)
SP02348	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02349	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02350	Speed Limit Setting	ECM (Engine Control Module)
SP02351	EGR Valve Test	ECM (Engine Control Module)
SP02352	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02353	Throttle Valve Test	ECM (Engine Control Module)
SP02354	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02355	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02356	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02357	Injector Codes Read	ECM (Engine Control Module)
SP02358	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02359	Oil Change	ECM (Engine Control Module)
SP02360	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02361	Replacement Of EGR Valve	ECM (Engine Control Module)
SP02362	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02363	Speed Limit Setting	ECM (Engine Control Module)

SP02364	EGR Valve Test	ECM (Engine Control Module)
SP02365	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02366	Throttle Valve Test	ECM (Engine Control Module)
SP02367	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02368	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02369	Injector Codes Read	ECM (Engine Control Module)
SP02370	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02371	Oil Change	ECM (Engine Control Module)
SP02372	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02373	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02374	Speed Limit Setting	ECM (Engine Control Module)
SP02375	EGR Valve Test	ECM (Engine Control Module)
SP02376	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02377	Throttle Valve Test	ECM (Engine Control Module)
SP02378	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02379	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02380	Injector Codes Read	ECM (Engine Control Module)
SP02381	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02382	Oil Change	ECM (Engine Control Module)
SP02383	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02384	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02385	Speed Limit Setting	ECM (Engine Control Module)
SP02386	EGR Valve Test	ECM (Engine Control Module)
SP02387	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02388	Throttle Valve Test	ECM (Engine Control Module)
SP02389	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02390	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02391	Injector Codes Read	ECM (Engine Control Module)
SP02392	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02393	Oil Change	ECM (Engine Control Module)
SP02394	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02395	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02396	Speed Limit Setting	ECM (Engine Control Module)
SP02397	EGR Valve Test	ECM (Engine Control Module)
SP02398	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02399	Throttle Valve Test	ECM (Engine Control Module)
SP02400	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP02401	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02402	Injector Codes Read	ECM (Engine Control Module)

SP02403	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP02404	Oil Change	ECM (Engine Control Module)
SP02405	Phonic Wheel Replacement	ECM (Engine Control Module)
SP02406	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP02407	Speed Limit Setting	ECM (Engine Control Module)
SP02408	EGR Valve Test	ECM (Engine Control Module)
SP02409	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP02410	Throttle Valve Test	ECM (Engine Control Module)
SP02411	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP02412	Reset Statistical Data	TCM (Transmission Control Module)
SP02413	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP02414	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP02415	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP02416	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02417	Static Test	ABS (Anti-Lock Braking System)
SP02418	Static Test	ABS (Anti-Lock Braking System)
SP02419	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP02420	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP02421	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02422	Static Test	ABS (Anti-Lock Braking System)
SP02423	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP02424	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP02425	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02426	Static Test	ABS (Anti-Lock Braking System)
SP02427	Steering Angle Sensor Calibration	ABS (Anti-Lock Braking System)
SP02428	TPMS Calibration	ABS (Anti-Lock Braking System)
SP02429	Reset Odometer	IC (Instrument Cluster)
SP02430	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02431	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02432	Reset Service Information	IC (Instrument Cluster)
SP02433	Reset Odometer	IC (Instrument Cluster)
SP02434	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02435	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02436	Reset Service Information	IC (Instrument Cluster)
SP02437	Reset Odometer	IC (Instrument Cluster)
SP02438	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02439	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02440	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP02441	DPF Reset Option	PCM (Powertrain Control Module)

SP02442	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP02443	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP02444	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP02445	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP02446	Throttle Valve Learn	PCM (Powertrain Control Module)
SP02447	Check PCM Odometer	PCM (Powertrain Control Module)
SP02448	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02449	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02450	Reset Memory	PCM (Powertrain Control Module)
SP02451	EGR System Test	PCM (Powertrain Control Module)
SP02452	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02453	Set Engine RPM	PCM (Powertrain Control Module)
SP02454	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP02455	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP02456	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP02457	Auto Door Lock	BCM (Body Control Module)
SP02458	Program Tire Size	BCM (Body Control Module)
SP02459	Configure License Plate Size	EPB (Electrical Parking Brake)
SP02460	System Wiring Test	EPB (Electrical Parking Brake)
SP02461	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02462	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02463	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02464	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02465	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02466	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02467	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP02468	DPF Reset Option	PCM (Powertrain Control Module)
SP02469	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP02470	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP02471	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP02472	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP02473	Throttle Valve Learn	PCM (Powertrain Control Module)
SP02474	Check PCM Odometer	PCM (Powertrain Control Module)
SP02475	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02476	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02477	Reset Memory	PCM (Powertrain Control Module)
SP02478	EGR System Test	PCM (Powertrain Control Module)
SP02479	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02480	Set Engine RPM	PCM (Powertrain Control Module)

SP02481	Check PCM Odometer	PCM (Powertrain Control Module)
SP02482	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02483	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02484	Reset Memory	PCM (Powertrain Control Module)
SP02485	EGR System Test	PCM (Powertrain Control Module)
SP02486	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02487	Set Engine RPM	PCM (Powertrain Control Module)
SP02488	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP02489	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP02490	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP02491	Auto Door Lock	BCM (Body Control Module)
SP02492	Program Tire Size	BCM (Body Control Module)
SP02493	Auto Door Lock	BCM (Body Control Module)
SP02494	Program Tire Size	BCM (Body Control Module)
SP02495	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02496	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02497	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02498	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02499	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02500	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02501	Configure License Plate Size	EPB (Electrical Parking Brake)
SP02502	System Wiring Test	EPB (Electrical Parking Brake)
SP02503	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP02504	DPF Reset Option	PCM (Powertrain Control Module)
SP02505	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP02506	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP02507	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP02508	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP02509	Throttle Valve Learn	PCM (Powertrain Control Module)
SP02510	Check PCM Odometer	PCM (Powertrain Control Module)
SP02511	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02512	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02513	Reset Memory	PCM (Powertrain Control Module)
SP02514	EGR System Test	PCM (Powertrain Control Module)
SP02515	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02516	Set Engine RPM	PCM (Powertrain Control Module)
SP02517	Check PCM Odometer	PCM (Powertrain Control Module)
SP02518	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02519	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)

SP02520	Reset Memory	PCM (Powertrain Control Module)
SP02521	EGR System Test	PCM (Powertrain Control Module)
SP02522	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02523	Set Engine RPM	PCM (Powertrain Control Module)
SP02524	Check PCM Odometer	PCM (Powertrain Control Module)
SP02525	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02526	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02527	Reset Memory	PCM (Powertrain Control Module)
SP02528	EGR System Test	PCM (Powertrain Control Module)
SP02529	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02530	Set Engine RPM	PCM (Powertrain Control Module)
SP02531	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP02532	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP02533	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP02534	Auto Door Lock	BCM (Body Control Module)
SP02535	Program Tire Size	BCM (Body Control Module)
SP02536	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02537	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02538	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02539	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02540	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02541	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02542	Configure License Plate Size	EPB (Electrical Parking Brake)
SP02543	System Wiring Test	EPB (Electrical Parking Brake)
SP02544	Check PCM Odometer	PCM (Powertrain Control Module)
SP02545	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02546	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02547	Reset Memory	PCM (Powertrain Control Module)
SP02548	EGR System Test	PCM (Powertrain Control Module)
SP02549	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02550	Set Engine RPM	PCM (Powertrain Control Module)
SP02551	Check PCM Odometer	PCM (Powertrain Control Module)
SP02552	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02553	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02554	Reset Memory	PCM (Powertrain Control Module)
SP02555	EGR System Test	PCM (Powertrain Control Module)
SP02556	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02557	Set Engine RPM	PCM (Powertrain Control Module)
SP02558	Check PCM Odometer	PCM (Powertrain Control Module)

SP02559	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02560	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02561	Reset Memory	PCM (Powertrain Control Module)
SP02562	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02563	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02564	EGR System Test	PCM (Powertrain Control Module)
SP02565	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02566	Set Engine RPM	PCM (Powertrain Control Module)
SP02567	Check PCM Odometer	PCM (Powertrain Control Module)
SP02568	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02569	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02570	Reset Memory	PCM (Powertrain Control Module)
SP02571	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02572	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02573	EGR System Test	PCM (Powertrain Control Module)
SP02574	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02575	Set Engine RPM	PCM (Powertrain Control Module)
SP02576	Check PCM Odometer	PCM (Powertrain Control Module)
SP02577	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02578	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02579	Reset Memory	PCM (Powertrain Control Module)
SP02580	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02581	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02582	EGR System Test	PCM (Powertrain Control Module)
SP02583	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02584	Set Engine RPM	PCM (Powertrain Control Module)
SP02585	Check PCM Odometer	PCM (Powertrain Control Module)
SP02586	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02587	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02588	Reset Memory	PCM (Powertrain Control Module)
SP02589	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02590	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02591	EGR System Test	PCM (Powertrain Control Module)
SP02592	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02593	Set Engine RPM	PCM (Powertrain Control Module)
SP02594	Check PCM Odometer	PCM (Powertrain Control Module)
SP02595	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02596	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02597	Reset Memory	PCM (Powertrain Control Module)

SP02598	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02599	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02600	EGR System Test	PCM (Powertrain Control Module)
SP02601	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02602	Set Engine RPM	PCM (Powertrain Control Module)
SP02603	Check PCM Odometer	PCM (Powertrain Control Module)
SP02604	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02605	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02606	Reset Memory	PCM (Powertrain Control Module)
SP02607	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02608	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02609	EGR System Test	PCM (Powertrain Control Module)
SP02610	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02611	Set Engine RPM	PCM (Powertrain Control Module)
SP02612	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP02613	DPF Reset Option	PCM (Powertrain Control Module)
SP02614	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP02615	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP02616	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP02617	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP02618	Throttle Valve Learn	PCM (Powertrain Control Module)
SP02619	Check PCM Odometer	PCM (Powertrain Control Module)
SP02620	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02621	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02622	Reset Memory	PCM (Powertrain Control Module)
SP02623	EGR System Test	PCM (Powertrain Control Module)
SP02624	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02625	Set Engine RPM	PCM (Powertrain Control Module)
SP02626	Check PCM Odometer	PCM (Powertrain Control Module)
SP02627	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02628	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02629	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02630	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02631	EGR System Test	PCM (Powertrain Control Module)
SP02632	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02633	Set Engine RPM	PCM (Powertrain Control Module)
SP02634	Check PCM Odometer	PCM (Powertrain Control Module)
SP02635	Quicklearn (62TE)	PCM (Powertrain Control Module)

SP02636	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02637	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02638	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02639	EGR System Test	PCM (Powertrain Control Module)
SP02640	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02641	Set Engine RPM	PCM (Powertrain Control Module)
SP02642	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP02643	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP02644	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP02645	Auto Door Lock	BCM (Body Control Module)
SP02646	Program Tire Size	BCM (Body Control Module)
SP02647	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02648	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02649	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02650	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02651	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02652	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02653	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02654	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02655	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02656	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02657	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02658	Activate TPM High Gain Mode	TPMS (Tire Pressure Monitoring System)
SP02659	TPM Sensor Position Parameter Update	TPMS (Tire Pressure Monitoring System)
SP02660	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02661	Configure License Plate Size	EPB (Electrical Parking Brake)
SP02662	System Wiring Test	EPB (Electrical Parking Brake)
SP02663	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP02664	DPF Reset Option	PCM (Powertrain Control Module)
SP02665	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP02666	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP02667	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP02668	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP02669	Throttle Valve Learn	PCM (Powertrain Control Module)
SP02670	Check PCM Odometer	PCM (Powertrain Control Module)
SP02671	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02672	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)

SP02673	Reset Memory	PCM (Powertrain Control Module)
SP02674	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02675	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02676	Reset Memory	PCM (Powertrain Control Module)
SP02677	EGR System Test	PCM (Powertrain Control Module)
SP02678	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02679	Set Engine RPM	PCM (Powertrain Control Module)
SP02680	Check PCM Odometer	PCM (Powertrain Control Module)
SP02681	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02682	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02683	Reset Memory	PCM (Powertrain Control Module)
SP02684	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02685	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02686	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02687	EGR System Test	PCM (Powertrain Control Module)
SP02688	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02689	Set Engine RPM	PCM (Powertrain Control Module)
SP02690	Check PCM Odometer	PCM (Powertrain Control Module)
SP02691	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02692	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02693	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02694	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02695	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02696	EGR System Test	PCM (Powertrain Control Module)
SP02697	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02698	Set Engine RPM	PCM (Powertrain Control Module)
SP02699	Check PCM Odometer	PCM (Powertrain Control Module)
SP02700	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02701	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02702	Reset Memory	PCM (Powertrain Control Module)
SP02703	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02704	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02705	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02706	EGR System Test	PCM (Powertrain Control Module)
SP02707	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02708	Set Engine RPM	PCM (Powertrain Control Module)
SP02709	Check PCM Odometer	PCM (Powertrain Control Module)
SP02710	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02711	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)

SP02712	Reset Memory	PCM (Powertrain Control Module)
SP02713	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02714	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02715	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02716	EGR System Test	PCM (Powertrain Control Module)
SP02717	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02718	Set Engine RPM	PCM (Powertrain Control Module)
SP02719	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP02720	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP02721	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP02722	Auto Door Lock	BCM (Body Control Module)
SP02723	Program Tire Size	BCM (Body Control Module)
SP02724	Configure License Plate Size	EPB (Electrical Parking Brake)
SP02725	System Wiring Test	EPB (Electrical Parking Brake)
SP02726	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02727	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02728	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02729	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP02730	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02731	Activate TPM High Gain Mode	TPMS (Tire Pressure Monitoring System)
SP02732	TPM Sensor Position Parameter Update	TPMS (Tire Pressure Monitoring System)
SP02733	Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP02734	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP02735	DPF Reset Option	PCM (Powertrain Control Module)
SP02736	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP02737	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP02738	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP02739	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP02740	Throttle Valve Learn	PCM (Powertrain Control Module)
SP02741	Check PCM Odometer	PCM (Powertrain Control Module)
SP02742	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP02743	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP02744	Reset Memory	PCM (Powertrain Control Module)
SP02745	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP02746	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP02747	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02748	EGR System Test	PCM (Powertrain Control Module)
SP02749	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP02750	Set Engine RPM	PCM (Powertrain Control Module)

SP02751	ABS Bleed Brakes	ABS (Anti-Lock Braking System)
SP02752	Brake Pedal Calibration	ABS (Anti-Lock Braking System)
SP02753	Initialize ORC	SRS (Supplemental Inflatable Restraint System, ORC)
SP02754	Auto Door Lock	BCM (Body Control Module)
SP02755	Program Tire Size	BCM (Body Control Module)
SP02756	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP02757	Configure License Plate Size	EPB (Electrical Parking Brake)
SP02758	System Wiring Test	EPB (Electrical Parking Brake)
SP02759	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02760	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02761	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02762	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02763	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02764	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02765	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02766	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02767	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02768	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02769	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02770	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02771	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02772	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02773	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02774	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02775	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02776	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02777	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02778	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02779	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02780	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02781	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02782	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02783	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02784	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02785	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02786	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02787	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02788	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02789	Reset Vehicle Configuration	ECM (Engine Control Module)

SP02790	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02791	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02792	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02793	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02794	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02795	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02796	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02797	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02798	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02799	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02800	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02801	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02802	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02803	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02804	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02805	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02806	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02807	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02808	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02809	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02810	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02811	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02812	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02813	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02814	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02815	Reset Functions Self Learned	TCM (Transmission Control Module)
SP02816	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP02817	Quick Learn	TCM (Transmission Control Module)
SP02818	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP02819	BSM Proxi Alignment	ABS (Anti-Lock Braking System)
SP02820	Reset TPMS Calibration	ABS (Anti-Lock Braking System)
SP02821	Lock Doors Command	BCM (Body Control Module)
SP02822	Rear Windows Washer	BCM (Body Control Module)
SP02823	Unlock Doors Command	BCM (Body Control Module)
SP02824	Oil Service Reset	IC (Instrument Cluster)
SP02825	Oil Service Reset	IC (Instrument Cluster)
SP02826	Reset Functions Self Learned	DMM (Doors Management Module)
SP02827	Learn Clutches Contact Point	DMM (Doors Management Module)
SP02828	Quick Learn	DMM (Doors Management Module)

SP02829	ECU Replacement With Value Transfer	DMM (Doors Management Module)
SP02830	Windows Lifter Test	DMM (Doors Management Module)
SP02831	Windows Lifter Test	DMM (Doors Management Module)
SP02832	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02833	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02834	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02835	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02836	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02837	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02838	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02839	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02840	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02841	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02842	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02843	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02844	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02845	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02846	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02847	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02848	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02849	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02850	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02851	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02852	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02853	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02854	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02855	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02856	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02857	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02858	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02859	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02860	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02861	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02862	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02863	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02864	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02865	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02866	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02867	Self Learning Throttle Body Activation	ECM (Engine Control Module)

SP02868	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02869	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02870	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02871	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02872	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02873	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02874	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02875	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02876	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02877	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02878	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02879	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02880	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02881	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02882	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02883	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02884	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02885	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02886	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02887	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02888	Reset Functions Self Learned	TCM (Transmission Control Module)
SP02889	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP02890	Quick Learn	TCM (Transmission Control Module)
SP02891	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP02892	BSM Proxi Alignment	ABS (Anti-Lock Braking System)
SP02893	Lock Doors Command	BCM (Body Control Module)
SP02894	Rear Windows Washer	BCM (Body Control Module)
SP02895	Unlock Doors Command	BCM (Body Control Module)
SP02896	Oil Service Reset	IC (Instrument Cluster)
SP02897	Oil Service Reset	IC (Instrument Cluster)
SP02898	Reset Functions Self Learned	DMM (Doors Management Module)
SP02899	Learn Clutches Contact Point	DMM (Doors Management Module)
SP02900	Quick Learn	DMM (Doors Management Module)
SP02901	ECU Replacement With Value Transfer	DMM (Doors Management Module)
SP02902	Windows Lifter Test	DMM (Doors Management Module)
SP02903	Windows Lifter Test	DMM (Doors Management Module)
SP02904	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02905	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02906	Purge Fuel Circuit Reset	ECM (Engine Control Module)

SP02907	Clutch Pedal Learning	ECM (Engine Control Module)
SP02908	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02909	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02910	Reset Of Cumulative Counter Of Intelligent Alternator Module	ECM (Engine Control Module)
SP02911	Purge Fuel Circuit Reset	ECM (Engine Control Module)
SP02912	Reset Vehicle Configuration	ECM (Engine Control Module)
SP02913	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP02914	Reset Of Cumulative Counter Of Intelligent Alternator Module	ECM (Engine Control Module)
SP02915	Purge Fuel Circuit Reset	ECM (Engine Control Module)
SP02916	Clutch Pedal Learning	ECM (Engine Control Module)
SP02917	Reset Functions Self Learned	TCM (Transmission Control Module)
SP02918	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP02919	Quick Learn	TCM (Transmission Control Module)
SP02920	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP02921	Reset TPMS Calibration	ABS (Anti Lock Brakes)
SP02922	Sensors Calibration	ABS (Anti Lock Brakes)
SP02923	Lock Doors Command	BCM (Body Control Module)
SP02924	Unlock Doors Command	BCM (Body Control Module)
SP02925	Rear Window Wiper Command	BCM (Body Control Module)
SP02926	Reset Functions Self Learned	DMM (Door Management Module)
SP02927	Learn Clutches Contact Point	DMM (Door Management Module)
SP02928	Quick Learn	DMM (Door Management Module)
SP02929	ECU Replacement With Value Transfer	DMM (Door Management Module)
SP02930	Windows Lifter Test	DMM (Door Management Module)
SP02931	Windows Lifter Test	DMM (Door Management Module)
SP02932	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02933	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP02934	Static Test	ABS (Anti-Lock Braking System)
SP02935	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP02936	Static Test	ABS (Anti-Lock Braking System)
SP02937	Steering Angle Sensor	EPS (Electric Power Steering)
SP02938	Steering Angle Sensor	EPS (Electric Power Steering)
SP02939	Reset Odometer	IC (Instrument Cluster)
SP02940	Reset Service Information	IC (Instrument Cluster)
SP02941	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02942	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02943	Reset Odometer	IC (Instrument Cluster)
SP02944	Reset Service Information	IC (Instrument Cluster)

SP02945	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP02946	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP02947	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP02948	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP02949	Reset Phases Front	PCM (Powertrain Control Module)
SP02950	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP02951	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02952	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP02953	Reset Phases Front	PCM (Powertrain Control Module)
SP02954	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP02955	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02956	Clutch Pedal Learning	PCM (Powertrain Control Module)
SP02957	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP02958	Reset Phases Front	PCM (Powertrain Control Module)
SP02959	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP02960	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02961	Oil Change	PCM (Powertrain Control Module)
SP02962	Injector Replacement (Per Bank)	PCM (Powertrain Control Module)
SP02963	Injector Codes Read	PCM (Powertrain Control Module)
SP02964	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02965	EGR Valve Test	PCM (Powertrain Control Module)
SP02966	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02967	Resetting Distance Travelled With Water Temp. Warning Lamp ON	PCM (Powertrain Control Module)
SP02968	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	PCM (Powertrain Control Module)
SP02969	Throttle Valve Test	PCM (Powertrain Control Module)
SP02970	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02971	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP02972	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02973	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02974	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP02975	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02976	Oil Change	PCM (Powertrain Control Module)
SP02977	Injector Replacement (Per Bank)	PCM (Powertrain Control Module)
SP02978	Injector Codes Read	PCM (Powertrain Control Module)
SP02979	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02980	EGR Valve Test	PCM (Powertrain Control Module)
SP02981	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02982	Resetting Distance Travelled With Water Temp. Warning Lamp ON	PCM (Powertrain Control Module)
SP02983	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	PCM (Powertrain Control Module)

SP02984	Throttle Valve Test	PCM (Powertrain Control Module)
SP02985	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02986	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP02987	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02988	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02989	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP02990	Injector/S Replacement	PCM (Powertrain Control Module)
SP02991	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02992	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP02993	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP02994	Reset Phases Front	PCM (Powertrain Control Module)
SP02995	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP02996	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP02997	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP02998	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP02999	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP03000	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP03001	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03002	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP03003	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03004	Clutch Pedal Learning	PCM (Powertrain Control Module)
SP03005	Reset Phases Front	PCM (Powertrain Control Module)
SP03006	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP03007	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP03008	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP03009	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP03010	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03011	EGR Valve Test	PCM (Powertrain Control Module)
SP03012	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03013	Oil Change	PCM (Powertrain Control Module)
SP03014	Resetting Distance Travelled With Water Temp. Warning Lamp ON	PCM (Powertrain Control Module)
SP03015	Injector Replacement (Per Bank)	PCM (Powertrain Control Module)
SP03016	Injector Codes Read	PCM (Powertrain Control Module)
SP03017	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP03018	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	PCM (Powertrain Control Module)
SP03019	Throttle Valve Test	PCM (Powertrain Control Module)
SP03020	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP03021	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP03022	Self-Learnt Functions Reset	PCM (Powertrain Control Module)

SP03023	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP03024	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03025	Clutch Pedal Learning	PCM (Powertrain Control Module)
SP03026	Reset Phases Front	PCM (Powertrain Control Module)
SP03027	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP03028	Reset Adaptative Parameters	PCM (Powertrain Control Module)
SP03029	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP03030	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP03031	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03032	Phonic Wheel Replacement	PCM (Powertrain Control Module)
SP03033	Motorised Throttle Replacement	PCM (Powertrain Control Module)
SP03034	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03035	Phonic Wheel Reset	PCM (Powertrain Control Module)
SP03036	Reset Phases Front	PCM (Powertrain Control Module)
SP03037	Self Learning Throttle Body	PCM (Powertrain Control Module)
SP03038	Self-Learnt Functions Reset	PCM (Powertrain Control Module)
SP03039	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03040	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03041	Static Test	ABS (Anti-Lock Braking System)
SP03042	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP03043	Gear Configuration Reset	ABS (Anti-Lock Braking System)
SP03044	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03045	Static Test	ABS (Anti-Lock Braking System)
SP03046	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP03047	Gear Configuration Reset	ABS (Anti-Lock Braking System)
SP03048	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03049	Static Test	ABS (Anti-Lock Braking System)
SP03050	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP03051	Gear Configuration Reset	ABS (Anti-Lock Braking System)
SP03052	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03053	Static Test	ABS (Anti-Lock Braking System)
SP03054	TPMS Calibration	ABS (Anti-Lock Braking System)
SP03055	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP03056	Gear Configuration Reset	ABS (Anti-Lock Braking System)
SP03057	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03058	Static Test	ABS (Anti-Lock Braking System)
SP03059	TPMS Calibration	ABS (Anti-Lock Braking System)
SP03060	Steering Angle Calibration	EPS (Electric Power Steering)

SP03061	Reset Odometer	IC (Instrument Cluster)
SP03062	Reset Service Information	IC (Instrument Cluster)
SP03063	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03064	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03065	Reset Odometer	IC (Instrument Cluster)
SP03066	Reset Service Information	IC (Instrument Cluster)
SP03067	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03068	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03069	Enable Tow Hook Presence	PTS (Parktronics)
SP03070	Disable Tow Hook Presence	PTS (Parktronics)
SP03071	Injector Codes Read	ECM (Engine Control Module)
SP03072	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03073	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03074	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03075	Oil Change	ECM (Engine Control Module)
SP03076	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03077	Injector Codes Read	ECM (Engine Control Module)
SP03078	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03079	EGR Valve Test	ECM (Engine Control Module)
SP03080	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03081	Throttle Valve Test	ECM (Engine Control Module)
SP03082	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03083	Oil Change	ECM (Engine Control Module)
SP03084	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03085	Injector Codes Read	ECM (Engine Control Module)
SP03086	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03087	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03088	EGR Valve Test	ECM (Engine Control Module)
SP03089	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03090	Throttle Valve Test	ECM (Engine Control Module)
SP03091	Speed Limit Setting	ECM (Engine Control Module)
SP03092	Injector Codes Read	ECM (Engine Control Module)
SP03093	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03094	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03095	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03096	Injector Codes Read	ECM (Engine Control Module)
SP03097	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03098	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03099	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP03100	Oil Change	ECM (Engine Control Module)
SP03101	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03102	Injector Codes Read	ECM (Engine Control Module)
SP03103	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03104	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03105	EGR Valve Test	ECM (Engine Control Module)
SP03106	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03107	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03108	Throttle Valve Test	ECM (Engine Control Module)
SP03109	Speed Limit Setting	ECM (Engine Control Module)
SP03110	Oil Change	ECM (Engine Control Module)
SP03111	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03112	Injector Codes Read	ECM (Engine Control Module)
SP03113	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03114	EGR Valve Test	ECM (Engine Control Module)
SP03115	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03116	Throttle Valve Test	ECM (Engine Control Module)
SP03117	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03118	Oil Change	ECM (Engine Control Module)
SP03119	Injector Codes Read	ECM (Engine Control Module)
SP03120	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03121	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03122	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03123	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03124	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03125	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03126	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03127	Oil Change	ECM (Engine Control Module)
SP03128	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03129	Injector Codes Read	ECM (Engine Control Module)
SP03130	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03131	EGR Valve Test	ECM (Engine Control Module)
SP03132	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03133	Throttle Valve Test	ECM (Engine Control Module)
SP03134	Speed Limit Setting	ECM (Engine Control Module)
SP03135	Oil Change	ECM (Engine Control Module)
SP03136	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03137	Injector Codes Read	ECM (Engine Control Module)

SP03138	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03139	EGR Valve Test	ECM (Engine Control Module)
SP03140	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03141	Speed Limit Setting	ECM (Engine Control Module)
SP03142	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03143	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03144	Phonic Wheel Reset	ECM (Engine Control Module)
SP03145	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03146	Oil Change	ECM (Engine Control Module)
SP03147	Injector Codes Read	ECM (Engine Control Module)
SP03148	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03149	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03150	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03151	Oil Change	ECM (Engine Control Module)
SP03152	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03153	Injector Codes Read	ECM (Engine Control Module)
SP03154	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03155	EGR Valve Test	ECM (Engine Control Module)
SP03156	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03157	Speed Limit Setting	ECM (Engine Control Module)
SP03158	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03159	Motorized Throttle Learning	ECM (Engine Control Module)
SP03160	Phonic Wheel Reset	ECM (Engine Control Module)
SP03161	Reset Phases Front	ECM (Engine Control Module)
SP03162	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03163	Oil Change	ECM (Engine Control Module)
SP03164	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03165	Injector Codes Read	ECM (Engine Control Module)
SP03166	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03167	EGR Valve Test	ECM (Engine Control Module)
SP03168	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03169	Throttle Valve Test	ECM (Engine Control Module)
SP03170	Speed Limit Setting	ECM (Engine Control Module)
SP03171	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03172	Injector Codes Read	ECM (Engine Control Module)
SP03173	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03174	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03175	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03176	Oil Change	ECM (Engine Control Module)

SP03177	Injector Codes Read	ECM (Engine Control Module)
SP03178	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03179	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03180	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03181	Injector Codes Read	ECM (Engine Control Module)
SP03182	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03183	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03184	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03185	Oil Change	ECM (Engine Control Module)
SP03186	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03187	Injector Codes Read	ECM (Engine Control Module)
SP03188	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03189	EGR Valve Test	ECM (Engine Control Module)
SP03190	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03191	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03192	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03193	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03194	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03195	Oil Change	ECM (Engine Control Module)
SP03196	Injector Codes Read	ECM (Engine Control Module)
SP03197	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03198	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03199	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03200	Injector Codes Read	ECM (Engine Control Module)
SP03201	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03202	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03203	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03204	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03205	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03206	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03207	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03208	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03209	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03210	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03211	Phonic Wheel Reset	ECM (Engine Control Module)
SP03212	Vehicle Configuration Reset	ECM (Engine Control Module)
SP03213	Oil Change	ECM (Engine Control Module)
SP03214	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03215	Injector Codes Read	ECM (Engine Control Module)

SP03216	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03217	EGR Valve Test	ECM (Engine Control Module)
SP03218	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03219	Throttle Valve Test	ECM (Engine Control Module)
SP03220	Speed Limit Setting	ECM (Engine Control Module)
SP03221	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03222	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03223	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03224	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03225	Injector Codes Read	ECM (Engine Control Module)
SP03226	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03227	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03228	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03229	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03230	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03231	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03232	Injector Codes Read	ECM (Engine Control Module)
SP03233	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03234	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03235	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03236	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03237	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03238	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03239	Motorized Throttle Learning	ECM (Engine Control Module)
SP03240	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP03241	Vehicle Configuration Reset	ECM (Engine Control Module)
SP03242	Oil Change	ECM (Engine Control Module)
SP03243	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03244	Injector Codes Read	ECM (Engine Control Module)
SP03245	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03246	EGR Valve Test	ECM (Engine Control Module)
SP03247	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03248	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03249	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03250	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03251	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03252	Oil Change	ECM (Engine Control Module)
SP03253	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP03254	Injector Codes Read	ECM (Engine Control Module)
SP03255	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03256	EGR Valve Test	ECM (Engine Control Module)
SP03257	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03258	Throttle Valve Test	ECM (Engine Control Module)
SP03259	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03260	Oil Change	ECM (Engine Control Module)
SP03261	Injector Codes Read	ECM (Engine Control Module)
SP03262	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03263	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03264	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03265	Clutch Pedal Learning	ECM (Engine Control Module)
SP03266	Motorized Throttle Learning	ECM (Engine Control Module)
SP03267	Phonic Wheel Reset	ECM (Engine Control Module)
SP03268	Reset Phases Front	ECM (Engine Control Module)
SP03269	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03270	Oil Change	ECM (Engine Control Module)
SP03271	Injector Codes Read	ECM (Engine Control Module)
SP03272	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03273	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03274	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03275	Injector Codes Read	ECM (Engine Control Module)
SP03276	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03277	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03278	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03279	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03280	Phonic Wheel Reset	ECM (Engine Control Module)
SP03281	Vehicle Configuration Reset	ECM (Engine Control Module)
SP03282	Oil Change	ECM (Engine Control Module)
SP03283	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03284	Injector Codes Read	ECM (Engine Control Module)
SP03285	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03286	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03287	EGR Valve Test	ECM (Engine Control Module)
SP03288	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03289	Throttle Valve Test	ECM (Engine Control Module)
SP03290	Speed Limit Setting	ECM (Engine Control Module)
SP03291	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03292	Phonic Wheel Replacement	ECM (Engine Control Module)

SP03293	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03294	Clutch Pedal Learning	ECM (Engine Control Module)
SP03295	Motorized Throttle Learning	ECM (Engine Control Module)
SP03296	Phonic Wheel Reset	ECM (Engine Control Module)
SP03297	Reset Phases Front	ECM (Engine Control Module)
SP03298	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03299	Motorized Throttle Learning	ECM (Engine Control Module)
SP03300	Phonic Wheel Reset	ECM (Engine Control Module)
SP03301	Reset Phases Front	ECM (Engine Control Module)
SP03302	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03303	Oil Change	ECM (Engine Control Module)
SP03304	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03305	Injector Codes Read	ECM (Engine Control Module)
SP03306	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03307	EGR Valve Test	ECM (Engine Control Module)
SP03308	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03309	Throttle Valve Test	ECM (Engine Control Module)
SP03310	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03311	Motorized Throttle Learning	ECM (Engine Control Module)
SP03312	Phonic Wheel Reset	ECM (Engine Control Module)
SP03313	Reset Phases Front	ECM (Engine Control Module)
SP03314	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03315	Injector Codes Read	ECM (Engine Control Module)
SP03316	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03317	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03318	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03319	Motorized Throttle Learning	ECM (Engine Control Module)
SP03320	Phonic Wheel Reset	ECM (Engine Control Module)
SP03321	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03322	Oil Change	ECM (Engine Control Module)
SP03323	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03324	Injector Codes Read	ECM (Engine Control Module)
SP03325	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03326	EGR Valve Test	ECM (Engine Control Module)
SP03327	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03328	Throttle Valve Test	ECM (Engine Control Module)
SP03329	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03330	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03331	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP03332	Injector Codes Read	ECM (Engine Control Module)
SP03333	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03334	Oil Change	ECM (Engine Control Module)
SP03335	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03336	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03337	EGR Valve Test	ECM (Engine Control Module)
SP03338	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03339	Throttle Valve Test	ECM (Engine Control Module)
SP03340	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03341	Reset Statistical Data	TCM (Transmission Control Module)
SP03342	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03343	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03344	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03345	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03346	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP03347	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03348	Static Test	ABS (Anti-Lock Braking System)
SP03349	Static Test	ABS (Anti-Lock Braking System)
SP03350	Static Test	ABS (Anti-Lock Braking System)
SP03351	Longitudinal G-Sensor Calibration Test	ABS (Anti-Lock Braking System)
SP03352	Longitudinal And Lateral Sensor Decalibration	ABS (Anti-Lock Braking System)
SP03353	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03354	Static Test	ABS (Anti-Lock Braking System)
SP03355	TPMS Calibration	ABS (Anti-Lock Braking System)
SP03356	Steering Angle Calibration	EPS (Electric Power Steering)
SP03357	Steering Angle Calibration	EPS (Electric Power Steering)
SP03358	Steering Angle Calibration	EPS (Electric Power Steering)
SP03359	Steering Angle Calibration	EPS (Electric Power Steering)
SP03360	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03361	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03362	Reset Odometer	IC (Instrument Cluster)
SP03363	Reset Service Information	IC (Instrument Cluster)
SP03364	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03365	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03366	Reset Odometer	IC (Instrument Cluster)
SP03367	Reset Service Information	IC (Instrument Cluster)
SP03368	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03369	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03370	Reset Odometer	IC (Instrument Cluster)

SP03371	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03372	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03373	Reset Odometer	IC (Instrument Cluster)
SP03374	Reset Service Information	IC (Instrument Cluster)
SP03375	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03376	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03377	Reset Odometer	IC (Instrument Cluster)
SP03378	Reset Service Information	IC (Instrument Cluster)
SP03379	Alarms Deletion	TPMS (Tire Pressure Monitoring System)
SP03380	Antenna Replacement	TPMS (Tire Pressure Monitoring System)
SP03381	Control Unit Activation	TPMS (Tire Pressure Monitoring System)
SP03382	Control Unit Deactivation	TPMS (Tire Pressure Monitoring System)
SP03383	Manual System Configuration	TPMS (Tire Pressure Monitoring System)
SP03384	Automatic Configuration Read	TPMS (Tire Pressure Monitoring System)
SP03385	Wheel Transmitters Learning	TPMS (Tire Pressure Monitoring System)
SP03386	Automatic Configuration Write	TPMS (Tire Pressure Monitoring System)
SP03387	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP03388	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03389	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03390	Static Test	ABS (Anti-Lock Braking System)
SP03391	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03392	Static Test	ABS (Anti-Lock Braking System)
SP03393	Reset Odometer	IC (Instrument Cluster)
SP03394	Reset Service Information	IC (Instrument Cluster)
SP03395	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03396	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03397	Reset Odometer	IC (Instrument Cluster)
SP03398	Reset Service Information	IC (Instrument Cluster)
SP03399	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP03400	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP03401	Steering Angle Sensor	EPS (Electric Power Steering)
SP03402	Steering Angle Sensor	EPS (Electric Power Steering)
SP03403	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP03404	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03405	Injector Codes Read	ECM (Engine Control Module)
SP03406	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03407	Oil Change	ECM (Engine Control Module)
SP03408	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03409	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)

SP03410	EGR Valve Test	ECM (Engine Control Module)
SP03411	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03412	Throttle Valve Test	ECM (Engine Control Module)
SP03413	Motorized Throttle Learning	ECM (Engine Control Module)
SP03414	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03415	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03416	Injector/S Replacement	ECM (Engine Control Module)
SP03417	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP03418	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03419	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03420	Injector Codes Read	ECM (Engine Control Module)
SP03421	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03422	Oil Change	ECM (Engine Control Module)
SP03423	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03424	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03425	EGR Valve Test	ECM (Engine Control Module)
SP03426	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03427	Throttle Valve Test	ECM (Engine Control Module)
SP03428	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03429	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03430	Injector/S Replacement	ECM (Engine Control Module)
SP03431	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP03432	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03433	Injector Codes Read	ECM (Engine Control Module)
SP03434	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03435	Oil Change	ECM (Engine Control Module)
SP03436	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03437	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03438	EGR Valve Test	ECM (Engine Control Module)
SP03439	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03440	Throttle Valve Test	ECM (Engine Control Module)
SP03441	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03442	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03443	Injector Codes Read	ECM (Engine Control Module)
SP03444	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03445	Oil Change	ECM (Engine Control Module)
SP03446	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03447	EGR Valve Test	ECM (Engine Control Module)
SP03448	Throttle Valve Test	ECM (Engine Control Module)

SP03449	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03450	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03451	Injector/S Replacement	ECM (Engine Control Module)
SP03452	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP03453	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03454	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03455	Injector Codes Read	ECM (Engine Control Module)
SP03456	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03457	Oil Change	ECM (Engine Control Module)
SP03458	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03459	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03460	EGR Valve Test	ECM (Engine Control Module)
SP03461	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03462	Throttle Valve Test	ECM (Engine Control Module)
SP03463	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03464	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03465	Injector/S Replacement	ECM (Engine Control Module)
SP03466	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP03467	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03468	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03469	Injector Codes Read	ECM (Engine Control Module)
SP03470	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03471	Oil Change	ECM (Engine Control Module)
SP03472	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03473	EGR Valve Test	ECM (Engine Control Module)
SP03474	Throttle Valve Test	ECM (Engine Control Module)
SP03475	Clutch Pedal Learning	ECM (Engine Control Module)
SP03476	Motorized Throttle Learning	ECM (Engine Control Module)
SP03477	Waste Gate Valve Command	ECM (Engine Control Module)
SP03478	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03479	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03480	Injector/S Replacement	ECM (Engine Control Module)
SP03481	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP03482	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03483	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03484	Injector/S Replacement	ECM (Engine Control Module)
SP03485	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP03486	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)

SP03487	Injector Codes Read	ECM (Engine Control Module)
SP03488	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03489	Oil Change	ECM (Engine Control Module)
SP03490	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03491	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03492	EGR Valve Test	ECM (Engine Control Module)
SP03493	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03494	Throttle Valve Test	ECM (Engine Control Module)
SP03495	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03496	Injector Codes Read	ECM (Engine Control Module)
SP03497	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03498	Oil Change	ECM (Engine Control Module)
SP03499	Replacement Of EGR Valve	ECM (Engine Control Module)
SP03500	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03501	EGR Valve Test	ECM (Engine Control Module)
SP03502	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03503	Throttle Valve Test	ECM (Engine Control Module)
SP03504	Motorized Throttle Learning	ECM (Engine Control Module)
SP03505	Motorized Throttle Learning	ECM (Engine Control Module)
SP03506	Reset Mixture Adaptation Values	ECM (Engine Control Module)
SP03507	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03508	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03509	Injector Codes Read	ECM (Engine Control Module)
SP03510	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03511	Oil Change	ECM (Engine Control Module)
SP03512	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03513	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP03514	EGR Valve Test	ECM (Engine Control Module)
SP03515	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP03516	Throttle Valve Test	ECM (Engine Control Module)
SP03517	Motorized Throttle Learning	ECM (Engine Control Module)
SP03518	Reset Mixture Adaptation Values	ECM (Engine Control Module)
SP03519	Neutral Position Self Learning.	TCM (Transmission Control Module)
SP03520	Neutral Position Self Learning.	TCM (Transmission Control Module)
SP03521	Static Test	ABS (Anti-Lock Braking System)
SP03522	Longitudinal And Lateral Sensor Uncalibration	ABS (Anti-Lock Braking System)
SP03523	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP03524	Static Test	ABS (Anti-Lock Braking System)

SP03525	TPMS Calibration	ABS (Anti-Lock Braking System)
SP03526	Reset Service Information	IC (Instrument Cluster)
SP03527	Reset Odometer	IC (Instrument Cluster)
SP03528	Reset Service Information	IC (Instrument Cluster)
SP03529	Reset Odometer	IC (Instrument Cluster)
SP03530	Clear Steering Pull Compensation	EPS (Electric Power Steering)
SP03531	Check PCM Odometer	PCM (Powertrain Control Module)
SP03532	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03533	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03534	Reset Memory	PCM (Powertrain Control Module)
SP03535	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP03536	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP03537	EGR System Test	PCM (Powertrain Control Module)
SP03538	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03539	Set Engine RPM	PCM (Powertrain Control Module)
SP03540	Reset Purge Fuel Circuit	ECM (Engine Control Module)
SP03541	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
SP03542	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP03543	Clutch Pedal Learning	ECM (Engine Control Module)
SP03544	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03545	Lambda Function Reset	ECM (Engine Control Module)
SP03546	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03547	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03548	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03549	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03550	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03551	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03552	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03553	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03554	Lambda Function Reset	ECM (Engine Control Module)
SP03555	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03556	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03557	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03558	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03559	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03560	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03561	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03562	Purge Fuel Circuit Reset	ECM (Engine Control Module)

SP03563	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP03564	Clutch Pedal Learning	ECM (Engine Control Module)
SP03565	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03566	Lambda Function Reset	ECM (Engine Control Module)
SP03567	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03568	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03569	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03570	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03571	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03572	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03573	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03574	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03575	Lambda Function Reset	ECM (Engine Control Module)
SP03576	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03577	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03578	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03579	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03580	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03581	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03582	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03583	Clear Self Learning Data	TCM (Transmission Control Module)
SP03584	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP03585	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP03586	Reset Angle Offset	ABS (Anti-Lock Braking System)
SP03587	Lock Doors Command	BCM (Body Control Module)
SP03588	Unlock Doors Command	BCM (Body Control Module)
SP03589	Lock Doors Command	BCM (Body Control Module)
SP03590	Unlock Doors Command	BCM (Body Control Module)
SP03591	Lock Doors Command	BCM (Body Control Module)
SP03592	Unlock Doors Command	BCM (Body Control Module)
SP03593	Reset Service Information	IC (Instrument Cluster)
SP03594	Reset Service Information	IC (Instrument Cluster)
SP03595	Reset Odometer	IC (Instrument Cluster)
SP03596	Reset Odometer	IC (Instrument Cluster)
SP03597	Reset Parameter.	ETM (Entertainment Telematic Module)
SP03598	Reset Parameter	ETM (Entertainment Telematic Module)
SP03599	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP03600	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)

SP03601	Steering Angle Sensor	EPS (Electric Power Steering)
SP03602	Reset Purge Fuel Circuit	ECM (Engine Control Module)
SP03603	Reset Phonic Wheel Tooth Learn	ECM (Engine Control Module)
SP03604	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP03605	Clutch Pedal Learning	ECM (Engine Control Module)
SP03606	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03607	Lambda Function Reset	ECM (Engine Control Module)
SP03608	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03609	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03610	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03611	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03612	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03613	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03614	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03615	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03616	Lambda Function Reset	ECM (Engine Control Module)
SP03617	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03618	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03619	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03620	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03621	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03622	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03623	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03624	Purge Fuel Circuit Reset	ECM (Engine Control Module)
SP03625	Reset Camshaft Adaptative	ECM (Engine Control Module)
SP03626	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03627	Lambda Function Reset	ECM (Engine Control Module)
SP03628	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03629	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)
SP03630	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03631	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03632	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03633	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03634	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03635	Clutch Pedal Learning	ECM (Engine Control Module)
SP03636	Zero Fuel Quantity Calibration	ECM (Engine Control Module)
SP03637	Lambda Function Reset	ECM (Engine Control Module)
SP03638	Diesel Particulate Filter Functions	ECM (Engine Control Module)
SP03639	EGR High Pressure Valve Offset Learn	ECM (Engine Control Module)

SP03640	EGR High Pressure Valve Test	ECM (Engine Control Module)
SP03641	Reset Driven Distance With Fuel Lamp On	ECM (Engine Control Module)
SP03642	Reset Driven Distance With Water Temperature Lamp On	ECM (Engine Control Module)
SP03643	Throttle Valve Actuator (TVA) DC Motor Test	ECM (Engine Control Module)
SP03644	Reset Blinking Oil Lamp	ECM (Engine Control Module)
SP03645	Check PCM Odometer	PCM (Powertrain Control Module)
SP03646	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03647	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03648	Reset Memory	PCM (Powertrain Control Module)
SP03649	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP03650	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP03651	EGR System Test	PCM (Powertrain Control Module)
SP03652	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03653	Set Engine RPM	PCM (Powertrain Control Module)
SP03654	Clear Self Learning Data	TCM (Transmission Control Module)
SP03655	Neutral Position Self-Learning	TCM (Transmission Control Module)
SP03656	Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP03657	Reset Angle Offset	ABS (Anti Lock Brakes)
SP03658	Lock Doors Command	BCM (Body Control Module)
SP03659	Unlock Doors Command	BCM (Body Control Module)
SP03660	Lock Doors Command	BCM (Body Control Module)
SP03661	Unlock Doors Command	BCM (Body Control Module)
SP03662	Lock Doors Command	BCM (Body Control Module)
SP03663	Unlock Doors Command	BCM (Body Control Module)
SP03664	Steering Angle Sensor	EPS (Electric Power Steering)
SP03665	Reset Odometer	IPC (Instrument Panel Cluster)
SP03666	Reset Odometer	IPC (Instrument Panel Cluster)
SP03667	Reset Parameter.	ETM (Entertainment Telematic Module)
SP03668	Reset Parameter	ETM (Entertainment Telematic Module)
SP03669	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP03670	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP03671	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03672	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03673	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03674	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03675	Purge Fuel Circuit Reset	ECM (Engine Control Module)
SP03676	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03677	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03678	Reset Vehicle Configuration	ECM (Engine Control Module)

SP03679	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03680	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03681	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03682	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03683	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03684	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03685	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03686	Purge Fuel Circuit Reset	ECM (Engine Control Module)
SP03687	Clutch Pedal Learning	ECM (Engine Control Module)
SP03688	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03689	Self Learning Throttle Body Activation	ECM (Engine Control Module)
SP03690	Reset Functions Self Learned	TCM (Transmission Control Module)
SP03691	Learn Clutches Contact Point	TCM (Transmission Control Module)
SP03692	Quick Learn	TCM (Transmission Control Module)
SP03693	ECU Replacement With Value Transfer	TCM (Transmission Control Module)
SP03694	Reset TPMS Calibration	ABS (Anti Lock Brakes)
SP03695	Lock Doors Command	BCM (Body Control Module)
SP03696	Unlock Doors Command	BCM (Body Control Module)
SP03697	Rear Window Wiper Command	BCM (Body Control Module)
SP03698	Reset Functions Self Learned	DMM (Door Management Module)
SP03699	Learn Clutches Contact Point	DMM (Door Management Module)
SP03700	Quick Learn	DMM (Door Management Module)
SP03701	ECU Replacement With Value Transfer	DMM (Door Management Module)
SP03702	Windows Lifter Test	DMM (Door Management Module)
SP03703	Windows Lifter Test	DMM (Door Management Module)
SP03704	Reset Parameter.	ETM (Entertainment Telematic Module)
SP03705	Reset Parameter	ETM (Entertainment Telematic Module)
SP03706	Reset Parameter.	LTM (Low Telematic Module)
SP03707	Oil Change	ECM (Engine Control Module)
SP03708	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03709	Injector Codes Read	ECM (Engine Control Module)
SP03710	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03711	EGR Valve Test	ECM (Engine Control Module)
SP03712	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03713	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03714	Throttle Valve Test	ECM (Engine Control Module)
SP03715	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP03716	Reset Phases Front	ECM (Engine Control Module)
SP03717	Reset Vehicle Configuration	ECM (Engine Control Module)

SP03718	Reset Learning Gear Neutral Position Value	ECM (Engine Control Module)
SP03719	Self Learning Throttle Body	ECM (Engine Control Module)
SP03720	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP03721	Reset Phases Front	ECM (Engine Control Module)
SP03722	Reset Vehicle Configuration	ECM (Engine Control Module)
SP03723	Reset Learning Gear Neutral Position Value	ECM (Engine Control Module)
SP03724	Self Learning Throttle Body	ECM (Engine Control Module)
SP03725	Oil Change	ECM (Engine Control Module)
SP03726	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03727	Injector Codes Read	ECM (Engine Control Module)
SP03728	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03729	EGR Valve Test	ECM (Engine Control Module)
SP03730	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03731	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03732	Throttle Valve Test	ECM (Engine Control Module)
SP03733	Clutch Pedal Learning	ECM (Engine Control Module)
SP03734	Motorized Throttle Learning	ECM (Engine Control Module)
SP03735	Phonic Wheel Reset	ECM (Engine Control Module)
SP03736	Reset Phases Front	ECM (Engine Control Module)
SP03737	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03738	Motorized Throttle Learning	ECM (Engine Control Module)
SP03739	Phonic Wheel Reset	ECM (Engine Control Module)
SP03740	Vehicle Configuration Reset	ECM (Engine Control Module)
SP03741	Clutch Pedal Learning	ECM (Engine Control Module)
SP03742	Motorized Throttle Learning	ECM (Engine Control Module)
SP03743	Phonic Wheel Reset	ECM (Engine Control Module)
SP03744	Reset Phases Front	ECM (Engine Control Module)
SP03745	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03746	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03747	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03748	Clutch Pedal Learning	ECM (Engine Control Module)
SP03749	Motorized Throttle Replacement	ECM (Engine Control Module)
SP03750	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03751	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03752	Clutch Pedal Learning	ECM (Engine Control Module)
SP03753	Neutral Signal Learning With Engine Off	ECM (Engine Control Module)
SP03754	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03755	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP03756	Oil Change	ECM (Engine Control Module)
SP03757	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03758	Injector Codes Read	ECM (Engine Control Module)
SP03759	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03760	EGR Valve Test	ECM (Engine Control Module)
SP03761	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03762	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03763	Throttle Valve Test	ECM (Engine Control Module)
SP03764	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03765	Neutral Signal Learning With Engine Off	ECM (Engine Control Module)
SP03766	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03767	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03768	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03769	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03770	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03771	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03772	Clutch Pedal Learning	ECM (Engine Control Module)
SP03773	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03774	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03775	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03776	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03777	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03778	Oil Change	ECM (Engine Control Module)
SP03779	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP03780	Injector Codes Read	ECM (Engine Control Module)
SP03781	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03782	EGR Valve Test	ECM (Engine Control Module)
SP03783	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03784	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP03785	Throttle Valve Test	ECM (Engine Control Module)
SP03786	Motorised Throttle Replacement	ECM (Engine Control Module)
SP03787	Clutch Pedal Learning	ECM (Engine Control Module)
SP03788	Phonic Wheel Replacement	ECM (Engine Control Module)
SP03789	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP03790	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03791	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP03792	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)
SP03793	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP03794	Static Test	ABS (Anti Lock Brakes)

SP03795	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP03796	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)
SP03797	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP03798	Static Test	ABS (Anti Lock Brakes)
SP03799	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP03800	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)
SP03801	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP03802	Static Test	ABS (Anti Lock Brakes)
SP03803	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP03804	Static Test	ABS (Anti Lock Brakes)
SP03805	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP03806	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)
SP03807	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP03808	Static Test	ABS (Anti Lock Brakes)
SP03809	TPMS Calibration	ABS (Anti Lock Brakes)
SP03810	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP03811	Reset Odometer	IPC (Instrument Panel Cluster)
SP03812	Reset Service Information	IPC (Instrument Panel Cluster)
SP03813	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03814	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03815	Reset Odometer	IPC (Instrument Panel Cluster)
SP03816	Reset Service Information	IPC (Instrument Panel Cluster)
SP03817	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03818	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03819	Reset Odometer	IPC (Instrument Panel Cluster)
SP03820	Reset Service Information	IPC (Instrument Panel Cluster)
SP03821	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03822	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03823	Reset Odometer	IPC (Instrument Panel Cluster)
SP03824	Reset Service Information	IPC (Instrument Panel Cluster)
SP03825	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03826	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP03827	Steering Angle Calibration	EPS (Electric Power Steering)
SP03828	Check PCM Odometer	PCM (Powertrain Control Module)
SP03829	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03830	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03831	Reset Memory	PCM (Powertrain Control Module)
SP03832	EGR System Test	PCM (Powertrain Control Module)
SP03833	ETC Throttle Follower Test	PCM (Powertrain Control Module)

SP03834	Set Engine RPM	PCM (Powertrain Control Module)
SP03835	Check PCM Odometer	PCM (Powertrain Control Module)
SP03836	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03837	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03838	Reset Memory	PCM (Powertrain Control Module)
SP03839	EGR System Test	PCM (Powertrain Control Module)
SP03840	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03841	Set Engine RPM	PCM (Powertrain Control Module)
SP03842	Bleed Brakes	ABS (Anti Lock Brakes)
SP03843	Initialize ABS	ABS (Anti Lock Brakes)
SP03844	Bleed Brakes	ABS (Anti Lock Brakes)
SP03845	Reset Odometer	PDM (Passenger Door Module)
SP03846	Reset Service Information	PDM (Passenger Door Module)
SP03847	Disable Seat Belts Reminder	PDM (Passenger Door Module)
SP03848	Enable Seat Belts Reminder	PDM (Passenger Door Module)
SP03849	Auto Door Lock	CCN (Instrument Cluster/Cabin Compartment Node)
SP03850	Auto Door Unlock	CCN (Instrument Cluster/Cabin Compartment Node)
SP03851	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP03852	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP03853	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP03854	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP03855	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP03856	Check PCM Odometer	PCM (Powertrain Control Module)
SP03857	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03858	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03859	Reset Memory	PCM (Powertrain Control Module)
SP03860	EGR System Test	PCM (Powertrain Control Module)
SP03861	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03862	Set Engine RPM	PCM (Powertrain Control Module)
SP03863	Check PCM Odometer	PCM (Powertrain Control Module)
SP03864	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03865	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03866	Reset Memory	PCM (Powertrain Control Module)
SP03867	EGR System Test	PCM (Powertrain Control Module)
SP03868	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03869	Set Engine RPM	PCM (Powertrain Control Module)
SP03870	Bleed Brakes	ABS (Anti Lock Brakes)
SP03871	Initialize ABS	ABS (Anti Lock Brakes)

SP03872	Bleed Brakes	ABS (Anti Lock Brakes)
SP03873	Auto Door Lock	CCN (Instrument Cluster/Cabin Compartment Node)
SP03874	Auto Door Unlock	CCN (Instrument Cluster/Cabin Compartment Node)
SP03875	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP03876	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP03877	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP03878	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP03879	Reset Odometer	PDM (Passenger Door Module)
SP03880	Reset Service Information	PDM (Passenger Door Module)
SP03881	Disable Seat Belts Reminder	PDM (Passenger Door Module)
SP03882	Enable Seat Belts Reminder	PDM (Passenger Door Module)
SP03883	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP03884	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP03885	DPF Reset Option	PCM (Powertrain Control Module)
SP03886	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP03887	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP03888	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP03889	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP03890	Throttle Valve Learn	PCM (Powertrain Control Module)
SP03891	Check PCM Odometer	PCM (Powertrain Control Module)
SP03892	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03893	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03894	Reset Memory	PCM (Powertrain Control Module)
SP03895	EGR System Test	PCM (Powertrain Control Module)
SP03896	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03897	Set Engine RPM	PCM (Powertrain Control Module)
SP03898	Check PCM Odometer	PCM (Powertrain Control Module)
SP03899	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03900	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03901	Reset Memory	PCM (Powertrain Control Module)
SP03902	EGR System Test	PCM (Powertrain Control Module)
SP03903	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03904	Set Engine RPM	PCM (Powertrain Control Module)
SP03905	Reset Adaptive Values	TCM (Transmission Control Module)
SP03906	Reset Learned Adaptives	TCM (Transmission Control Module)
SP03907	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP03908	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP03909	Initialize ORC	ORC (Occupant Restraint)
SP03910	Auto Door Lock	BCM (Body Control Module)

SP03911	Program Tire Size	BCM (Body Control Module)
SP03912	Configure License Plate Size	PTS (Parktronics)
SP03913	System Wiring Test	PTS (Parktronics)
SP03914	Disable/Enable Seatbelt Minder Chime	IPC (Instrument Panel Cluster)
SP03915	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03916	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03917	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03918	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03919	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP03920	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP03921	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP03922	DPF Reset Option	PCM (Powertrain Control Module)
SP03923	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP03924	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP03925	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP03926	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP03927	Throttle Valve Learn	PCM (Powertrain Control Module)
SP03928	Check PCM Odometer	PCM (Powertrain Control Module)
SP03929	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03930	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03931	Reset Memory	PCM (Powertrain Control Module)
SP03932	EGR System Test	PCM (Powertrain Control Module)
SP03933	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03934	Set Engine RPM	PCM (Powertrain Control Module)
SP03935	Check PCM Odometer	PCM (Powertrain Control Module)
SP03936	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03937	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03938	Reset Memory	PCM (Powertrain Control Module)
SP03939	EGR System Test	PCM (Powertrain Control Module)
SP03940	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03941	Set Engine RPM	PCM (Powertrain Control Module)
SP03942	Reset Adaptive Values	TCM (Transmission Control Module)
SP03943	Reset Adaptive Values	TCM (Transmission Control Module)
SP03944	Quick Learn	TCM (Transmission Control Module)
SP03945	Reset Learned Adaptives	TCM (Transmission Control Module)
SP03946	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP03947	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP03948	Initialize ORC	ORC (Occupant Restraint)
SP03949	Auto Door Lock	BCM (Body Control Module)

SP03950	Program Tire Size	BCM (Body Control Module)
SP03951	Disable/Enable Seatbelt Minder Chime	IPC (Instrument Panel Cluster)
SP03952	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03953	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03954	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03955	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP03956	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP03957	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP03958	Configure License Plate Size	PTS (Parktronics)
SP03959	System Wiring Test	PTS (Parktronics)
SP03960	Check PCM Odometer	PCM (Powertrain Control Module)
SP03961	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03962	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03963	Reset Memory	PCM (Powertrain Control Module)
SP03964	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP03965	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP03966	EGR System Test	PCM (Powertrain Control Module)
SP03967	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03968	Set Engine RPM	PCM (Powertrain Control Module)
SP03969	Check PCM Odometer	PCM (Powertrain Control Module)
SP03970	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03971	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03972	Reset Memory	PCM (Powertrain Control Module)
SP03973	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP03974	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP03975	EGR System Test	PCM (Powertrain Control Module)
SP03976	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03977	Set Engine RPM	PCM (Powertrain Control Module)
SP03978	Check PCM Odometer	PCM (Powertrain Control Module)
SP03979	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03980	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03981	Reset Memory	PCM (Powertrain Control Module)
SP03982	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP03983	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP03984	EGR System Test	PCM (Powertrain Control Module)
SP03985	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03986	Set Engine RPM	PCM (Powertrain Control Module)
SP03987	Check PCM Odometer	PCM (Powertrain Control Module)
SP03988	Quicklearn (62TE)	PCM (Powertrain Control Module)

SP03989	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03990	Reset Memory	PCM (Powertrain Control Module)
SP03991	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP03992	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP03993	EGR System Test	PCM (Powertrain Control Module)
SP03994	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP03995	Set Engine RPM	PCM (Powertrain Control Module)
SP03996	Check PCM Odometer	PCM (Powertrain Control Module)
SP03997	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP03998	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP03999	Reset Memory	PCM (Powertrain Control Module)
SP04000	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04001	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04002	EGR System Test	PCM (Powertrain Control Module)
SP04003	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04004	Set Engine RPM	PCM (Powertrain Control Module)
SP04005	Check PCM Odometer	PCM (Powertrain Control Module)
SP04006	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04007	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04008	Reset Memory	PCM (Powertrain Control Module)
SP04009	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04010	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04011	EGR System Test	PCM (Powertrain Control Module)
SP04012	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04013	Set Engine RPM	PCM (Powertrain Control Module)
SP04014	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP04015	DPF Reset Option	PCM (Powertrain Control Module)
SP04016	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP04017	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP04018	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP04019	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP04020	Throttle Valve Learn	PCM (Powertrain Control Module)
SP04021	Check PCM Odometer	PCM (Powertrain Control Module)
SP04022	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04023	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04024	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04025	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04026	EGR System Test	PCM (Powertrain Control Module)
SP04027	ETC Throttle Follower Test	PCM (Powertrain Control Module)

SP04028	Set Engine RPM	PCM (Powertrain Control Module)
SP04029	Check PCM Odometer	PCM (Powertrain Control Module)
SP04030	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04031	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04032	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04033	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04034	EGR System Test	PCM (Powertrain Control Module)
SP04035	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04036	Set Engine RPM	PCM (Powertrain Control Module)
SP04037	Reset Adaptive Values	TCM (Transmission Control Module)
SP04038	Reset Adaptive Values	TCM (Transmission Control Module)
SP04039	Quick Learn	TCM (Transmission Control Module)
SP04040	Reset Learned Adaptives	TCM (Transmission Control Module)
SP04041	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP04042	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP04043	Initialize ORC	ORC (Occupant Restraint)
SP04044	Auto Door Lock	BCM (Body Control Module)
SP04045	Program Tire Size	BCM (Body Control Module)
SP04046	Disable/Enable Seatbelt Minder Chime	IPC (Instrument Panel Cluster)
SP04047	Configure License Plate Size	PTS (Parktronics)
SP04048	System Wiring Test	PTS (Parktronics)
SP04049	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04050	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04051	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04052	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04053	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04054	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04055	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04056	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04057	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04058	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04059	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04060	Activate TPM High Gain Mode	TPM (Tire Pressure Monitor)
SP04061	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP04062	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04063	Check PCM Odometer	PCM (Powertrain Control Module)
SP04064	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04065	Reset Memory	PCM (Powertrain Control Module)
SP04066	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)

SP04067	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04068	EGR System Test	PCM (Powertrain Control Module)
SP04069	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04070	Set Engine RPM	PCM (Powertrain Control Module)
SP04071	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP04072	DPF Reset Option	PCM (Powertrain Control Module)
SP04073	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP04074	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP04075	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP04076	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP04077	Throttle Valve Learn	PCM (Powertrain Control Module)
SP04078	Check PCM Odometer	PCM (Powertrain Control Module)
SP04079	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04080	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04081	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04082	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04083	EGR System Test	PCM (Powertrain Control Module)
SP04084	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04085	Set Engine RPM	PCM (Powertrain Control Module)
SP04086	Check PCM Odometer	PCM (Powertrain Control Module)
SP04087	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04088	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04089	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04090	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04091	EGR System Test	PCM (Powertrain Control Module)
SP04092	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04093	Set Engine RPM	PCM (Powertrain Control Module)
SP04094	Check PCM Odometer	PCM (Powertrain Control Module)
SP04095	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04096	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04097	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04098	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04099	EGR System Test	PCM (Powertrain Control Module)
SP04100	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04101	Set Engine RPM	PCM (Powertrain Control Module)
SP04102	Check PCM Odometer	PCM (Powertrain Control Module)
SP04103	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04104	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04105	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)

SP04106	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04107	EGR System Test	PCM (Powertrain Control Module)
SP04108	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04109	Set Engine RPM	PCM (Powertrain Control Module)
SP04110	Reset Learned Adaptives	TCM (Transmission Control Module)
SP04111	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP04112	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP04113	Initialize ORC	ORC (Occupant Restraint)
SP04114	Auto Door Lock	BCM (Body Control Module)
SP04115	Program Tire Size	BCM (Body Control Module)
SP04116	Enable/Disable Seatbelt Minder	IPC (Instrument Panel Cluster)
SP04117	Program Left Front Tire Sensor ID	ESM (Electronic Shifter)
SP04118	Program Left Rear Tire Sensor ID	ESM (Electronic Shifter)
SP04119	Program Right Front Tire Sensor ID	ESM (Electronic Shifter)
SP04120	Program Right Rear Tire Sensor ID	ESM (Electronic Shifter)
SP04121	Sensor Rolls Test	ESM (Electronic Shifter)
SP04122	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04123	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04124	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04125	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04126	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04127	Activate TPM High Gain Mode	TPM (Tire Pressure Monitor)
SP04128	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP04129	Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04130	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04131	Check PCM Odometer	PCM (Powertrain Control Module)
SP04132	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04133	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04134	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04135	EGR System Test	PCM (Powertrain Control Module)
SP04136	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04137	Set Engine RPM	PCM (Powertrain Control Module)
SP04138	Check PCM Odometer	PCM (Powertrain Control Module)
SP04139	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04140	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04141	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04142	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04143	EGR System Test	PCM (Powertrain Control Module)
SP04144	ETC Throttle Follower Test	PCM (Powertrain Control Module)

SP04145	Set Engine RPM	PCM (Powertrain Control Module)
SP04146	Air Flow Meter Replace	PCM (Powertrain Control Module)
SP04147	DPF Reset Option	PCM (Powertrain Control Module)
SP04148	Lambda Sensor Replace	PCM (Powertrain Control Module)
SP04149	Reset Of Lambda Values	PCM (Powertrain Control Module)
SP04150	Reset Oil Change Indicator	PCM (Powertrain Control Module)
SP04151	Reset Zero Fuel Quantity Calibration	PCM (Powertrain Control Module)
SP04152	Throttle Valve Learn	PCM (Powertrain Control Module)
SP04153	Reset Learned Adaptives	TCM (Transmission Control Module)
SP04154	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP04155	Brake Pedal Calibration	ABS (Anti Lock Brakes)
SP04156	Initialize ORC	ORC (Occupant Restraint)
SP04157	Program Left Front Tire Sensor ID	ESM (Electronic Shifter)
SP04158	Program Left Rear Tire Sensor ID	ESM (Electronic Shifter)
SP04159	Program Right Front Tire Sensor ID	ESM (Electronic Shifter)
SP04160	Program Right Rear Tire Sensor ID	ESM (Electronic Shifter)
SP04161	Sensor Rolls Test	ESM (Electronic Shifter)
SP04162	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04163	Enable/Disable Seatbelt Minder	IPC (Instrument Panel Cluster)
SP04164	Check PCM Odometer	PCM (Powertrain Control Module)
SP04165	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04166	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04167	Reset Memory	PCM (Powertrain Control Module)
SP04168	EGR System Test	PCM (Powertrain Control Module)
SP04169	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04170	Set Engine RPM	PCM (Powertrain Control Module)
SP04171	Check PCM Odometer	PCM (Powertrain Control Module)
SP04172	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04173	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04174	Reset Memory	PCM (Powertrain Control Module)
SP04175	EGR System Test	PCM (Powertrain Control Module)
SP04176	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04177	Set Engine RPM	PCM (Powertrain Control Module)
SP04178	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)
SP04179	Bleed Brakes	ABS (Anti Lock Brakes)
SP04180	Initialize ABS	ABS (Anti Lock Brakes)
SP04181	Bleed Brakes	ABS (Anti Lock Brakes)
SP04182	ABS Bleed Brakes	ABS (Anti Lock Brakes)

SP04183	Initialize ORC	ORC (Occupant Restraint)
SP04184	Auto Wipers	TIPMCGW (Central Gateway)
SP04185	Auto Door Lock	TIPMCGW (Central Gateway)
SP04186	Auto Door Unlock	TIPMCGW (Central Gateway)
SP04187	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP04188	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP04189	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP04190	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04191	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04192	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04193	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04194	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP04195	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04196	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04197	Configure License Plate Size	PTS (Parktronics)
SP04198	System Wiring Test	PTS (Parktronics)
SP04199	Reset WIN Configuration	WCM (Wireless Control)
SP04200	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04201	Reset WIN Configuration	WCM (Wireless Control)
SP04202	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04203	Check PCM Odometer	PCM (Powertrain Control Module)
SP04204	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04205	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04206	Reset Memory	PCM (Powertrain Control Module)
SP04207	EGR System Test	PCM (Powertrain Control Module)
SP04208	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04209	Set Engine RPM	PCM (Powertrain Control Module)
SP04210	Check PCM Odometer	PCM (Powertrain Control Module)
SP04211	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04212	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04213	Reset Memory	PCM (Powertrain Control Module)
SP04214	EGR System Test	PCM (Powertrain Control Module)
SP04215	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04216	Set Engine RPM	PCM (Powertrain Control Module)
SP04217	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)
SP04218	Bleed Brakes	ABS (Anti Lock Brakes)
SP04219	Initialize ABS	ABS (Anti Lock Brakes)
SP04220	Bleed Brakes	ABS (Anti Lock Brakes)
SP04221	ABS Bleed Brakes	ABS (Anti Lock Brakes)

SP04222	Initialize ORC	ORC (Occupant Restraint)
SP04223	Auto Wipers	TIPMCGW (Central Gateway)
SP04224	Auto Door Lock	TIPMCGW (Central Gateway)
SP04225	Auto Door Unlock	TIPMCGW (Central Gateway)
SP04226	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04227	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04228	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04229	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04230	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP04231	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04232	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04233	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP04234	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP04235	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP04236	Reset WIN Configuration	WCM (Wireless Control)
SP04237	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04238	Reset WIN Configuration	WCM (Wireless Control)
SP04239	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04240	Configure License Plate Size	PTS (Parktronics)
SP04241	System Wiring Test	PTS (Parktronics)
SP04242	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)
SP04243	Check PCM Odometer	PCM (Powertrain Control Module)
SP04244	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04245	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04246	Reset Memory	PCM (Powertrain Control Module)
SP04247	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04248	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04249	EGR System Test	PCM (Powertrain Control Module)
SP04250	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04251	Set Engine RPM	PCM (Powertrain Control Module)
SP04252	Check PCM Odometer	PCM (Powertrain Control Module)
SP04253	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04254	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04255	Reset Memory	PCM (Powertrain Control Module)
SP04256	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04257	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04258	EGR System Test	PCM (Powertrain Control Module)
SP04259	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04260	Set Engine RPM	PCM (Powertrain Control Module)

SP04261	Check PCM Odometer	PCM (Powertrain Control Module)
SP04262	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04263	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04264	Reset Memory	PCM (Powertrain Control Module)
SP04265	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04266	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04267	EGR System Test	PCM (Powertrain Control Module)
SP04268	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04269	Set Engine RPM	PCM (Powertrain Control Module)
SP04270	Check PCM Odometer	PCM (Powertrain Control Module)
SP04271	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04272	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04273	Reset Memory	PCM (Powertrain Control Module)
SP04274	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04275	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04276	EGR System Test	PCM (Powertrain Control Module)
SP04277	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04278	Set Engine RPM	PCM (Powertrain Control Module)
SP04279	Check PCM Odometer	PCM (Powertrain Control Module)
SP04280	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04281	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04282	Reset Memory	PCM (Powertrain Control Module)
SP04283	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04284	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04285	EGR System Test	PCM (Powertrain Control Module)
SP04286	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04287	Set Engine RPM	PCM (Powertrain Control Module)
SP04288	Check PCM Odometer	PCM (Powertrain Control Module)
SP04289	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04290	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04291	Reset Memory	PCM (Powertrain Control Module)
SP04292	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04293	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04294	EGR System Test	PCM (Powertrain Control Module)
SP04295	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04296	Set Engine RPM	PCM (Powertrain Control Module)
SP04297	Check PCM Odometer	PCM (Powertrain Control Module)
SP04298	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04299	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)

SP04300	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04301	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04302	EGR System Test	PCM (Powertrain Control Module)
SP04303	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04304	Set Engine RPM	PCM (Powertrain Control Module)
SP04305	Check PCM Odometer	PCM (Powertrain Control Module)
SP04306	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04307	Quicklearn (Non-RFE)	PCM (Powertrain Control Module)
SP04308	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04309	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04310	EGR System Test	PCM (Powertrain Control Module)
SP04311	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04312	Set Engine RPM	PCM (Powertrain Control Module)
SP04313	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP04314	Initialize ORC	ORC (Occupant Restraint)
SP04315	Auto Wipers	TIPMCGW (Central Gateway)
SP04316	Auto Door Lock	TIPMCGW (Central Gateway)
SP04317	Auto Door Unlock	TIPMCGW (Central Gateway)
SP04318	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04319	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04320	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04321	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04322	TPM Sensor Position Parameter Update	TPM (Tire Pressure Monitor)
SP04323	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04324	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04325	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04326	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04327	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04328	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04329	Turn Off Gain Mode Override	TPM (Tire Pressure Monitor)
SP04330	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04331	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04332	Reset WIN Configuration	WCM (Wireless Control)
SP04333	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04334	Reset WIN Configuration	WCM (Wireless Control)
SP04335	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04336	Configure License Plate Size	PTS (Parktronics)
SP04337	System Wiring Test	PTS (Parktronics)
SP04338	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)

SP04339	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP04340	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP04341	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)
SP04342	Check PCM Odometer	PCM (Powertrain Control Module)
SP04343	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04344	Reset Memory	PCM (Powertrain Control Module)
SP04345	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04346	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04347	EGR System Test	PCM (Powertrain Control Module)
SP04348	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04349	Set Engine RPM	PCM (Powertrain Control Module)
SP04350	Check PCM Odometer	PCM (Powertrain Control Module)
SP04351	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04352	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04353	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04354	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04355	EGR System Test	PCM (Powertrain Control Module)
SP04356	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04357	Set Engine RPM	PCM (Powertrain Control Module)
SP04358	Check PCM Odometer	PCM (Powertrain Control Module)
SP04359	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04360	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04361	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04362	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04363	EGR System Test	PCM (Powertrain Control Module)
SP04364	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04365	Set Engine RPM	PCM (Powertrain Control Module)
SP04366	Check PCM Odometer	PCM (Powertrain Control Module)
SP04367	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04368	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04369	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04370	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04371	EGR System Test	PCM (Powertrain Control Module)
SP04372	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04373	Set Engine RPM	PCM (Powertrain Control Module)
SP04374	Check PCM Odometer	PCM (Powertrain Control Module)
SP04375	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04376	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04377	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)

SP04378	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04379	EGR System Test	PCM (Powertrain Control Module)
SP04380	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04381	Set Engine RPM	PCM (Powertrain Control Module)
SP04382	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP04383	Initialize ORC	ORC (Occupant Restraint)
SP04384	Auto Wipers	TIPMCGW (Central Gateway)
SP04385	Auto Door Lock	TIPMCGW (Central Gateway)
SP04386	Auto Door Unlock	TIPMCGW (Central Gateway)
SP04387	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04388	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04389	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04390	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP04391	Turn Off Gain Mode Override	TPM (Tire Pressure Monitor)
SP04392	Program Tire Sensor ID With TPM Tool	TPM (Tire Pressure Monitor)
SP04393	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP04394	Reset WIN Configuration	WCM (Wireless Control)
SP04395	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04396	Reset WIN Configuration	WCM (Wireless Control)
SP04397	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04398	Configure License Plate Size	PTS (Parktronics)
SP04399	System Wiring Test	PTS (Parktronics)
SP04400	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP04401	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP04402	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP04403	Diesel Particulate Filter Replacement	PCM (Powertrain Control Module)
SP04404	Check PCM Odometer	PCM (Powertrain Control Module)
SP04405	Quicklearn (62TE)	PCM (Powertrain Control Module)
SP04406	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04407	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04408	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04409	EGR System Test	PCM (Powertrain Control Module)
SP04410	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04411	Set Engine RPM	PCM (Powertrain Control Module)
SP04412	ABS Bleed Brakes	ABS (Anti Lock Brakes)
SP04413	Initialize ORC	ORC (Occupant Restraint)
SP04414	Auto Wipers	TIPMCGW (Central Gateway)
SP04415	Auto Door Lock	TIPMCGW (Central Gateway)
SP04416	Auto Door Unlock	TIPMCGW (Central Gateway)

SP04417	Reset WIN Configuration	WCM (Wireless Control)
SP04418	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04419	Reset WIN Configuration	WCM (Wireless Control)
SP04420	Program Tire Sensor ID With TPM Tool	WCM (Wireless Control)
SP04421	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04422	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04423	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04424	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04425	TPM Sensor Position Parameter Update	TPMS (Tire Pressure Monitoring System)
SP04426	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP04427	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP04428	Program Left Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04429	Program Left Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04430	Program Right Front Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04431	Program Right Rear Tire Sensor ID	TPMS (Tire Pressure Monitoring System)
SP04432	Turn Off Gain Mode Override	TPMS (Tire Pressure Monitoring System)
SP04433	Program Tire Sensor ID With TPM Tool	TPMS (Tire Pressure Monitoring System)
SP04434	TPM Sensor Rolls Test	TPMS (Tire Pressure Monitoring System)
SP04435	Configure License Plate Size	PTS (Parktronics)
SP04436	System Wiring Test	PTS (Parktronics)
SP04437	Update Measurement Unit	CCN (Instrument Cluster/Cabin Compartment Node)
SP04438	Seatbelt Alert Minder	CCN (Instrument Cluster/Cabin Compartment Node)
SP04439	Self Test	CCN (Instrument Cluster/Cabin Compartment Node)
SP04440	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04441	Injector Codes Read	ECM (Engine Control Module)
SP04442	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04443	Oil Change	ECM (Engine Control Module)
SP04444	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04445	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04446	EGR Valve Test	ECM (Engine Control Module)
SP04447	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04448	Throttle Valve Test	ECM (Engine Control Module)
SP04449	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04450	Oil Change	ECM (Engine Control Module)
SP04451	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04452	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04453	Injector/S Replacement	ECM (Engine Control Module)
SP04454	Waste Gate Valve Command	ECM (Engine Control Module)
SP04455	Motorized Throttle Replacement	ECM (Engine Control Module)

SP04456	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04457	Injector/S Replacement	ECM (Engine Control Module)
SP04458	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP04459	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04460	Oil Change	ECM (Engine Control Module)
SP04461	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04462	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04463	Injector/S Replacement	ECM (Engine Control Module)
SP04464	Waste Gate Valve Command	ECM (Engine Control Module)
SP04465	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04466	Injector Codes Read	ECM (Engine Control Module)
SP04467	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04468	Oil Change	ECM (Engine Control Module)
SP04469	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04470	EGR Valve Test	ECM (Engine Control Module)
SP04471	Throttle Valve Test	ECM (Engine Control Module)
SP04472	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04473	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04474	Injector/S Replacement	ECM (Engine Control Module)
SP04475	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP04476	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04477	Injector Codes Read	ECM (Engine Control Module)
SP04478	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04479	Oil Change	ECM (Engine Control Module)
SP04480	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04481	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04482	EGR Valve Test	ECM (Engine Control Module)
SP04483	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04484	Throttle Valve Test	ECM (Engine Control Module)
SP04485	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04486	Oil Change	ECM (Engine Control Module)
SP04487	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04488	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04489	Injector/S Replacement	ECM (Engine Control Module)
SP04490	Waste Gate Valve Command	ECM (Engine Control Module)
SP04491	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04492	Oil Change	ECM (Engine Control Module)
SP04493	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04494	Oil Temperature Sensor Replacement	ECM (Engine Control Module)

SP04495	Injector/S Replacement	ECM (Engine Control Module)
SP04496	Waste Gate Valve Command	ECM (Engine Control Module)
SP04497	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04498	Oil Change	ECM (Engine Control Module)
SP04499	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04500	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04501	Injector/S Replacement	ECM (Engine Control Module)
SP04502	Waste Gate Valve Command	ECM (Engine Control Module)
SP04503	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04504	Injector Codes Read	ECM (Engine Control Module)
SP04505	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04506	Oil Change	ECM (Engine Control Module)
SP04507	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04508	EGR Valve Test	ECM (Engine Control Module)
SP04509	Throttle Valve Test	ECM (Engine Control Module)
SP04510	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04511	Oil Change	ECM (Engine Control Module)
SP04512	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04513	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04514	Injector/S Replacement	ECM (Engine Control Module)
SP04515	Waste Gate Valve Command	ECM (Engine Control Module)
SP04516	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04517	Injector Codes Read	ECM (Engine Control Module)
SP04518	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04519	Oil Change	ECM (Engine Control Module)
SP04520	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04521	EGR Valve Test	ECM (Engine Control Module)
SP04522	Throttle Valve Test	ECM (Engine Control Module)
SP04523	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04524	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04525	Injector/S Replacement	ECM (Engine Control Module)
SP04526	Motorized Throttle Self Learning Command	ECM (Engine Control Module)
SP04527	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04528	Injector Codes Read	ECM (Engine Control Module)
SP04529	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04530	Oil Change	ECM (Engine Control Module)
SP04531	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04532	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04533	EGR Valve Test	ECM (Engine Control Module)

SP04534	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04535	Throttle Valve Test	ECM (Engine Control Module)
SP04536	Check PCM Odometer	ECM (Engine Control Module)
SP04537	Cooled EGR H-Bridge Valve System Test	ECM (Engine Control Module)
SP04538	Reset Enhanced Automatic Oil Change Indicator	ECM (Engine Control Module)
SP04539	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP04540	EGR System Test	ECM (Engine Control Module)
SP04541	ETC Throttle Follower Test	ECM (Engine Control Module)
SP04542	Set Engine RPM	ECM (Engine Control Module)
SP04543	Air-Conditioning Self-Learning	ECM (Engine Control Module)
SP04544	Brake Switch Learn	ECM (Engine Control Module)
SP04545	Check PCM Odometer	ECM (Engine Control Module)
SP04546	Reset Accelerator Pedal Adaptives	ECM (Engine Control Module)
SP04547	Reset Memory	ECM (Engine Control Module)
SP04548	Throttle Body Self-Learning	ECM (Engine Control Module)
SP04549	Check PCM Odometer	ECM (Engine Control Module)
SP04550	Cooled EGR H-Bridge Valve System Test	ECM (Engine Control Module)
SP04551	Reset Enhanced Automatic Oil Change Indicator	ECM (Engine Control Module)
SP04552	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP04553	EGR System Test	ECM (Engine Control Module)
SP04554	ETC Throttle Follower Test	ECM (Engine Control Module)
SP04555	Set Engine RPM	ECM (Engine Control Module)
SP04556	Check PCM Odometer	ECM (Engine Control Module)
SP04557	Cooled EGR H-Bridge Valve System Test	ECM (Engine Control Module)
SP04558	Reset Enhanced Automatic Oil Change Indicator	ECM (Engine Control Module)
SP04559	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP04560	EGR System Test	ECM (Engine Control Module)
SP04561	ETC Throttle Follower Test	ECM (Engine Control Module)
SP04562	Set Engine RPM	ECM (Engine Control Module)
SP04563	Check PCM Odometer	ECM (Engine Control Module)
SP04564	Cooled EGR H-Bridge Valve System Test	ECM (Engine Control Module)
SP04565	Reset Enhanced Automatic Oil Change Indicator	ECM (Engine Control Module)
SP04566	Reset Learn Flag Wheel Tooth	ECM (Engine Control Module)
SP04567	EGR System Test	ECM (Engine Control Module)
SP04568	ETC Throttle Follower Test	ECM (Engine Control Module)
SP04569	Set Engine RPM	ECM (Engine Control Module)
SP04570	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04571	Injector Codes Read	ECM (Engine Control Module)
SP04572	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP04573	Oil Change	ECM (Engine Control Module)
SP04574	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04575	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04576	EGR Valve Test	ECM (Engine Control Module)
SP04577	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04578	Throttle Valve Test	ECM (Engine Control Module)
SP04579	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04580	Oil Change	ECM (Engine Control Module)
SP04581	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04582	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04583	Injector/S Replacement	ECM (Engine Control Module)
SP04584	Waste Gate Valve Command	ECM (Engine Control Module)
SP04585	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04586	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP04587	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04588	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04589	Oil Change	ECM (Engine Control Module)
SP04590	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04591	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04592	Injector/S Replacement	ECM (Engine Control Module)
SP04593	Waste Gate Valve Command	ECM (Engine Control Module)
SP04594	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04595	Oil Change	ECM (Engine Control Module)
SP04596	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04597	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04598	Injector/S Replacement	ECM (Engine Control Module)
SP04599	Waste Gate Valve Command	ECM (Engine Control Module)
SP04600	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04601	Injector Codes Read	ECM (Engine Control Module)
SP04602	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04603	Oil Change	ECM (Engine Control Module)
SP04604	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04605	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04606	EGR Valve Test	ECM (Engine Control Module)
SP04607	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04608	Throttle Valve Test	ECM (Engine Control Module)
SP04609	Motorized Throttle Learning	ECM (Engine Control Module)
SP04610	Reset Mixture Adaptation Values	ECM (Engine Control Module)
SP04611	Motorized Throttle Replacement	ECM (Engine Control Module)

SP04612	Oil Change	ECM (Engine Control Module)
SP04613	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04614	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04615	Injector/S Replacement	ECM (Engine Control Module)
SP04616	Waste Gate Valve Command	ECM (Engine Control Module)
SP04617	Clutch Pedal Learning	ECM (Engine Control Module)
SP04618	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04619	Oil Change	ECM (Engine Control Module)
SP04620	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04621	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04622	Injector/S Replacement	ECM (Engine Control Module)
SP04623	Waste Gate Valve Command	ECM (Engine Control Module)
SP04624	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04625	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP04626	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04627	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04628	Injector Codes Read	ECM (Engine Control Module)
SP04629	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04630	Oil Change	ECM (Engine Control Module)
SP04631	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04632	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04633	EGR Valve Test	ECM (Engine Control Module)
SP04634	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04635	Throttle Valve Test	ECM (Engine Control Module)
SP04636	Clutch Pedal Learning	ECM (Engine Control Module)
SP04637	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04638	Oil Change	ECM (Engine Control Module)
SP04639	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04640	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04641	Injector/S Replacement	ECM (Engine Control Module)
SP04642	Waste Gate Valve Command	ECM (Engine Control Module)
SP04643	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04644	Injector Codes Read	ECM (Engine Control Module)
SP04645	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04646	Oil Change	ECM (Engine Control Module)
SP04647	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04648	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04649	EGR Valve Test	ECM (Engine Control Module)
SP04650	EGR Low Pressure Valve Test	ECM (Engine Control Module)

SP04651	Throttle Valve Test	ECM (Engine Control Module)
SP04652	ECU Substitution	ABS (Anti Lock Brakes)
SP04653	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP04654	Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP04655	ECU Substitution	ABS (Anti Lock Brakes)
SP04656	Wheel Speed Sensor Type Test	ABS (Anti Lock Brakes)
SP04657	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP04658	Steering Angle Sensor	EPS (Electric Power Steering)
SP04659	Reset Service Information	IPC (Instrument Panel Cluster)
SP04660	Reset Odometer	IPC (Instrument Panel Cluster)
SP04661	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04662	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04663	Reset Service Information	IPC (Instrument Panel Cluster)
SP04664	Reset Odometer	IPC (Instrument Panel Cluster)
SP04665	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04666	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04667	Reset Odometer	IPC (Instrument Panel Cluster)
SP04668	Reset Service Information	IPC (Instrument Panel Cluster)
SP04669	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04670	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04671	Reset Odometer	IPC (Instrument Panel Cluster)
SP04672	Reset Service Information	IPC (Instrument Panel Cluster)
SP04673	Disable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04674	Enable Seat Belts Reminder	IPC (Instrument Panel Cluster)
SP04675	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP04676	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP04677	Check PCM Odometer	PCM (Powertrain Control Module)
SP04678	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04679	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04680	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04681	EGR System Test	PCM (Powertrain Control Module)
SP04682	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04683	Set Engine RPM	PCM (Powertrain Control Module)
SP04684	Air-Conditioning Self-Learning	PCM (Powertrain Control Module)
SP04685	Brake Switch Learn	PCM (Powertrain Control Module)
SP04686	Check PCM Odometer	PCM (Powertrain Control Module)
SP04687	Reset Accelerator Pedal Adaptives	PCM (Powertrain Control Module)
SP04688	Reset Memory	PCM (Powertrain Control Module)
SP04689	Throttle Body Self-Learning	PCM (Powertrain Control Module)

SP04690	Check PCM Odometer	PCM (Powertrain Control Module)
SP04691	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04692	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04693	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04694	EGR System Test	PCM (Powertrain Control Module)
SP04695	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04696	Set Engine RPM	PCM (Powertrain Control Module)
SP04697	Check PCM Odometer	PCM (Powertrain Control Module)
SP04698	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04699	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04700	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04701	EGR System Test	PCM (Powertrain Control Module)
SP04702	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04703	Set Engine RPM	PCM (Powertrain Control Module)
SP04704	Check PCM Odometer	PCM (Powertrain Control Module)
SP04705	Cooled EGR H-Bridge Valve System Test	PCM (Powertrain Control Module)
SP04706	Reset Enhanced Automatic Oil Change Indicator	PCM (Powertrain Control Module)
SP04707	Reset Learn Flag Wheel Tooth	PCM (Powertrain Control Module)
SP04708	EGR System Test	PCM (Powertrain Control Module)
SP04709	ETC Throttle Follower Test	PCM (Powertrain Control Module)
SP04710	Set Engine RPM	PCM (Powertrain Control Module)
SP04711	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04712	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04713	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04714	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04715	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04716	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04717	Injector/S Replacement	ECM (Engine Control Module)
SP04718	Oil Change	ECM (Engine Control Module)
SP04719	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04720	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04721	Oil Change	ECM (Engine Control Module)
SP04722	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04723	Injector Codes Read	ECM (Engine Control Module)
SP04724	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04725	EGR Valve Test	ECM (Engine Control Module)
SP04726	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04727	Throttle Valve Test	ECM (Engine Control Module)
SP04728	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP04729	Phonic Wheel Reset	ECM (Engine Control Module)
SP04730	Reset Phases Front	ECM (Engine Control Module)
SP04731	Motorized Throttle Learning	ECM (Engine Control Module)
SP04732	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04733	Clutch Pedal Learning	ECM (Engine Control Module)
SP04734	Motorized Throttle Learning	ECM (Engine Control Module)
SP04735	Phonic Wheel Reset	ECM (Engine Control Module)
SP04736	Reset Phases Front	ECM (Engine Control Module)
SP04737	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04738	Motorized Throttle Learning	ECM (Engine Control Module)
SP04739	Phonic Wheel Reset	ECM (Engine Control Module)
SP04740	Reset Phases Front	ECM (Engine Control Module)
SP04741	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04742	Oil Change	ECM (Engine Control Module)
SP04743	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04744	Injector Codes Read	ECM (Engine Control Module)
SP04745	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04746	EGR Valve Test	ECM (Engine Control Module)
SP04747	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04748	Throttle Valve Test	ECM (Engine Control Module)
SP04749	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04750	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04751	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04752	Oil Change	ECM (Engine Control Module)
SP04753	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04754	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04755	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04756	Motorized Throttle Learning	ECM (Engine Control Module)
SP04757	Reset Phases Front	ECM (Engine Control Module)
SP04758	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04759	Motorized Throttle Learning	ECM (Engine Control Module)
SP04760	Phonic Wheel Reset	ECM (Engine Control Module)
SP04761	Reset Phases Front	ECM (Engine Control Module)
SP04762	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04763	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04764	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04765	Oil Change	ECM (Engine Control Module)
SP04766	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04767	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP04768	Oil Change	ECM (Engine Control Module)
SP04769	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04770	Injector Codes Read	ECM (Engine Control Module)
SP04771	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04772	EGR Valve Test	ECM (Engine Control Module)
SP04773	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04774	Throttle Valve Test	ECM (Engine Control Module)
SP04775	Speed Limit Setting	ECM (Engine Control Module)
SP04776	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04777	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04778	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04779	Oil Change	ECM (Engine Control Module)
SP04780	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04781	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04782	Motorized Throttle Learning	ECM (Engine Control Module)
SP04783	Phonic Wheel Reset	ECM (Engine Control Module)
SP04784	Reset Phases Front	ECM (Engine Control Module)
SP04785	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04786	Injector Codes Read	ECM (Engine Control Module)
SP04787	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04788	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04789	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04790	Clutch Pedal Learning	ECM (Engine Control Module)
SP04791	Motorized Throttle Learning	ECM (Engine Control Module)
SP04792	Phonic Wheel Reset	ECM (Engine Control Module)
SP04793	Reset Phases Front	ECM (Engine Control Module)
SP04794	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04795	Clutch Pedal Learning	ECM (Engine Control Module)
SP04796	Motorized Throttle Learning	ECM (Engine Control Module)
SP04797	Phonic Wheel Reset	ECM (Engine Control Module)
SP04798	Reset Phases Front	ECM (Engine Control Module)
SP04799	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04800	Overboost Counter Reset	ECM (Engine Control Module)
SP04801	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04802	Oil Change	ECM (Engine Control Module)
SP04803	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04804	Injector Codes Read	ECM (Engine Control Module)
SP04805	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04806	EGR Valve Test	ECM (Engine Control Module)

SP04807	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04808	Throttle Valve Test	ECM (Engine Control Module)
SP04809	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04810	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04811	Overboost Counter Reset	ECM (Engine Control Module)
SP04812	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04813	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04814	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04815	Oil Change	ECM (Engine Control Module)
SP04816	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04817	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04818	Oil Change	ECM (Engine Control Module)
SP04819	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04820	Injector Codes Read	ECM (Engine Control Module)
SP04821	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04822	EGR Valve Test	ECM (Engine Control Module)
SP04823	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04824	Throttle Valve Test	ECM (Engine Control Module)
SP04825	Speed Limit Setting	ECM (Engine Control Module)
SP04826	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04827	Oil Change	ECM (Engine Control Module)
SP04828	Injector Codes Read	ECM (Engine Control Module)
SP04829	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04830	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04831	Speed Limit Setting	ECM (Engine Control Module)
SP04832	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04833	Injector Codes Read	ECM (Engine Control Module)
SP04834	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04835	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04836	Speed Limit Setting	ECM (Engine Control Module)
SP04837	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04838	Motorized Throttle Learning	ECM (Engine Control Module)
SP04839	Phonic Wheel Reset	ECM (Engine Control Module)
SP04840	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04841	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04842	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP04843	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04844	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04845	Phonic Wheel Reset	ECM (Engine Control Module)

SP04846	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04847	Clutch Pedal Learning	ECM (Engine Control Module)
SP04848	Motorized Throttle Learning	ECM (Engine Control Module)
SP04849	Phonic Wheel Reset	ECM (Engine Control Module)
SP04850	Reset Phases Front	ECM (Engine Control Module)
SP04851	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04852	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04853	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04854	Oil Change	ECM (Engine Control Module)
SP04855	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04856	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04857	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04858	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04859	Injector Codes Read	ECM (Engine Control Module)
SP04860	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04861	Oil Change	ECM (Engine Control Module)
SP04862	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04863	EGR Valve Test	ECM (Engine Control Module)
SP04864	Throttle Valve Test	ECM (Engine Control Module)
SP04865	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04866	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04867	Injector/S Replacement	ECM (Engine Control Module)
SP04868	Oil Change	ECM (Engine Control Module)
SP04869	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04870	Oil Temperature Sensor Replacement	ECM (Engine Control Module)
SP04871	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04872	Injector Codes Read	ECM (Engine Control Module)
SP04873	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04874	Oil Change	ECM (Engine Control Module)
SP04875	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04876	EGR Valve Test	ECM (Engine Control Module)
SP04877	Throttle Valve Test	ECM (Engine Control Module)
SP04878	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04879	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04880	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04881	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04882	Clutch Pedal Learning	ECM (Engine Control Module)
SP04883	Motorized Throttle Learning	ECM (Engine Control Module)
SP04884	Phonic Wheel Reset	ECM (Engine Control Module)

SP04885	Reset Phases Front	ECM (Engine Control Module)
SP04886	Phonic Wheel Reset	ECM (Engine Control Module)
SP04887	Vehicle Configuration Reset	ECM (Engine Control Module)
SP04888	Motorized Throttle Replacement	ECM (Engine Control Module)
SP04889	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04890	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04891	Injector Codes Read	ECM (Engine Control Module)
SP04892	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04893	Oil Change	ECM (Engine Control Module)
SP04894	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04895	EGR Valve Test	ECM (Engine Control Module)
SP04896	Throttle Valve Test	ECM (Engine Control Module)
SP04897	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04898	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04899	Injector Codes Read	ECM (Engine Control Module)
SP04900	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04901	Oil Change	ECM (Engine Control Module)
SP04902	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04903	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP04904	Speed Limit Setting	ECM (Engine Control Module)
SP04905	EGR Valve Test	ECM (Engine Control Module)
SP04906	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP04907	Throttle Valve Test	ECM (Engine Control Module)
SP04908	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04909	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04910	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04911	Clutch Pedal Learning	ECM (Engine Control Module)
SP04912	Motorized Throttle Learning	ECM (Engine Control Module)
SP04913	Phonic Wheel Reset	ECM (Engine Control Module)
SP04914	Reset Phases Front	ECM (Engine Control Module)
SP04915	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04916	Clutch Pedal Learning	ECM (Engine Control Module)
SP04917	Motorized Throttle Learning	ECM (Engine Control Module)
SP04918	Phonic Wheel Reset	ECM (Engine Control Module)
SP04919	Reset Phases Front	ECM (Engine Control Module)
SP04920	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04921	Injector Codes Read	ECM (Engine Control Module)
SP04922	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04923	Oil Change	ECM (Engine Control Module)

SP04924	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04925	EGR Valve Test	ECM (Engine Control Module)
SP04926	Throttle Valve Test	ECM (Engine Control Module)
SP04927	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04928	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04929	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04930	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04931	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04932	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04933	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04934	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04935	Self-Learnt Functions Reset	TCM (Transmission Control Module)
SP04936	Static Test	ABS (Anti-Lock Braking System)
SP04937	Static Test	ABS (Anti-Lock Braking System)
SP04938	Longitudinal/Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP04939	Static Test	ABS (Anti-Lock Braking System)
SP04940	TPMS Calibration	ABS (Anti-Lock Braking System)
SP04941	Static Test	ABS (Anti-Lock Braking System)
SP04942	Static Test	ABS (Anti-Lock Braking System)
SP04943	Ecu Replacement	ABS (Anti-Lock Braking System)
SP04944	Electric Park Brake Management	ABS (Anti-Lock Braking System)
SP04945	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP04946	Pressure Sensor Calibration	ABS (Anti-Lock Braking System)
SP04947	Longitudinal/Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP04948	Static Test	ABS (Anti-Lock Braking System)
SP04949	TPMS Calibration	ABS (Anti-Lock Braking System)
SP04950	Steering Angle Calibration	EPS (Electric Power Steering)
SP04951	Steering Angle Calibration	EPS (Electric Power Steering)
SP04952	Steering Angle Calibration	EPS (Electric Power Steering)
SP04953	Steering Angle Calibration	EPS (Electric Power Steering)
SP04954	Steering Angle Calibration	EPS (Electric Power Steering)
SP04955	Reset Odometer	IC (Instrument Cluster)
SP04956	Reset Service Information	IC (Instrument Cluster)
SP04957	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04958	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04959	Reset Odometer	IC (Instrument Cluster)
SP04960	Reset Service Information	IC (Instrument Cluster)
SP04961	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04962	Enable Seat Belts Reminder	IC (Instrument Cluster)

SP04963	Reset Odometer	IC (Instrument Cluster)
SP04964	Reset Service Information	IC (Instrument Cluster)
SP04965	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04966	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04967	Reset Odometer	IC (Instrument Cluster)
SP04968	Reset Service Information	IC (Instrument Cluster)
SP04969	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04970	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04971	Reset Odometer	IC (Instrument Cluster)
SP04972	Reset Service Information	IC (Instrument Cluster)
SP04973	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04974	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04975	Reset Odometer	IC (Instrument Cluster)
SP04976	Reset Service Information	IC (Instrument Cluster)
SP04977	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04978	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04979	Reset Odometer	IC (Instrument Cluster)
SP04980	Reset Service Information	IC (Instrument Cluster)
SP04981	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04982	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04983	Reset Odometer	IC (Instrument Cluster)
SP04984	Reset Service Information	IC (Instrument Cluster)
SP04985	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP04986	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP04987	Motorised Throttle Replacement	ECM (Engine Control Module)
SP04988	Phonic Wheel Replacement	ECM (Engine Control Module)
SP04989	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04990	Oil Change	ECM (Engine Control Module)
SP04991	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04992	Injector Codes Read	ECM (Engine Control Module)
SP04993	Replacement Of EGR Valve	ECM (Engine Control Module)
SP04994	EGR Valve Test	ECM (Engine Control Module)
SP04995	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP04996	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP04997	Oil Change	ECM (Engine Control Module)
SP04998	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP04999	Injector Codes Read	ECM (Engine Control Module)
SP05000	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05001	EGR Valve Test	ECM (Engine Control Module)

SP05002	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05003	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05004	Oil Change	ECM (Engine Control Module)
SP05005	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05006	Injector Codes Read	ECM (Engine Control Module)
SP05007	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05008	EGR Valve Test	ECM (Engine Control Module)
SP05009	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05010	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05011	Oil Change	ECM (Engine Control Module)
SP05012	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05013	Injector Codes Read	ECM (Engine Control Module)
SP05014	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05015	EGR Valve Test	ECM (Engine Control Module)
SP05016	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05017	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05018	Oil Change	ECM (Engine Control Module)
SP05019	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05020	Injector Codes Read	ECM (Engine Control Module)
SP05021	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05022	EGR Valve Test	ECM (Engine Control Module)
SP05023	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05024	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05025	Oil Change	ECM (Engine Control Module)
SP05026	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05027	Injector Codes Read	ECM (Engine Control Module)
SP05028	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05029	EGR Valve Test	ECM (Engine Control Module)
SP05030	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05031	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05032	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP05033	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05034	Oil Change	ECM (Engine Control Module)
SP05035	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05036	Injector Codes Read	ECM (Engine Control Module)
SP05037	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05038	EGR Valve Test	ECM (Engine Control Module)
SP05039	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05040	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP05041	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05042	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05043	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05044	Oil Change	ECM (Engine Control Module)
SP05045	Overboost Counter Reset	ECM (Engine Control Module)
SP05046	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05047	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05048	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05049	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05050	Oil Change	ECM (Engine Control Module)
SP05051	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05052	Injector Codes Read	ECM (Engine Control Module)
SP05053	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05054	EGR Valve Test	ECM (Engine Control Module)
SP05055	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05056	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05057	Oil Change	ECM (Engine Control Module)
SP05058	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05059	Injector Codes Read	ECM (Engine Control Module)
SP05060	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05061	EGR Valve Test	ECM (Engine Control Module)
SP05062	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05063	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05064	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05065	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05066	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05067	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05068	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05069	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05070	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05071	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05072	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05073	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05074	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05075	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05076	Oil Change	ECM (Engine Control Module)
SP05077	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05078	Injector Codes Read	ECM (Engine Control Module)
SP05079	Replacement Of EGR Valve	ECM (Engine Control Module)

SP05080	EGR Valve Test	ECM (Engine Control Module)
SP05081	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05082	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05083	Oil Change	ECM (Engine Control Module)
SP05084	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05085	Injector Codes Read	ECM (Engine Control Module)
SP05086	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05087	EGR Valve Test	ECM (Engine Control Module)
SP05088	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05089	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05090	Overboost Counter Reset	ECM (Engine Control Module)
SP05091	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05092	Oil Change	ECM (Engine Control Module)
SP05093	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05094	Injector Codes Read	ECM (Engine Control Module)
SP05095	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05096	EGR Valve Test	ECM (Engine Control Module)
SP05097	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05098	Throttle Valve Test	ECM (Engine Control Module)
SP05099	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05100	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05101	Oil Change	ECM (Engine Control Module)
SP05102	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05103	Injector Codes Read	ECM (Engine Control Module)
SP05104	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05105	EGR Valve Test	ECM (Engine Control Module)
SP05106	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05107	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05108	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05109	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05110	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05111	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05112	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05113	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05114	Overboost Counter Reset	ECM (Engine Control Module)
SP05115	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05116	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05117	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05118	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP05119	Oil Change	ECM (Engine Control Module)
SP05120	Overboost Counter Reset	ECM (Engine Control Module)
SP05121	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05122	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05123	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05124	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05125	Oil Change	ECM (Engine Control Module)
SP05126	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05127	Injector Codes Read	ECM (Engine Control Module)
SP05128	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05129	EGR Valve Test	ECM (Engine Control Module)
SP05130	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05131	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05132	Oil Change	ECM (Engine Control Module)
SP05133	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05134	Injector Codes Read	ECM (Engine Control Module)
SP05135	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05136	EGR Valve Test	ECM (Engine Control Module)
SP05137	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05138	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05139	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05140	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05141	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05142	Oil Change	ECM (Engine Control Module)
SP05143	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05144	Injector Codes Read	ECM (Engine Control Module)
SP05145	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05146	EGR Valve Test	ECM (Engine Control Module)
SP05147	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05148	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05149	Oil Change	ECM (Engine Control Module)
SP05150	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05151	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05152	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05153	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05154	Oil Change	ECM (Engine Control Module)
SP05155	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05156	Injector Codes Read	ECM (Engine Control Module)
SP05157	Replacement Of EGR Valve	ECM (Engine Control Module)

SP05158	EGR Valve Test	ECM (Engine Control Module)
SP05159	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05160	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05161	Oil Change	ECM (Engine Control Module)
SP05162	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05163	Injector Codes Read	ECM (Engine Control Module)
SP05164	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05165	EGR Valve Test	ECM (Engine Control Module)
SP05166	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05167	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05168	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05169	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05170	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05171	Oil Change	ECM (Engine Control Module)
SP05172	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05173	Injector Codes Read	ECM (Engine Control Module)
SP05174	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05175	EGR Valve Test	ECM (Engine Control Module)
SP05176	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05177	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05178	Motorized Throttle Learning	ECM (Engine Control Module)
SP05179	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05180	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP05181	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05182	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05183	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05184	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05185	Oil Change	ECM (Engine Control Module)
SP05186	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05187	Injector Codes Read	ECM (Engine Control Module)
SP05188	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05189	EGR Valve Test	ECM (Engine Control Module)
SP05190	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05191	Throttle Valve Test	ECM (Engine Control Module)
SP05192	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05193	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05194	Oil Change	ECM (Engine Control Module)
SP05195	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05196	Injector Codes Read	ECM (Engine Control Module)

SP05197	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05198	EGR Valve Test	ECM (Engine Control Module)
SP05199	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05200	Throttle Valve Test	ECM (Engine Control Module)
SP05201	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05202	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05203	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05204	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05205	Oil Change	ECM (Engine Control Module)
SP05206	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05207	Injector Codes Read	ECM (Engine Control Module)
SP05208	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05209	EGR Valve Test	ECM (Engine Control Module)
SP05210	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05211	Throttle Valve Test	ECM (Engine Control Module)
SP05212	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05213	Inlet Valve Calibration	ABS (Anti Lock Brakes)
SP05214	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP05215	Pilot Valve Calibration	ABS (Anti Lock Brakes)
SP05216	Brake Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP05217	Steering Wheel Angle Sensor Offset Calibration	ABS (Anti Lock Brakes)
SP05218	Inlet Valve Calibration	ABS (Anti Lock Brakes)
SP05219	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP05220	Pilot Valve Calibration	ABS (Anti Lock Brakes)
SP05221	Brake Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP05222	Steering Wheel Angle Sensor Offset Calibration	ABS (Anti Lock Brakes)
SP05223	TPMS Calibration	ABS (Anti Lock Brakes)
SP05224	Inlet Valve Calibration	ABS (Anti Lock Brakes)
SP05225	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP05226	Pilot Valve Calibration	ABS (Anti Lock Brakes)
SP05227	Brake Pressure Sensor Calibration	ABS (Anti Lock Brakes)
SP05228	Steering Wheel Angle Sensor Offset Calibration	ABS (Anti Lock Brakes)
SP05229	Self Learning Motor Test	HVAC (Heat, Ventilation And A/C)
SP05230	Self Learning Motor Test	HVAC (Heat, Ventilation And A/C)
SP05231	Steering Angle Calibration	EPS (Electric Power Steering)
SP05232	Steering Angle Calibration	EPS (Electric Power Steering)
SP05233	Reset Odometer	IPC (Instrument Panel)
SP05234	Reset Service Information	IPC (Instrument Panel)
SP05235	Disable Seat Belts Reminder	IPC (Instrument Panel)

SP05236	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05237	Reset Odometer	IPC (Instrument Panel)
SP05238	Reset Service Information	IPC (Instrument Panel)
SP05239	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05240	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05241	Reset Odometer	IPC (Instrument Panel)
SP05242	Reset Service Information	IPC (Instrument Panel)
SP05243	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05244	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05245	Reset Odometer	IPC (Instrument Panel)
SP05246	Reset Service Information	IPC (Instrument Panel)
SP05247	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05248	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05249	Reset Odometer	IPC (Instrument Panel)
SP05250	Reset Service Information	IPC (Instrument Panel)
SP05251	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05252	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05253	Reset Odometer	IPC (Instrument Panel)
SP05254	Reset Service Information	IPC (Instrument Panel)
SP05255	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05256	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05257	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05258	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05259	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05260	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05261	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05262	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05263	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05264	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05265	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05266	Oil Change	ECM (Engine Control Module)
SP05267	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05268	Injector Codes Read	ECM (Engine Control Module)
SP05269	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05270	EGR Valve Test	ECM (Engine Control Module)
SP05271	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05272	Throttle Valve Test	ECM (Engine Control Module)
SP05273	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05274	Motorised Throttle Replacement	ECM (Engine Control Module)

SP05275	Neutral Signal Learning With Engine Off	ECM (Engine Control Module)
SP05276	Phonic Wheel Reset	ECM (Engine Control Module)
SP05277	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05278	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05279	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05280	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05281	Oil Change	ECM (Engine Control Module)
SP05282	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05283	Injector Codes Read	ECM (Engine Control Module)
SP05284	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05285	EGR Valve Test	ECM (Engine Control Module)
SP05286	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05287	Throttle Valve Test	ECM (Engine Control Module)
SP05288	Speed Limit Setting	ECM (Engine Control Module)
SP05289	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05290	Oil Change	ECM (Engine Control Module)
SP05291	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05292	Injector Codes Read	ECM (Engine Control Module)
SP05293	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05294	EGR Valve Test	ECM (Engine Control Module)
SP05295	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05296	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05297	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05298	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05299	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05300	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05301	Phonic Wheel Reset	ECM (Engine Control Module)
SP05302	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05303	Motorized Throttle Learning	ECM (Engine Control Module)
SP05304	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05305	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05306	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05307	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05308	Oil Change	ECM (Engine Control Module)
SP05309	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05310	Injector Codes Read	ECM (Engine Control Module)
SP05311	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05312	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05313	EGR Valve Test	ECM (Engine Control Module)

SP05314	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05315	Throttle Valve Test	ECM (Engine Control Module)
SP05316	Speed Limit Setting	ECM (Engine Control Module)
SP05317	Overboost Counter Reset	ECM (Engine Control Module)
SP05318	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05319	Overboost Counter Reset	ECM (Engine Control Module)
SP05320	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05321	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05322	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05323	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05324	Oil Change	ECM (Engine Control Module)
SP05325	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05326	Injector Codes Read	ECM (Engine Control Module)
SP05327	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05328	EGR Valve Test	ECM (Engine Control Module)
SP05329	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05330	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05331	Oil Change	ECM (Engine Control Module)
SP05332	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05333	Injector Codes Read	ECM (Engine Control Module)
SP05334	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05335	EGR Valve Test	ECM (Engine Control Module)
SP05336	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05337	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05338	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05339	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05340	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05341	Oil Change	ECM (Engine Control Module)
SP05342	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05343	Injector Codes Read	ECM (Engine Control Module)
SP05344	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05345	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05346	EGR Valve Test	ECM (Engine Control Module)
SP05347	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05348	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05349	Throttle Valve Test	ECM (Engine Control Module)
SP05350	Speed Limit Setting	ECM (Engine Control Module)
SP05351	Oil Change	ECM (Engine Control Module)
SP05352	Injector Codes Read	ECM (Engine Control Module)

SP05353	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05354	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05355	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05356	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05357	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05358	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05359	Lambda Sensor And/Or Catalytic Converter And/Or Injector Replacement	ECM (Engine Control Module)
SP05360	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05361	Overboost Counter Reset	ECM (Engine Control Module)
SP05362	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05363	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05364	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05365	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05366	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05367	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05368	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05369	Overboost Counter Reset	ECM (Engine Control Module)
SP05370	Vehicle Configuration Reset	ECM (Engine Control Module)
SP05371	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05372	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05373	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05374	Oil Change	ECM (Engine Control Module)
SP05375	Injector Codes Read	ECM (Engine Control Module)
SP05376	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05377	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05378	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05379	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05380	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05381	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05382	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05383	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05384	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05385	Oil Change	ECM (Engine Control Module)
SP05386	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05387	Injector Codes Read	ECM (Engine Control Module)
SP05388	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05389	EGR Valve Test	ECM (Engine Control Module)
SP05390	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05391	Self-Learnt Functions Reset	ECM (Engine Control Module)

SP05392	Oil Change	ECM (Engine Control Module)
SP05393	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05394	Injector Codes Read	ECM (Engine Control Module)
SP05395	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05396	EGR Valve Test	ECM (Engine Control Module)
SP05397	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05398	Throttle Valve Test	ECM (Engine Control Module)
SP05399	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05400	Motorised Throttle Replacement	ECM (Engine Control Module)
SP05401	Phonic Wheel Replacement	ECM (Engine Control Module)
SP05402	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05403	Clutch Pedal Learning	ECM (Engine Control Module)
SP05404	Motorized Throttle Learning	ECM (Engine Control Module)
SP05405	Phonic Wheel Reset	ECM (Engine Control Module)
SP05406	Reset Phases Front	ECM (Engine Control Module)
SP05407	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05408	Clutch Pedal Learning	ECM (Engine Control Module)
SP05409	Motorized Throttle Learning	ECM (Engine Control Module)
SP05410	Reset Phases Front	ECM (Engine Control Module)
SP05411	Phonic Wheel Reset	ECM (Engine Control Module)
SP05412	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05413	Static Test	ABS (Anti Lock Brakes)
SP05414	Longitudinal G-Sensor Calibration Test	ABS (Anti Lock Brakes)
SP05415	Static Test	ABS (Anti Lock Brakes)
SP05416	Static Test	ABS (Anti Lock Brakes)
SP05417	Longitudinal G-Sensor Calibration Test	ABS (Anti Lock Brakes)
SP05418	Steering Angle Calibration	EPS (Electric Power Steering)
SP05419	Steering Angle Calibration	EPS (Electric Power Steering)
SP05420	Steering Angle Calibration	EPS (Electric Power Steering)
SP05421	Clear TPM Warnings	TPM (Tire Pressure Monitor)
SP05422	Clear TPM Sensor Rolls Test Results	TPM (Tire Pressure Monitor)
SP05423	Update Front And Rear Axle Nominal Tire Pressure Values	TPM (Tire Pressure Monitor)
SP05424	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05425	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05426	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05427	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05428	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP05429	Alarms Deletion	TPM (Tire Pressure Monitor)
SP05430	Antenna Replacement	TPM (Tire Pressure Monitor)

SP05431	Control Unit Activation	TPM (Tire Pressure Monitor)
SP05432	Control Unit Deactivation	TPM (Tire Pressure Monitor)
SP05433	Manual System Configuration	TPM (Tire Pressure Monitor)
SP05434	Automatic Configuration Read	TPM (Tire Pressure Monitor)
SP05435	Wheel Transmitters Learning	TPM (Tire Pressure Monitor)
SP05436	Automatic Configuration Write	TPM (Tire Pressure Monitor)
SP05437	Reset Odometer	IPC (Instrument Panel)
SP05438	Reset Service Information	IPC (Instrument Panel)
SP05439	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05440	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05441	Reset Odometer	IPC (Instrument Panel)
SP05442	Reset Service Information	IPC (Instrument Panel)
SP05443	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05444	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05445	Reset Odometer	IPC (Instrument Panel)
SP05446	Reset Service Information	IPC (Instrument Panel)
SP05447	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05448	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05449	Reset Odometer	IPC (Instrument Panel)
SP05450	Reset Service Information	IPC (Instrument Panel)
SP05451	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05452	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05453	Reset Odometer	IPC (Instrument Panel)
SP05454	Reset Service Information	IPC (Instrument Panel)
SP05455	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05456	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05457	Reset Odometer	IPC (Instrument Panel)
SP05458	Reset Service Information	IPC (Instrument Panel)
SP05459	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05460	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05461	Oil Change	ECM (Engine Control Module)
SP05462	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05463	Oil Change	ECM (Engine Control Module)
SP05464	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05465	Oil Change	ECM (Engine Control Module)
SP05466	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05467	Oil Change	ECM (Engine Control Module)
SP05468	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05469	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)

SP05470	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP05471	Static Test	ABS (Anti Lock Brakes)
SP05472	Steering Angle Sensor Calibration	ABS (Anti Lock Brakes)
SP05473	Longitudinal And Lateral Sensor Decalibration	ABS (Anti Lock Brakes)
SP05474	Longitudinal And Lateral Sensor Calibration	ABS (Anti Lock Brakes)
SP05475	Static Test	ABS (Anti Lock Brakes)
SP05476	Steering Angle Sensor Calibration	ABS (Anti Lock Brakes)
SP05477	Write Front And Rear Nominal Tire Pressure Values	TPM (Tire Pressure Monitor)
SP05478	Clear TPM Warnings	TPM (Tire Pressure Monitor)
SP05479	Clear TPM Sensor Rolls Test Results	TPM (Tire Pressure Monitor)
SP05480	ECU SERIAL NUMBER Management	TPM (Tire Pressure Monitor)
SP05481	TPM Sensor Rolls Test	TPM (Tire Pressure Monitor)
SP05482	Program Left Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05483	Program Left Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05484	Program Right Front Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05485	Program Right Rear Tire Sensor ID	TPM (Tire Pressure Monitor)
SP05486	Reset Odometer	IPC (Instrument Panel)
SP05487	Reset Service Information	IPC (Instrument Panel)
SP05488	Disable Seat Belts Reminder	IPC (Instrument Panel)
SP05489	Enable Seat Belts Reminder	IPC (Instrument Panel)
SP05490	Electronic Throttle Replacement	ECM (Engine Control Module)
SP05491	Oil Change	ECM (Engine Control Module)
SP05492	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP05493	Phonic Wheel Reset	ECM (Engine Control Module)
SP05494	Motorized Throttle Replacement	ECM (Engine Control Module)
SP05495	Oil Change	ECM (Engine Control Module)
SP05496	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05497	Injector Codes Read	ECM (Engine Control Module)
SP05498	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05499	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05500	EGR Valve Test	ECM (Engine Control Module)
SP05501	Throttle Valve Test	ECM (Engine Control Module)
SP05502	Oil Change	ECM (Engine Control Module)
SP05503	Electronic Throttle Replacement	ECM (Engine Control Module)
SP05504	Oil Change	ECM (Engine Control Module)
SP05505	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP05506	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05507	Injector Codes Read	ECM (Engine Control Module)
SP05508	Injector Replacement (Per Bank)	ECM (Engine Control Module)

SP05509	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05510	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP05511	EGR Valve Test	ECM (Engine Control Module)
SP05512	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP05513	Throttle Valve Test	ECM (Engine Control Module)
SP05514	Oil Change	ECM (Engine Control Module)
SP05515	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05516	Injector Codes Read	ECM (Engine Control Module)
SP05517	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05518	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05519	EGR Low Pressure Valve Replacement	ECM (Engine Control Module)
SP05520	EGR Valve Test	ECM (Engine Control Module)
SP05521	EGR Low Pressure Valve Test	ECM (Engine Control Module)
SP05522	Throttle Valve Test	ECM (Engine Control Module)
SP05523	Oil Change	ECM (Engine Control Module)
SP05524	Resetting Distance Travelled With Water In Diesel Warning Lamp ON	ECM (Engine Control Module)
SP05525	Injector Codes Read	ECM (Engine Control Module)
SP05526	Injector Replacement (Per Bank)	ECM (Engine Control Module)
SP05527	Replacement Of EGR Valve	ECM (Engine Control Module)
SP05528	EGR Valve Test	ECM (Engine Control Module)
SP05529	Throttle Valve Test	ECM (Engine Control Module)
SP05530	Oil Change	ECM (Engine Control Module)
SP05531	Electronic Throttle Replacement	ECM (Engine Control Module)
SP05532	Oil Change	ECM (Engine Control Module)
SP05533	Lambda Sensor And/Or Catalytic Convertor And/Or Injector Replacement	ECM (Engine Control Module)
SP05534	Phonic Wheel Reset	ECM (Engine Control Module)
SP05535	Motorized Throttle Replacement	ECM (Engine Control Module)
SP05536	Oil Change	ECM (Engine Control Module)
SP05537	Phonic Wheel Reset	ECM (Engine Control Module)
SP05538	Motorized Throttle Replacement	ECM (Engine Control Module)
SP05539	Oil Change	ECM (Engine Control Module)
SP05540	Phonic Wheel Reset	ECM (Engine Control Module)
SP05541	Motorized Throttle Replacement	ECM (Engine Control Module)
SP05542	Oil Change	ECM (Engine Control Module)
SP05543	Phonic Wheel Reset	ECM (Engine Control Module)
SP05544	Motorized Throttle Replacement	ECM (Engine Control Module)
SP05545	Oil Change	ECM (Engine Control Module)
SP05546	Check Air Presence In ABS Unit	ABS (Anti-Lock Braking System)
SP05547	Brake Pads Substitution (Brembo)	ABS (Anti-Lock Braking System)

SP05548	Brake Pads Substitution EPB (Brembo)	ABS (Anti-Lock Braking System)
SP05549	Brake Pads Substitution (Continental)	ABS (Anti-Lock Braking System)
SP05550	Disks Management Brembo	ABS (Anti-Lock Braking System)
SP05551	Replacement Brake Discs	ABS (Anti-Lock Braking System)
SP05552	Control Unit Reprogramming	ABS (Anti-Lock Braking System)
SP05553	Electric Park Brake Management	ABS (Anti-Lock Braking System)
SP05554	Electric Park Brake Motors Substitution	ABS (Anti-Lock Braking System)
SP05555	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP05556	Calibration Of The Brake Pressure Sensor	ABS (Anti-Lock Braking System)
SP05557	Settling Group Caliper And Brake Pads	ABS (Anti-Lock Braking System)
SP05558	Production State	ABS (Anti-Lock Braking System)
SP05559	Reset Angle Offset	ABS (Anti-Lock Braking System)
SP05560	Bleeding Brake System	ABS (Anti-Lock Braking System)
SP05561	Enable/Disable The Roll Bench Mode	ABS (Anti-Lock Braking System)
SP05562	ABS Unit Bleed	ABS (Anti-Lock Braking System)
SP05563	Calibrate Tandem Master Cylinder Sensor	ABS (Anti-Lock Braking System)
SP05564	Checking Air In The Hydraulic Circuit Between The Control Unit And B	ABS (Anti-Lock Braking System)
SP05565	Enabling Brake Pedal	ABS (Anti-Lock Braking System)
SP05566	Clear TPM Sensor Audit	RFH (Radio Frequency Hub)
SP05567	Clear TPM Sensor Warnings	RFH (Radio Frequency Hub)
SP05568	Transfer Case Reset	DTCM (Drive Train Control Module)
SP05569	Calibration Reset	DTCM (Drive Train Control Module)
SP05570	Upload Configuration	EMCM (Entertainment Multimedia Control Module)
SP05571	Restore Default Configuration	EMCM (Entertainment Multimedia Control Module)
SP05572	Reset Service Information	IC (Instrument Cluster)
SP05573	Reset Service Information	IC (Instrument Cluster)
SP05574	Steering Angle Calibration	EPS (Electric Power Steering)
SP05575	Self Learning - Sensors Calibration	AAMR (Active Aerodynamic Module Right)
SP05576	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP05577	Self Test	TBM (Telematic Box Module)
SP05578	Oil Change Reset	TVM (Torque Vectoring Module)
SP05579	E-Motor Replacement	TVM (Torque Vectoring Module)
SP05580	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05581	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05582	Static Test	ABS (Anti-Lock Braking System)
SP05583	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP05584	Static Test	ABS (Anti-Lock Braking System)
SP05585	Reset Odometer	IC (Instrument Cluster)
SP05586	Reset Service Information	IC (Instrument Cluster)

SP05587	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP05588	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP05589	Reset Odometer	IC (Instrument Cluster)
SP05590	Reset Service Information	IC (Instrument Cluster)
SP05591	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP05592	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP05593	Steering Angle Sensor	EPS (Electric Power Steering)
SP05594	Steering Angle Sensor	EPS (Electric Power Steering)
SP05595	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)
SP05596	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05597	Self-Learnt Functions Reset	ECM (Engine Control Module)
SP05598	Static Test	ABS (Anti-Lock Braking System)
SP05599	Longitudinal And Lateral Sensor Calibration	ABS (Anti-Lock Braking System)
SP05600	Static Test	ABS (Anti-Lock Braking System)
SP05601	Steering Angle Sensor	EPS (Electric Power Steering)
SP05602	Steering Angle Sensor	EPS (Electric Power Steering)
SP05603	Reset Odometer	IC (Instrument Cluster)
SP05604	Reset Service Information	IC (Instrument Cluster)
SP05605	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP05606	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP05607	Reset Odometer	IC (Instrument Cluster)
SP05608	Reset Service Information	IC (Instrument Cluster)
SP05609	Disable Seat Belts Reminder	IC (Instrument Cluster)
SP05610	Enable Seat Belts Reminder	IC (Instrument Cluster)
SP05611	Self Learning Motor Test	HVAC (Heating Ventilation Air-Conditioning And Cooling)